

LANCIA

FUSE BLOCK

Fuse block is fitted to the engine compartment and is provided with a pressure tight cover. Block contains 11 fuses. Circuits protected are as follows:

- ① — 8 Amp. Front Side and Clearance Lights.
- ② — 8 Amp. Windshield Wiper/Washer, Instrument Lights, Compartment Lights.
- ③ — 8 Amp. Right Low Beam.
- ④ — 8 Amp. Left Low Beam.
- ⑤ — 8 Amp. Right Main Beam and Warning Light.
- ⑥ — 8 Amp. Left Main Beam.

- ⑦ — 8 Amp. Stop Lights, Radio.
- ⑧ — 16 Amp. Back-Up Lights, Horn, Accessories.
- ⑨ — 16 Amp. Turn Signals, Engine Accessories, Indicator Lights
- ⑩ — 8 Amp. Plug-in Socket, Interior Lights, Buzzer.
- ⑪ — 25 Amp. Solenoid Switches.

IN-LINE FUSES

In-line fuses protect electric window lifts (25 Amp.), hazard warning signal (16 Amp.), engine coolant motor driven fan (16 Amp.), air conditioning system (25 Amp.) and electric fuel pump (8 Amp.).

LUV

FUSE BLOCK

Fuse block is installed in engine compartment on left inner fender panel near firewall and contains 11 fuses with fuse applications listed on cover. Fuse applications are as follows:

- 1 — 15 Amp. Lighting Switch.
- 2 — 15 Amp. Tail and Instrument Lights.
- 3 — 15 Amp. Turn Signals, Stop Lights, Horn.

- 4 — 15 Amp. Interior Light, A/C.
- 5 — 15 Amp. Heater, Back-Up Lights.
- 6 — 15 Amp. Fuel Pump, Emission Control.
- 7 — 15 Amp. Windshield Wiper/Washer, Cigarette Lighter, Radio.
- 8 — 10 Amp. Right High Beam Headlight.
- 9 — 10 Amp. Left High Beam Headlight.
- 10 — 10 Amp. Right Low Beam Headlight.
- 11 — 10 Amp. Left Low Beam Headlight.

MAZDA

FUSE BLOCK

RX-3, RX-4 & 808 — Fuse block is located under dash on right side of vehicle. Circuits protected and fuse capacities are listed on inside of cover.

B1600 Pickup — Fuse block is located in left rear corner of engine compartment. Circuits protected and fuse capacities are listed on inside of cover.

IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ

FUSE BLOCK

All (Exc. 450 SL & SLC) — Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

450 SL & SLC — Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

MG

FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- 1 & 2 — Parking and Tail Lights.
- 3 — Ignition ON Circuits.
- 4 — Circuits Independent of Ignition Switch.

IN-LINE FUSES

Auxiliary Equipment — A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Emission Control System — A 35 Amp. in-line fuse protects Anti-Dieseling Control Valve Circuit.

Seat Belt Starter Interlock — A 35 Amp. in-line fuse protects circuit within control unit. *NOTE* — It is imperative fuse be replaced with one of equal capacity.

Hazard Warning — A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights. Center console must be removed to replace fuse.

Radio — A separate in-line fuse protects Radio.