

## OPEL

### FUSE BLOCK

Fuse block is located on the right side kick panel. Block contains 13 fuse positions and four spare fuses. Circuits protected are as follows:

- ① — 15 Amp. Headlights Upper Beam.
- ② — 15 Amp. Windshield Wiper/Washer, Radio.
- ③ — 15 Amp. Horn, Turn Signals.
- ④ — 15 Amp. Rear Window Defogger.
- ⑤ — 15 Amp. Cig. Lighter, Interior Light.
- ⑥ — 15 Amp. Air Conditioning.
- ⑦ — 15 Spare Circuit.

- ⑧ — 10 Amp. Headlights Low Beam.
- ⑨ — 10 Amp. Fuel Pump, Emission Control System.
- ⑩ — 10 Amp. Ign. Coil, Volt. Regulator, Instrument Lights.
- ⑪ — 15 Amp. Heater, Back-Up Lights.
- ⑫ — 15 Amp. Lighting Switch.
- ⑬ — 15 Amp. Taillights.

### FUSIBLE LINKS

Fusible links and in-line fuses are utilized throughout the wiring system to prevent short circuits. Main fusible link is located near the battery.

## PEUGEOT

### FUSE BLOCK

Fuse block is located on the left side of vehicle under instrument panel. Circuits protected are, from left to right:

- 1 — 5 Amp. Side Marker, License Plate, Instrument Panel, Heater Control, and Side Master Lights.

- 2 — 10 Amp. Interior, Trunk, and Glove Compartment Lights, Horns, Cigar Lighter, Clock.
- 3 — 10 Amp. Stop and Back-Up Lights, Cooling Fan Clutch, Starter Switch, Safety Belt Relays.
- 4 — 15 Amp. Heater Blower, Windshield Wiper and Washer, Windshield Wiper Relay, Rear Window Defroster.
- 5 — 10 Amp. Accessories, Turn Signal and Hazard Warning Lights, Thermal Voltmeter, Gauges.

## PORSCHE

### FUSE BLOCK

**914 Models** — Fuse block is located under instrument panel to left of steering column. Circuits protected are, from left to right:

- 1 — 8 Amp. Left Headlight High Beam.
- 2 — 8 Amp. Right Headlight High Beam.
- 3 — 8 Amp. Left Headlight Low Beam.
- 4 — 8 Amp. Right Headlight Low Beam.
- 5 — 8 Amp. Left Parking Lights.
- 6 — 8 Amp. Right Parking Lights.
- 7 — 8 Amp. License Plate Lights.
- 8 — 16 Amp. Windshield Wipers, Cigarette Lighter, Turn Signals, Stop and Back-Up Lights.
- 9 — 8 Amp. Horn, Fan.
- 10 — 16 Amp. Fog Lights (Optional).
- 11 — 8 Amp. Emergency Flashers, Interior Light.
- 12 — 16 Amp. Retractable Headlights.

**911, 912E & Carrera Models** — Main fuse block is located inside luggage compartment on left side. Fuse block contains 18 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse

block protects Sportomatic and Fan Relay (5 Amp.), heater fan (25 Amp.) and rear window defogger (25 Amp.). Main fuse block protects the following circuits, from front to rear:

- 1 — 16 Amp. Fog Lights.
- 2 — 5 Amp. License Plate Light.
- 3 — 5 Amp. Right Front and Rear Parking Lights.
- 4 — 5 Amp. Left Front and Rear Parking Lights.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Right Headlight High Beam.
- 8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 — 5 Amp. Right Front Flasher Light.
- 10 — 5 Amp. Left Front Flasher Light.
- 11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.
- 12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.
- 13 — 25 Amp. Windshield Wipers and Washer Pump.
- 14 — 16 Amp. Electric Sunroof, Rear Window Wiper.
- 15 — 16 Amp. Auxiliary Heater, Cigar Lighter, Blower Switch Control Light.
- 16 — 25 Amp. Power Windows.
- 17 — 16 Amp. Emergency Flasher.
- 18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.