

RENAULT

FUSE BLOCK

R-5 — Fuse block is located under the dashboard and to the right of the steering column. Circuits protected are, from left to right:

- ① — 8 Amp. Windshield Wiper.
- ② — 8 Amp. Cig. Lighter, Interior Lights.
- ③ — 5 Amp. Turn Signals.
- ④ — 8 Amp. Heater Motor.
- ⑤ — 15 Amp. Rear Window Defogger, Back-Up Lights.
- ⑥ — 5 Amp. Solenoids.

R-12 — Fuse block is located inside glove compartment and contains six fuses. Circuits protected are, from top to bottom:

- 1 — 5 Amp. Flasher Unit.
- 2 — 8 Amp. Heated Rear Window (Defroster).
- 3 & 4 — 8 Amp. Circuits Independent Of Ignition Switch.

- 5 — 8 Amp. Circuits Dependent On Ignition Switch.
- 6 — 5 Amp. Automatic Transmission.

R-15 & R-17 — Fuse block is located under instrument panel, below speedometer. Circuits protected are, from left to right:

- 1 — 15 Amp. (Yellow) Instrument Panel, Stop and Back-Up Lights, Rear Window Defroster.
- 2 — 5 Amp. (Green) Automatic Transmission.
- 3 — 5 Amp. (Green) Flasher Unit.
- 4 — 8 Amp. (Blue) Heating/Ventilation Fan Motor.
- 5 — 15 Amp. (Yellow) Left Electric Window.
- 6 — 15 Amp. (Yellow) Right Electric Window.
- 7 — 8 Amp. (Blue) Windshield Wipers.
- 8 — Spare.
- 9 — 8 Amp. (Blue) Electronic Injection.
- 10 — 8 Amp. (Blue) Interior and Trunk Light, Cigar Lighter, Clock.

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

SUBARU

FUSE BLOCK

Fuse block is located on the right side of inner fender panel under hood. Fuse protects circuits as indicated, from right to left:

- 1 — 25 Amp. Lighting Switch.
- 2 — 20 Amp. Key Warning Buzzer System, Interior Light, Clock, Hazard Warning Flasher, Stop Lights, Turn Signals, Cigarette Lighter.

- 3 — 30 Amp. Ignition Switch, Horn.
- 4 — 20 Amp. Radio, Heater, Windshield Wiper/Washer.
- 5 — 10 Amp. Front Combination, Tail, Side Marker, License and Instrument Lights.
- 6 — 15 Amp. Back-Up Light, Turn Signal Flasher, Turn Signal Lights, Cooling Fan Motor.
- 7 — 15 Amp. Headlight Low Beam.
- 8 — 15 Amp. Headlight High Beam.

TOYOTA

FUSE BLOCK

Corona — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 5 Amp. Radio, Tape Player.
- 2 — 10 Amp. Cigar Lighter, Door Warning Light.
- 3 — 15 Amp. Light Control Relay, Parking, Side Marker, Instrument Panel, Tail, and License Plate Lights.
- 4 — 15 Amp. Horn, Hazard Warning Lights, Stop Lights, Seat Belt Warning Light and Buzzer.
- 5 — 10 Amp. Interior Lights.
- 6 — 15 Amp. Spare Terminal.
- 7 — 20 Amp. Windshield Wiper and Washer.
- 8 — 5 Amp. Ignition Coil.
- 9 — 15 Amp. Turn Signal Lights, Regulator and Main Relay.
- 10 — 20 Amp. Heater Blower, Gauges, Back-Up Lights, Brake Warning Lights.
- 11 — 15 Amp. Rear Window Defroster.

Corona Mk II — Fuse block is located on left side of drivers compartment under instrument panel.

- ① — 15 Amp. Instrument Panel, Parking, Side Marker, Taillights, License Light.

- ② — 20 Amp. Key Warning Buzzer, Stop Lights, Horns, Hazard Warning Lights.
- ③ — 20 Amp. Cig. Lighter, Interior Lights.
- ④ — 20 Amp. Radio, Stereo Tape Player, Windshield Wiper/Washer.
- ⑤ — 20 Amp. Heater, Air Conditioner Blower, Rear Window Defogger, Gauges.
- ⑥ — 15 Amp. Turn Signals, Back-Up Lights.
- ⑦ — 15 Amp. Ignition Coil, Alternator Regulator.
- ⑧ — 20 Amp. Spare.

Celica — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Knob Illumination, Glove Compartment, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Key Warning Buzzer, Stop Lights, Horns, Hazard Warning Lights.
- 3 — 20 Amp. Cigar Lighter, Clock, Air Conditioner, Interior Lights.
- 4 — 15 Amp. Radio, Stereo Tape Player.
- 5 — 20 Amp. Back-Up Lights, Brake Warning Light, Heater/Air Conditioner Blower, Rear Window Defogger, Gauges.

TOYOTA (Cont.)

FUSE BLOCK (Cont.)

- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil Positive Terminal.
- 8 — 15 Amp. Windshield Wiper and Washer.

Corolla — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Horn, Hazard Warning System, Stop Lights, Seat Belt Warning System, Key Warning Buzzer, Stop Light Bulb Failure Warning Light.
- 2 — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Control Illumination, Tail and License Lights.
- 3 — 15 Amp. Cigarette Lighter, Interior Lights, Clock, Spot Light.
- 4 — 15 Amp. Radio, Stereo Tape Player.
- 5 — 15 Amp. Heater.
- 6 — 15 Amp. Turn Signals, Windshield Wiper/Washer.
- 7 — 15 Amp. Voltage Regulator, Emission Control System, Fuel Pump.
- 8 — 15 Amp. Rear Window Defogger, Back-Up Lights, Tachometer.

Hi-Lux Pickup — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Horns, Stop Lights.
- 3 — 20 Amp. Cigar Lighter, Interior Lights, Coolant Temperature Warning Light, Hazard Warning Lights.

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains three 35 Amp. fuses. Circuits protected are as follows:

- 1 — Fuse fed by white wire protects Windshield Wipers, Fuel and Temperature Indicator, Stop, Reverse and Turn Signal Lights, Seat Belt Warning System.
- 2 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, Instrument Panel, and License Plate Lights.
- 3 — Fuse fed by brown wire protects Dimmer Switch, Key Warning Buzzer, Courtesy Light, Horn, Hazard Warning System.

TR6 — Fuse block is located on left side of engine compartment. Block contains four 35 Amp. fuses, the top one being a spare. Circuits protected are as follows:

- 1 — Fuse fed by white wire protects Stop and Back-Up Lights, Windshield Wipers/Washer, Gauges, Heater, Turn Signal System, Seat Belt Warning System.

FUSE BLOCK

Type 1 (Beetle) — Fuse block is located under instrument panel in approximately the center of vehicle. Fuse block contains 12 fuses. Circuits protected are, from left to right:

- 1 — 8 Amp. License Plate and Right Tail Light.

- 4 — 20 Amp. Radio, Windshield Wipers and Washer.
- 5 — 20 Amp. Heater Blower, Gauges, Back-Up Lights.
- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil, Emission Control System, Fuel Pump
- 8 — 20 Amp. Spare.

Land Cruiser — Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 — 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 — 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 — 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 — 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 — 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 — 15 Amp. Voltage Regulator, Turn Signals and Emission Control System.
- 7 — 15 Amp. Ignition Coil.
- 8 — 20 Amp. Headlights.

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

- 2 — Fuse fed by brown wire protects Horn, Dimmer Switch, Glove Compartment, Key Warning Buzzer, Interior Light, Hazard Warning System, Transmission Tunnel Light, Luggage Compartment Light.
- 3 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, License Plate, and Instrument Panel Lights.

TR7 — Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① — Fuse fed by brown cable protects Air Conditioning System.
- ② — Fuse fed by other brown cable protects Cig. Lighter, Horn, Interlock System, Clock, Hazard Warning System.
- ③ — Fuse fed by white cable protects Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals.
- ④ — Fuse fed by red/green cable protects Interior Lights, Parking and Marker Lights, Taillights.

VOLKSWAGEN

- 2 — 8 Amp. Parking, Side Marker, and Left Tail Lights.
- 3 — 8 Amp. Left Headlight Low Beam.
- 4 — 8 Amp. Right Headlight Low Beam.
- 5 — 8 Amp. Left Headlight High Beam.
- 6 — 8 Amp. Right Headlight High Beam, High Beam Indicator.
- 7 — 8 Amp. Accessories.