

TOYOTA (Cont.)

FUSE BLOCK (Cont.)

- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil Positive Terminal.
- 8 — 15 Amp. Windshield Wiper and Washer.

Corolla — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Horn, Hazard Warning System, Stop Lights, Seat Belt Warning System, Key Warning Buzzer, Stop Light Bulb Failure Warning Light.
- 2 — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Control Illumination, Tail and License Lights.
- 3 — 15 Amp. Cigarette Lighter, Interior Lights, Clock, Spot Light.
- 4 — 15 Amp. Radio, Stereo Tape Player.
- 5 — 15 Amp. Heater.
- 6 — 15 Amp. Turn Signals, Windshield Wiper/Washer.
- 7 — 15 Amp. Voltage Regulator, Emission Control System, Fuel Pump.
- 8 — 15 Amp. Rear Window Defogger, Back-Up Lights, Tachometer.

Hi-Lux Pickup — Fuse block is located on left side of drivers compartment under instrument panel.

- 1 — 15 Amp. Instrument Panel, Parking, Side Marker, Tail, and License Plate Lights.
- 2 — 20 Amp. Horns, Stop Lights.
- 3 — 20 Amp. Cigar Lighter, Interior Lights, Coolant Temperature Warning Light, Hazard Warning Lights.

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains three 35 Amp. fuses. Circuits protected are as follows:

- 1 — Fuse fed by white wire protects Windshield Wipers, Fuel and Temperature Indicator, Stop, Reverse and Turn Signal Lights, Seat Belt Warning System.
- 2 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, Instrument Panel, and License Plate Lights.
- 3 — Fuse fed by brown wire protects Dimmer Switch, Key Warning Buzzer, Courtesy Light, Horn, Hazard Warning System.

TR6 — Fuse block is located on left side of engine compartment. Block contains four 35 Amp. fuses, the top one being a spare. Circuits protected are as follows:

- 1 — Fuse fed by white wire protects Stop and Back-Up Lights, Windshield Wipers/Washer, Gauges, Heater, Turn Signal System, Seat Belt Warning System.

FUSE BLOCK

Type 1 (Beetle) — Fuse block is located under instrument panel in approximately the center of vehicle. Fuse block contains 12 fuses. Circuits protected are, from left to right:

- 1 — 8 Amp. License Plate and Right Tail Light.

- 4 — 20 Amp. Radio, Windshield Wipers and Washer.
- 5 — 20 Amp. Heater Blower, Gauges, Back-Up Lights.
- 6 — 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil, Emission Control System, Fuel Pump
- 8 — 20 Amp. Spare.

Land Cruiser — Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 — 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 — 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 — 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 — 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 — 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 — 15 Amp. Voltage Regulator, Turn Signals and Emission Control System.
- 7 — 15 Amp. Ignition Coil.
- 8 — 20 Amp. Headlights.

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

- 2 — Fuse fed by brown wire protects Horn, Dimmer Switch, Glove Compartment, Key Warning Buzzer, Interior Light, Hazard Warning System, Transmission Tunnel Light, Luggage Compartment Light.
- 3 — Fuse fed by red-green wire protects Parking, Side Marker, Tail, License Plate, and Instrument Panel Lights.

TR7 — Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① — Fuse fed by brown cable protects Air Conditioning System.
- ② — Fuse fed by other brown cable protects Cig. Lighter, Horn, Interlock System, Clock, Hazard Warning System.
- ③ — Fuse fed by white cable protects Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals.
- ④ — Fuse fed by red/green cable protects Interior Lights, Parking and Marker Lights, Taillights.

VOLKSWAGEN

- 2 — 8 Amp. Parking, Side Marker, and Left Tail Lights.
- 3 — 8 Amp. Left Headlight Low Beam.
- 4 — 8 Amp. Right Headlight Low Beam.
- 5 — 8 Amp. Left Headlight High Beam.
- 6 — 8 Amp. Right Headlight High Beam, High Beam Indicator.
- 7 — 8 Amp. Accessories.

VOLKSWAGEN (Cont.)

FUSE BLOCK (Cont.)

- 8 — 8 Amp. Emergency Flasher System.
- 9 — 16 Amp. Seat Belt Interlock System, Interior Light.
- 10 — 16 Amp. Windshield Wipers, Rear Window Defogger.
- 11 — 8 Amp. Safety Belt Interlock System, Horn, Stop Lights, Control Valve (Automatic Stick Shift).
- 12 — 8 Amp. Gauges, Warning Lights, Turn Signals, Control Illumination.

Type 2 (Transporter) — Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Two additional in-line fuses are used as follows: An 8 Amp. fuse, located in engine compartment near ignition coil on manual transmission models, protects the Back-Up Lights. A 16 Amp. fuse, located in engine compartment near blower motor protects the Warm Air Blower. Fuses in block protect the following circuits, left to right:

- 1 — 8 Amp. Left Tail Light, Left Rear Side Marker Light.
- 2 — 8 Amp. Parking Lights, Right Rear Side Marker Lights, License Plate Lights, Right Front Side Marker Lights.
- 3 — 8 Amp. Left Headlight Low Beam.
- 4 — 8 Amp. Right Headlight Low Beam.
- 5 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 6 — 8 Amp. Right Headlight High Beam.
- 7 — 8 Amp. Accessories.
- 8 — 8 Amp. Hazard Warning Flasher, Interior Lights.
- ⑨ — 16 Amp. Warning Buzzer, Heater.
- ⑩ — 8 Amp. Rear Window Defogger, Windshield Wipers.
- ⑪ — 16 Amp. Turn Signals, Back-Up Lights, Gauges, Warning Lights.
- ⑫ — 8 Amp. Horn, Stop Lights.

Rabbit & Scirocco — Fuse block is located under instrument panel and left side of vehicle and contains 15 fuses arranged horizontally. All fuses are 8 Amp. capacity. Circuits protected are, from left to right:

- 1 — 8 Amp. Left Headlight Low Beam.
- 2 — 8 Amp. Right Headlight Low Beam.

- 3 — 8 Amp. Left Headlight High Beam and Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Rear Window Defogger.
- 6 — 8 Amp. Stop Lights, Hazard Warning Flasher.
- 7 — 8 Amp. Interior Lights, Cigarette Lighter.
- 8 — 8 Amp. Turn Signal System.
- 9 — 8 Amp. Back-Up Lights, Horn.
- 10 — 8 Amp. Rear Window Defogger.
- 11 — 8 Amp. Heater, Windshield Wipers, Voltmeter, Glove Box Light.
- 12 — 8 Amp. Luggage Compartment and License Light.
- 13 — 8 Amp. Right Parking, Tail and Side Marker Lights.
- 14 — 8 Amp. Left Parking, Tail and Side Marker Lights.
- 15 — 8 Amp. Spare.

Type 32/33 (Dasher) — Fuse block is located in engine compartment on left inner fender panel. Block contains 17 fuses. Circuits protected are, from left to right:

- 1 — 8 Amp. Left Headlight Low Beam.
- 2 — 8 Amp. Right Headlight Low Beam.
- 3 — 8 Amp. Left Headlight High Beam.
- 4 — 8 Amp. Right Headlight High Beam, High Beam Indicator.
- 5 — 16 Amp. Back-Up Lights, Heater Fan, Radiator Fan, Turn Signals, Rear Window Defogger, Gauges, Warning Lights.
- 6 — 8 Amp. Horn, Brake Warning Light.
- 7 — 8 Amp. Turn Signals and Emergency Flashers.
- 8 — 16 Amp. Rear Window Defogger.
- 9 — 16 Amp. Windshield Wipers, Cigar Lighter.
- 10 — 8 Amp. Stop and Interior Lights, Clock, Safety Belt Warning System.
- 11 — 8 Amp. Windshield Wipers.
- 12 — 8 Amp. Windshield Wipers/Washer.
- 13 — 8 Amp. Right Tail and Right Side Parking Lights.
- 14 — 8 Amp. Left Tail and Left Side Parking Lights.
- 15 — 8 Amp. License Plate Light, Instrument Panel Control Knob Illumination, Glove Compartment Light.
- 16 — 25 Amp. Air Conditioner (Optional).
- 17 — 16 Amp. Accessories.

VOLVO

FUSE BLOCK

240 Series — Fuse block is located in front of front left door pillar. Circuits protected are, from top to bottom:

- ① — 8 Amp. Rear Window Wiper/Washer, Cig. Lighter.
- ② — 16 Amp. Windshield Wiper/Washer, Horn, Blower.
- ③ — 16 Amp. El. Heated Rear Window, Overdrive.
- ④ — 8 Amp. Seat Heater, Back-Up Lights, Seat Belt Indicator.
- ⑤ — 5 Amp. Turn Signals, Instruments, Warning Lights.
- ⑥ — 8 Amp. Hazard Warning Lights, Engine Compartment Light.
- ⑦ — 8 Amp. Fuel Pump, Interior Light, Clock.
- ⑧ — 5 Amp. Stop Lights, Interior Light Rear.
- ⑨ — 5 Amp. Ignition Interlock, Seat Belt Buzzer
- ⑩ — 5 Amp. Instrument Lighting.
- ⑪ — 5 Amp. Taillight Left, Side Markers Left, License Plate Light Left.
- ⑫ — 5 Amp. Taillight Right, Side Markers Right, License Plate Light Right

260 Series — Fuse block is located at the bottom of the dashboard near the left front door. Block contains 12 fuses. Circuits protected are, from top to bottom:

- ① — 8 Amp. Cig. Lighter.
- ② — 16 Amp. Windshield Wiper/Washer, Horn, Blower.
- ③ — 16 Amp. El. Heated Rear Window, Overdrive.
- ④ — 8 Amp. Seat Heater, Back-up Lights, Seat Belt Light, Air Conditioner, Glove Box Light.
- ⑤ — 5 Amp. Turn Signals, Instrument Warning Lights.
- ⑥ — 8 Amp. Hazard Warning Lights, Engine Compartment Light, Trunk Light.
- ⑦ — 8 Amp. Fuel Pump, Clock.
- ⑧ — 5 Amp. Stop Lights, Interior Lights.
- ⑨ — 5 Amp. Ignition Interlock, Seat Belt Buzzer.
- ⑩ — 16 Amp. Power Window Motor
- ⑪ — 5 Amp. Tail and Parking Lights Left, Side Markers Left, License Plate Light Left.
- ⑫ — 5 Amp. Tail and Parking Lights Right, Side Markers Right, License Plate Light Right, Instrument Lights.