

# Switches, Gauges & Instrument Panels 3-55

## CAPRI II (Cont.)

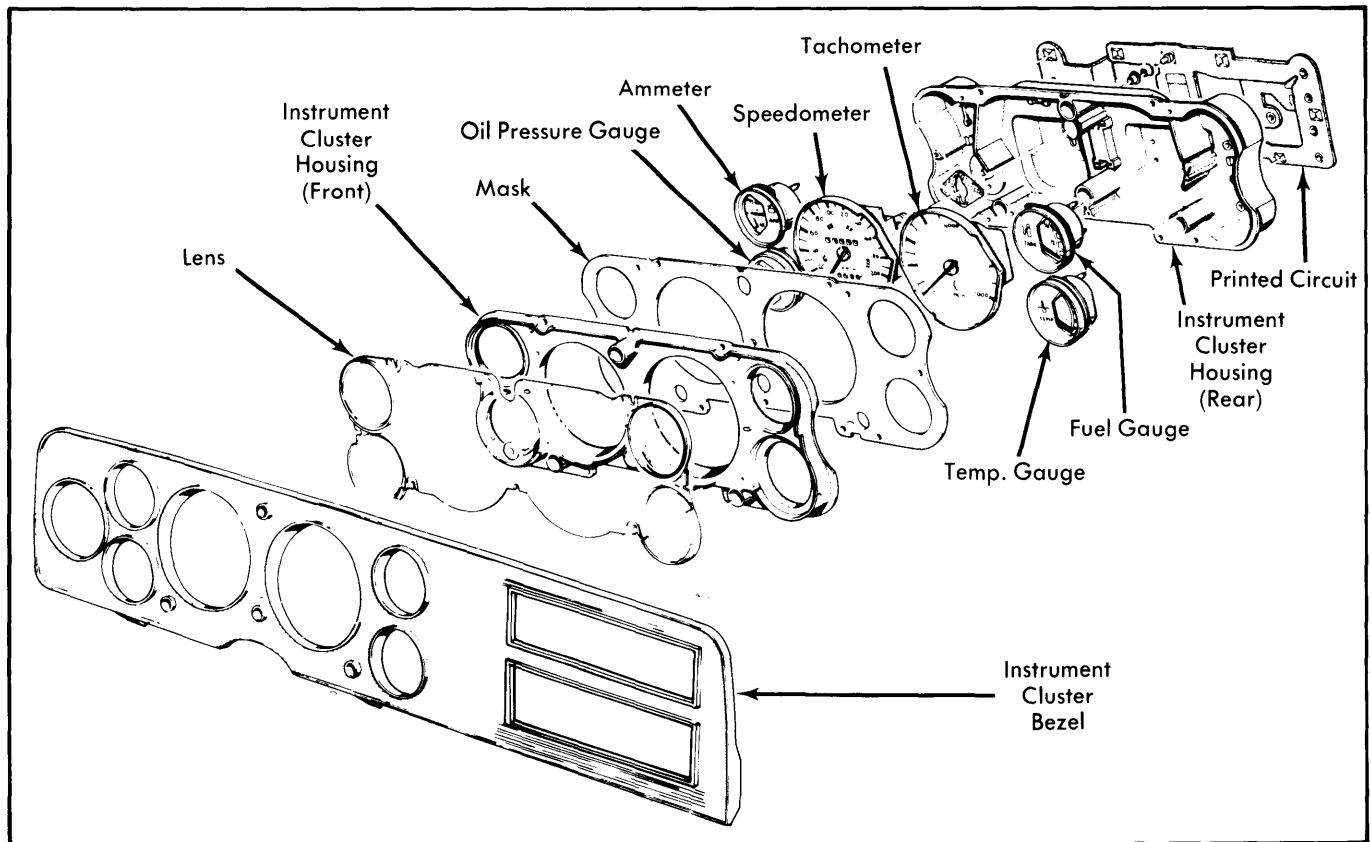


Fig. 2 Capri II Instrument Cluster

## COLT

### INSTRUMENT CLUSTER

To remove instrument cluster, loosen three screws at upper part and two screws at lower part of instrument cluster. Loosen screws holding heater knob, ash tray and cigarette lighter. Remove blind cover on right side of glove box and remove attaching screws on side of cluster. Remove harness cover and disconnect headlight switch.

Pull the instrument cluster panel forward, disconnect multiple connector, radio connections, heater fan and gauge connectors. Remove instrument cluster assembly.

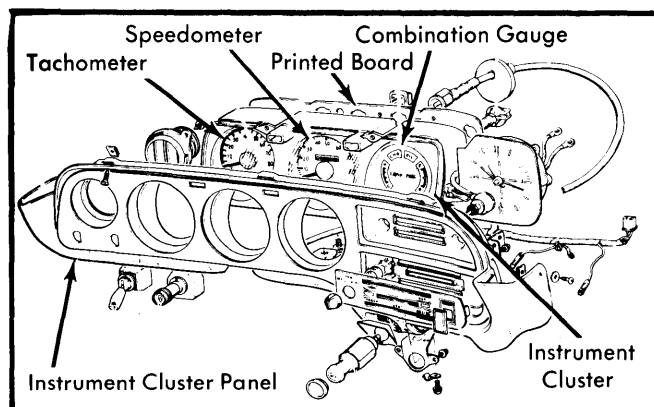


Fig. 3 Colt Instrument Cluster

### SPEEDOMETER & GAUGES

Speedometer and all gauges may be removed after first removing instrument cluster.

### HAZARD WARNING & TURN SIGNAL FLASHER

Located at lower center of instrument panel. A separate flasher is used for hazard warning and turn signals.

### IGNITION SWITCH

To replace ignition switch, remove column cover and pull out switch assembly.

### STOP LIGHT SWITCH

Mechanical type, mounted on brace above brake pedal. Switch also serves as a brake pedal free travel adjustment screw.

### NEUTRAL SAFETY SWITCH

Located in console under gear indicator cover. Switch has a mark for aligning with "N" position. Gap is .059" between switch contact and lever.