

COURIER (Cont.)

- ④ - 15 Amp. Headlights (Low Beam).
- ⑤ - 10 Amp. Tail, License, Front Parking, Front Side Marker, Instrument Lights.
- ⑥ - 10 Amp. Windshield Wipers/Washers.
- ⑦ - 15 Amp. Heater/Defroster Blower Motor, Radio.
- ⑧ - 10 Amp. Front & Rear Turn Signal Lights, Fasten Seat Belt, Oil Pressure & Brake Warning Lights, Fuel Gauge, Temperature Gauge, Back-Up Lights.
- ⑨ - 15 Amp. Engine.

DATSUN

FUSE BLOCK

200SX - Fuse block is located under instrument panel, left of steering column and contains eight fuses. Circuits protected are as follows:

- ① - 10 Amp. Gauges, Flasher, Back-Up Lights.
- ② - 15 Amp. Windshield Wiper/Washer, Heater.
- ③ - 15 Amp. Stop Light, Hazard Warning Lights, Horn.
- ④ - 15 Amp. Cigar Lighter, Clock, Dome Light.
- ⑤ - 15 Amp. Seat Belt Warning.
- ⑥ - 10 Amp. Headlights.
- ⑦ - 10 Amp. Tail, Parking & Interior Lights.
- ⑧ - 20 Amp. Radio, Rear Window Defogger.

B210 - Fuse block is located under instrument panel to left of steering column and contains 8 fuses. Circuits protected are as follows:

- 1 - 10 Amp. Kickdown Switch, Neutral Safety Switch, Turn Signals, Back-Up Lights, Gauges, Warning Lights, Tachometer.
- 2 - 15 Amp. Windshield Wiper/Washer, Heater.
- 3 - 15 Amp. Hazard Warning System, Stop Lights, Horn.
- 4 - 15 Amp. Interior Light, Theft Protection System, Cigarette Lighter.
- 5 - 10 Amp. EGR and Catalyst Warning System.
- 6 - 15 Amp. Headlights.
- 7 - 10 Amp. Parking, Tail, Side Marker and Instrument Lights.
- 8 - 20 Amp. Rear Window Defogger, Radio.

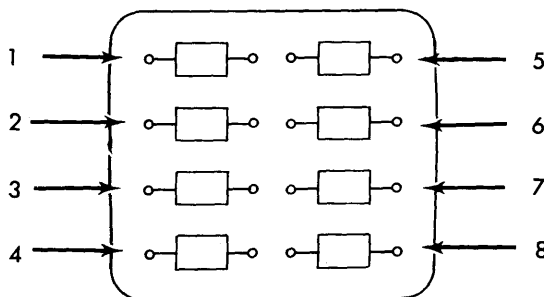


Fig. 3 Datsun B210 Fuse Block

710 - Fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- 1 - 10 Amp. Turn Signals, Back-Up Lights.
- 2 - 5 Amp. Warning Lights, Gauges.
- 3 - 20 Amp. Heater, Radio.
- 4 - 10 Amp. Windshield Wiper/Washer.

- 5 - 10 Amp. Left Headlight.
- 6 - 20 Amp. Side Marker, Tail and License Lights, Instrument and Control Illumination Lights.
- 7 - 10 Amp. Hazard Warning System, Interior Lights, Theft Protection System.
- 8 - 10 Amp. Clock, Cigarette Lighter.
- 9 - 20 Amp. Stop Lights, Horn.
- 10 - 10 Amp. Right Headlight.

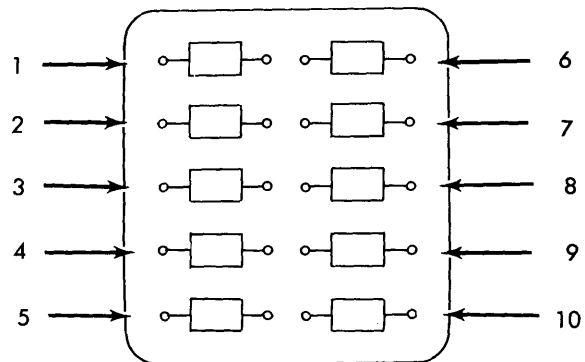


Fig. 4 Datsun 710 Fuse Block

810 - Fuse block is located under the instrument panel on the right kick panel and contains 11 fuses. Circuits protected are as follows:

- ① - 20 Amp. Rear Window Defogger.
- ② - 10 Amp. Flasher.
- ③ - 5 Amp. Solenoid
- ④ - 20 Amp. Air Conditioning
- ⑤ - 10 Amp. Windshield Wiper/Washer
- ⑥ - 10 Amp. Headlights (Left).
- ⑦ - 10 Amp. Side Marker & Tail Lights
- ⑧ - 10 Amp. Dome Light.
- ⑨ - 10 Amp. Common
- ⑩ - 20 Amp. Stop Lights, Horn.
- ⑪ - 10 Amp. Headlights (Right).

280Z - Fuse block is located on right side kick panel and contains 14 fuses. Circuits protected are as follows:

- ① - 10 Amp. Right Headlight.
- ② - 10 Amp. Left Headlight.
- ③ - 10 Amp. Flashers.
- ④ - 10 Amp. Gauges.
- ⑤ - 20 Amp. Air Conditioner.
- ⑥ - 15 Amp. Windshield Wiper/Washer.

DATSUN (Cont.)

- ⑦ — 10 Amp. Radio.
- ⑧ — 15 Amp. Parking & Tail Lights.
- ⑨ — 10 Amp. Interior Lights.
- ⑩ — 10 Amp. Cigar Lighter, Clock, Map Light.
- ⑪ — 15 Amp. Horn, Stop Lights.
- ⑫ — 10 Amp. Hazard Warning Lights.
- ⑬ — 20 Amp. Rear Window Defogger.
- ⑭ — 1 Amp. Catalyst Warning Light.

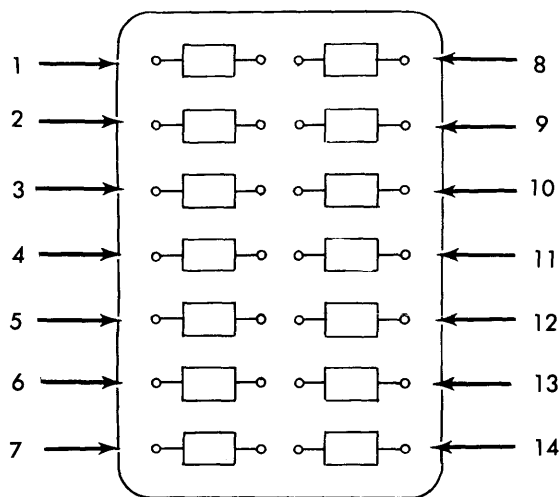


Fig. 5 Datsun 280Z Fuse Block

F10 — Fuse block is located under instrument panel to left of steering column and contains eight fuses. Circuits protected are as follows:

- ① — 15 Amp. Headlights.
- ② — 10 Amp. Taillights.
- ③ — 15 Amp. Horn, Stop Lights, Hazard Warning Lights.
- ④ — 15 Amp. Fan Motor.

- ⑤ — 20 Amp. Rear Window Defogger, Cig. Lighter, Clock.
- ⑥ — 15 Amp. Windshield Wiper/Washer, Heater, Radio.
- ⑦ — 10 Amp. Cooling Fan, Gauges, Turn Signals.
- ⑧ — 10 Amp. Auto. Choke, EGR Solenoid, Throttle Opener.

Pickup — Fuse block is located under instrument panel to the left of steering column and contains six fuses. Circuits protected are as follows:

- 1 — 10 Amp. Heater, Emission Control.
- 2 — 15 Amp. Windshield Wiper/Washer, Heater Blower.
- 3 — 10 Amp. Back-Up, Warning and Turn Signal Lights, Gauges, Kickdown Switch, Voltage Regulator.
- 4 — 10 Amp. Side Marker, Tail, License, Engine Compartment, Instrument and Control Illumination Lights.
- 5 — 15 Amp. Headlights.
- 6 — 15 Amp. Hazard Warning System, Horn, Stop Lights.

Pickup — In addition, pickup models have fusible links protecting the interior lights, cigarette lighter and clock.

FUSIBLE LINK

All Models — Fusible link is located in wire between battery and alternator near the battery. Its purpose is to protect the alternator and related circuits.

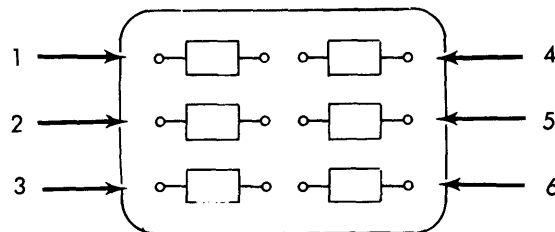


Fig. 6 Datsun Pickup Fuse Block

FIAT

FUSE BLOCK

124 Sport Spider — Fuse block is located under instrument panel to left of steering column. Block contains 10 fuses. Circuits protected by the fuses are as follows:

- 1 — 25 Amp. Electropneumatic Horns, Engine Fan Motor.
- 2 — 8 Amp. Windshield Wiper/Washer, Heater Fan Motor.
- 3 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 4 — 8 Amp. Right Headlight High Beam.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Left Front Parking Light, Parking Light and Tail Light Indicator, Right Rear Tail Light, Left Front and Right Rear Side Marker Lights, Left License Plate Light, Cigar Lighter Illumination, Instrument Cluster Lights, Hazard Warning Signal Switch Light, Control Knob Illumination.

- 8 — 8 Amp. Right Front Parking Light, Left Rear Tail Light, Right Front and Left Rear Side Marker Lights, Right License Light.
- 9 — 8 Amp. Turn Signal and Stop Lights, Gauges, Warning Lights, Seat Belt Buzzer Relay, Emission Control System.
- 10 — 8 Amp. Voltage Regulator, Alternator Field Winding.

NOTE — One 8 Amp. fuse and one 16 Amp. fuse are in separate holders near the fuse block. The 8 Amp. fuse protects Fuel Pump and Relay. The 16 Amp. fuse protects Cigar Lighter, Clock, Courtesy Light, Hazard Warning Light and Remove Key and Fasten Seat Belt Buzzer.

128 (Except 3P Coupe) — Fuse block is located under instrument panel to left of steering column and contains eight fuses. Two additional fuses, in separate holders, protect Fuel Pump and Relay (8 Amp.) and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits: