

HONDA (Cont.)

Accord — Fuse block is located under the dashboard on drivers side. Block contains 10 fuses. Circuits protected are, from top to bottom:

- ① — 10 Amp. Windshield Wiper/Washer.
- ② — 10 Amp. Voltage Regulator, Fuel Pump.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Headlight High Beam.
- ⑤ — 15 Amp. Headlight Low Beam.
- ⑥ — 15 Amp. Taillights, Instrument Lights

- ⑦ — 10 Amp. Cig. Lighter, Clock Interior Lights.
- ⑧ — 15 Amp. Hazard Warning Lights, Horn, Stop Lights.
- ⑨ — 15 Amp. Heater.
- ⑩ — 15 Amp. Radio, Rear Window Defroster.

IN-LINE FUSES

One large 55 Amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.

JAGUAR

FUSE BLOCK

XJ6 Models — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- 1 — 20 Amp. Fog Lights.
- 2 — 15 Amp. Hazard Warning System.
- 3 — 35 Amp. Map and Interior Lights, Cigarette Lighter, Clock, Electric Aerial.
- 4 — 15 Amp. Back-Up Lights, Gauges.
- 5 — 15 Amp. Turn Signals.

- 6 — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer.
- 7 — 15 Amp. Instrument Lights.
- 8 — 15 Amp. Left Side Marker and Tail Lights.
- 9 — 15 Amp. Right Side Marker and Tail Lights.
- 10 — 50 Amp. A/C and Heater Relay.
- 11 — 50 Amp. A/C Control System and Compressor Clutch, Windshield Wipers.
- 12 — 35 Amp. Rear Window Defogger.

IN-LINE FUSES

Head Lights — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

Horn Relay — Circuit is protected by a 17 Amp. in-line fuse.

LANCIA

FUSE BLOCK

Fuse block is fitted to the engine compartment and is provided with a pressure tight cover. Block contains 11 fuses. Circuits protected are as follows:

- ① — 8 Amp. Right Front & Left Rear Side Marker Lights, Side Lights Tell-Tale, Instrument Lights, License Plate Light (Right).
- ② — 8 Amp. Engine Compartment Light, Left Front & Right Rear Side Marker Lights, License Plate Light (Left), Cigar Lighter, Wipe-Speed Change-Over Switch, Hazard Switch.
- ③ — 8 Amp. Left Low Beam.
- ④ — 8 Amp. Right Low Beam.
- ⑤ — 8 Amp. Left High Beam.
- ⑥ — 8 Amp. Right High Beam, High Beam Indicator Light.
- ⑦ — 8 Amp. Stop Lights.

- ⑧ — 16 Amp. Back-Up Light, Windshield Wiper/Washer, Air Conditioner Booster Fan, Coolant Radiator Motor Driven Fan, Emission Control Switches.
- ⑨ — 16 Amp. Turn Indicator, Radio, Electric Antenna Motor, Electric Window Lift, Rear Window Defogger, Cigar Lighter, Air Horns Electro-Compressor, Indicator Lights Instrument Lights.
- ⑩ — 8 Amp. Front & Rear Dome Lights, Clock, Plug-In Socket, Buzzer.
- ⑪ — 25 Amp. Air Horns, Electro-Compressor, Cigar Lighter, Rear Window Defogger, Air Conditioner Booster Fan Motor.

IN-LINE FUSES

In-line fuses protect electric window lifts (25 Amp.), hazard warning signal (16 Amp.), engine coolant motor driven fan (16 Amp.), air conditioner system (25 Amp.) and electric fuel pump (16 Amp.).

LUV

FUSE BLOCK

Fuse block is installed in engine compartment on left inner fender panel near firewall and contains 11 fuses with fuse applications listed on cover. Fuse applications are as follows:

- 1 — 15 Amp. Lighting Switch.
- 2 — 15 Amp. Tail and Instrument Lights.
- 3 — 15 Amp. Turn Signals, Stop Lights, Horn.

- 4 — 15 Amp. Interior Light, A/C.
- 5 — 15 Amp. Heater, Back-Up Lights.
- 6 — 15 Amp. Fuel Pump, Emission Control.
- 7 — 15 Amp. Windshield Wiper/Washer, Cigarette Lighter, Radio.
- 8 — 10 Amp. Right High Beam Headlight.
- 9 — 10 Amp. Left High Beam Headlight.
- 10 — 10 Amp. Right Low Beam Headlight.
- 11 — 10 Amp. Left Low Beam Headlight.