

MAZDA

Cosmo, RX-3SP, RX-4 & 808 — Fuse block is located just below the glove box and contains 11 fuses. Circuits protected are as follows:

- ① — 20 Amps. Instrument Panel, Parking, Side Marker, Tail & License Plate lights.
- ② — 10 Amp. Right Headlight (Low Beam).
- ③ — 10 Amp. Left Headlight (Low Beam).
- ④ — 10 Amp. Right Headlight (High Beam), High Beam Indicator Light.
- ⑤ — 10 Amp. Left Headlight (High Beam).
- ⑥ — 15 Amp. Clock, Cigar Lighter, Glove Box Light, Trunk Compartment, Step & Interior Lights, Ignition Reminder Switch.
- ⑦ — 20 Amp. Horn, Stop Lights, Hazard Warning Flasher.
- ⑧ — 20 Amp. Air Conditioner, Rear Window Defogger.
- ⑨ — 10 Amp. Indicator Lights, Gauges, Turn Signal Lights, Tachometer.
- ⑩ — 20 Amp. Heat Hazard Warning Light, Ignition Coil, Fuel Pump, Choke Switch, Ignition Relay, Emission Control Devices.
- ⑪ — 15 Amp. Regulator, Kick Down Solenoid Switch, EGR Warning Light.

GLC — The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① — 15 Amp. Horn, Stop & Turn Signal Lights.
- ② — 15 Amp. Interior Light, Cigar Lighter, Clock, Key Reminder Buzzer.
- ③ — 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Kights.

- ④ — Not Used.
- ⑤ — Not Used.
- ⑥ — 10 Amp. Rear Window Defogger.
- ⑦ — 10 Amp. Windshield Wiper/Washer, Rear Window Wiper/Washer
- ⑧ — 15 Amp. Heater, Remote Control Hatchback Release.
- ⑨ — 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Indicator.
- ⑩ — 10 Amp. Hazard Warning Lights, Choke Switch, Regulator

Pickup — Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① — 15 Amp. Ignition Coil, Fuel Pump, Ignition Relay, Kickdown Solenoid Switch.
- ② — 10 Amp. Regulator, Kickdown Relay.
- ③ — 10 Amp. Warning Lights, Gauges, Back-Up & Turn Signal Lights, Tachometer.
- ④ — 15 Amp. Horn, Stop Lights, Hazard Warning Switch.
- ⑤ — 10 Amp. Interior Light, Cigar Lighter.
- ⑥ — 15 Amp. Instrument Panel, Parking, Side Marker Tail & License Plate Lights.

IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ

FUSE BLOCK

All (Exc. 450 SL & SLC) — Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

450 SL & SLC — Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

MG

FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ② — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ③ — 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights.
- ④ — 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter.

IN-LINE FUSES

Auxiliary Equipment — A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Fan Thermostat — A 35 Amp. in-line fuse protects the fan thermostat circuit.

Hazard Warning — A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

Radio — A separate additional in-line fuse protects Radio.