

## OPEL

## FUSE BLOCK

Fuse block is located on the right side kick panel. Block contains 13 fuse positions and four spare fuses. Circuits protected are as follows:

- ① — 15 Amp. Headlights Upper Beam.
- ② — 15 Amp. Windshield Wiper/Washer, Radio.
- ③ — 15 Amp. Horn, Turn Signals.
- ④ — 15 Amp. Rear Window Defogger.
- ⑤ — 15 Amp. Cig. Lighter, Interior Light.
- ⑥ — 15 Amp. Air Conditioning.
- ⑦ — 15 Spare Circuit.

- ⑧ — 10 Amp. Headlights Low Beam.
- ⑨ — 10 Amp. Fuel Pump, Emission Control System.
- ⑩ — 10 Amp. Ign. Coil, Volt. Regulator, Instrument Lights.
- ⑪ — 15 Amp. Heater, Back-Up Lights.
- ⑫ — 15 Amp. Lighting Switch.
- ⑬ — 15 Amp. Taillights.

## FUSIBLE LINKS

Fusible links and in-line fuses are utilized throughout the wiring system to prevent short circuits. Main fusible link is located near the battery.

## PEUGEOT

## FUSE BLOCK

**604** — Fuse block is located on the left side of vehicle behind door and under instrument panel. Fuse block contains nine fuses. Circuits protected are, from left to right:

**NOTE** — Fuse amperage is identified by color code only. Green is 10 Amp. and Brown is 16 Amp.

- ① — Cigar Lighter, Horns, Dome Lights, Clock, Emergency Flasher, Key Warning Buzzer.
- ② — Stop & Back-Up Lights, Neutral Safety Switch, Gauges, Warning Lights, Seat Belt & Turn Signal Indicators.

- ③ — Rear Window Defogger, Map Reading Light, Accessories, Dash Indicators.
- ④ — Air Conditioner Blower, Sun Roof, Catalyst Warning Light, Windshield Wiper/Washer, EGR Warning Light, Blower Motor Thermocontact.
- ⑤ — Front & Rear Parking Lights, Side Marker Lights, Instrument Lights, High Beam & Parking Light Indicator.
- ⑥ — Blower Motor & Air Conditioner Compressor Relays.
- ⑦ — Front & Rear Windows (Right).
- ⑧ — Front & Rear Windows (Left).
- ⑨ — Rear Window Lockout.

## PORSCHE

## FUSE BLOCK

**924 Models** — Fuse block is located under instrument panel to left of steering column and contains 15 fuses. Circuits protected are, from left to right:

- ① — 8 Amp. Left Headlight (Low Beam)
- ② — 8 Amp. Right Headlight (Low Beam).
- ③ — 8 Amp. Left Headlight (High Beam).
- ④ — 8 Amp. Right Headlight (High Beam).
- ⑤ — 16 Amp. Additional Headlights.
- ⑥ — 8 Amp. Interior Lights, Retractable Headlights.
- ⑦ — 8 Amp. Emergency Flashers.
- ⑧ — 8 Amp. Turn Signal Indicator, Brake Warning Light.
- ⑨ — 8 Amp. Horn, Back-Up Lights, Rear Window Wiper.
- ⑩ — 8 Amp. Fresh Air Blower.
- ⑪ — 8 Amp. Windshield Wipers.
- ⑫ — 8 Amp. License Plate & Luggage Compartment Lights.
- ⑬ — 8 Amp. Side Marker Light (Right)
- ⑭ — 8 Amp. Side Marker Light (Left).
- ⑮ — 16 Amp. Fan, Fog Lights.

**911S & Carrera Models** — Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Sportomatic and Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window Defogger (25 Amp.). Main fuse block protects the following circuits, from front to rear:

- 1 — 16 Amp. Fog Lights.
- 2 — 5 Amp. License Plate & Control Lights, Fog Light Relay.
- 3 — 5 Amp. Right Front and Rear Parking Lights.
- 4 — 5 Amp. Left Front and Rear Parking Lights.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Right Headlight High Beam.
- 8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 — 5 Amp. Right Front Flasher Light.
- 10 — 5 Amp. Left Front Flasher Light.
- 11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.
- 12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.
- 13 — 25 Amp. Windshield Wiper/Washer, Air Conditioner.
- 14 — 25 Amp. Electric Sunroof, Rear Window Wiper.
- 15 — 16 Amp. Cigar Lighter, Blower Switch Control Light.
- 16 — 25 Amp. Power Windows.
- 17 — 16 Amp. Emergency Flasher.
- 18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.
- 19 — 16 Amp. Headlight Washer.
- 20 — 25 Amp. Blower for Air Conditioner.
- 21 — 25 Amp. Fuel Pump.