

RENAULT

FUSE BLOCK

R-5 — Fuse block is located under the dashboard and to the right of the steering column. Circuits protected are, from left to right:

- ① — 8 Amp. Windshield Wiper.
- ② — 8 Amp. Cig. Lighter, Interior Lights.
- ③ — 5 Amp. Turn Signals.
- ④ — 8 Amp. Heater Motor.
- ⑤ — 15 Amp. Rear Window Defogger, Back-Up Lights.
- ⑥ — 5 Amp. Solenoids.

R-12 — Fuse block is located inside glove compartment and contains six fuses. Circuits protected are, from top to bottom:

- 1 — 5 Amp. Flasher Unit.
- 2 — 8 Amp. Heated Rear Window (Defroster).
- 3 & 4 — 8 Amp. Circuits Independent Of Ignition Switch.

- 5 — 8 Amp. Circuits Dependent On Ignition Switch.
- 6 — 5 Amp. Automatic Transmission.

R-17 — Fuse block is located under instrument panel, below speedometer and contains 10 fuses. Circuits protected are, left to right:

- 1 — 15 Amp. (Yellow) Instrument Panel, Stop and Back-Up Lights, Rear Window Defroster.
- 2 — 5 Amp. (Green) Automatic Transmission.
- 3 — 5 Amp. (Green) Flasher Unit.
- 4 — 8 Amp. (Blue) Heating/Ventilation Fan Motor.
- 5 — 15 Amp. (Yellow) Left Electric Window.
- 6 — 15 Amp. (Yellow) Right Electric Window.
- 7 — 8 Amp. (Blue) Windshield Wipers.
- 8 — Spare.
- 9 — 8 Amp. (Blue) Electronic Injection.
- 10 — 8 Amp. (Blue) Interior and Trunk Light, Cigar Lighter, Clock.

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

SUBARU

FUSE BLOCK

Fuse block is located on the right side of inner fender panel under hood and contains eight fuses. Fuses protect circuits as indicated, from right to left:

- 1 — 25 Amp. Lighting Switch.
- 2 — 20 Amp. Key Warning Buzzer System, Interior Light, Clock, Hazard Warning Flasher, Stop Lights, Turn Signals, Cigarette Lighter.

- 3 — 30 Amp. Ignition Switch, Horn.
- 4 — 20 Amp. Radio, Heater, Windshield Wiper/Washer.
- 5 — 10 Amp. Front Combination, Tail, Side Marker, License and Instrument Lights.

- 6 — 15 Amp. Back-Up Light, Turn Signal Flasher, Turn Signal Lights, Cooling Fan Motor.
- 7 — 15 Amp. Headlight Low Beam.
- 8 — 15 Amp. Headlight High Beam.

TOYOTA

FUSE BLOCK

Corona — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- 1 — 5 Amp. Radio, Tape Player.
- 2 — 10 Amp. Cigar Lighter, Door Warning Light.
- 3 — 15 Amp. Light Control Relay, Parking, Side Marker, Instrument Panel, Tail, and License Plate Lights.
- 4 — 15 Amp. Horn, Hazard Warning Lights, Stop Lights, Seat Belt Warning Light and Buzzer.
- 5 — 10 Amp. Interior Lights.
- 6 — 15 Amp. Spare Terminal.

- 7 — 15 Amp. Windshield Wiper/Washer.
- 8 — 10 Amp. Ignition Coil.
- 9 — 15 Amp. Turn Signal Lights, Regulator, Main Relay.
- 10 — 15 Amp. Heater Blower, Gauges, Back-up Lights, Brake Warning Lights.
- 11 — 15 Amp. Rear Window Defogger.

Celica — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Front Parking Lights, Front & Rear Side Marker Lights, Tail, License, Glove Box & Instrument Lights.

Fuses & Circuit Breakers

TOYOTA (Cont.)

- ② - 20 Amp. Stop Lights, Hazard Warning Lights, Horn, Key Warning Buzzer.
- ③ - 15 Amp. Cigar Lighter, Clock; Interior, Door Courtesy & Luggage Compartment Lights
- ④ - 20 Amp. Heater/Air Conditioner Blower Motor, Seat Belt Warning Light & Buzzer, Back-Up Lights, Meter & Gauges.
- ⑤ - 15 Amp. Rear Window Defogger.
- ⑥ - 15 Amp. Turn Signal Lights, Windshield Wiper/Washer
- ⑦ - 15 Amp. Main Relay, Regulator IG Terminal.
- ⑧ - 15 Amp. Radio & Tape Player.

Corolla - Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- 1 - 15 Amp. Horn, Hazard Warning System, Stop Lights, Seat Belt Warning System, Key Warning Buzzer, Stop Light Bulb Failure Warning Light.
- 2 - 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Control Illumination, Tail and License Lights.
- 3 - 15 Amp. Cigarette Lighter, Interior Lights, Clock, Spot Light.
- 4 - 15 Amp. Radio, Stereo Tape Player.
- 5 - 15 Amp. Heater.
- 6 - 15 Amp. Turn Signals, Windshield Wiper/Washer.
- 7 - 15 Amp. Voltage Regulator, Emission Control System, Fuel Pump.
- 8 - 15 Amp. Rear Window Defogger, Back-Up Lights, Tachometer.

Pickup - Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- 1 - 15 Amp. Instrument Panel, Parking, Side Marker, Tail, and License Plate Lights.
- 2 - 20 Amp. Horns, Stop Lights.
- 3 - 20 Amp. Cigar Lighter, Interior Lights, Coolant Temperature Warning Light, Hazard Warning Lights.
- 4 - 20 Amp. Radio, Windshield Wipers and Washer.
- 5 - 20 Amp. Heater Blower, Gauges, Back-Up Lights.
- 6 - 15 Amp. Alternator Regulator, Turn Signal Lights.
- 7 - 15 Amp. Ignition Coil, Emission Control System, Fuel Pump
- 8 - 20 Amp. Spare.

Land Cruiser - Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 - 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 - 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 - 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 - 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 - 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 - 15 Amp. Turn Signal Lights.
- 7 - 15 Amp. Ignition Coil, Emission Control System, Voltage Regulator, Fuel Cut Solenoid.
- 8 - 20 Amp. Headlights.

FUSIBLE LINKS

All Models - A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

Spitfire - Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains three 35 Amp. fuses. Circuits protected are as follows:

- 1 - Fuse fed by white wire protects Windshield Wipers, Fuel and Temperature Indicator, Stop, Reverse and Turn Signal Lights, Seat Belt Warning System.
- 2 - Fuse fed by red-green wire protects Parking, Side Marker, Tail, Instrument Panel, and License Plate Lights.
- 3 - Fuse fed by brown wire protects Dimmer Switch, Key Warning Buzzer, Courtesy Light, Horn, Hazard Warning System.

TR7 - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① - 35 Amp. Air Conditioner.
- ② - 35 Amp. Cigar Lighter, Horn, Clock, Hazard Warning System, Courtesy Light.
- ③ - 35 Amp. Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals, Air Conditioner Control System.
- ④ - 35 Amp. Interior Lights, Parking & Side Marker Lights, Tail Lights.

VOLKSWAGEN

FUSE BLOCK

Type 1 (Beetle) - Fuse block is located under instrument panel in approximately the center of the vehicle and contains 12 fuses. Additional in-line fuses are located and protect circuits as follows: An 8 Amp. fuse located in engine compartment above ignition coil, protects the Back-Up Lights. An 8 Amp. fuse located underneath the rear seat, left side, protects

the Rear Window Defogger. A 16 Amp. fuse located in front luggage compartment near the heater, protects the Auxiliary Heater. Fuse block circuits protected are, from left to right:

- ① - 8 Amp. Left Tail Light.
- ② - 8 Amp. Right Tail Light, Parking & Side Marker Lights, License Plate Light.