

Switches, Gauges & Instrument Panels 3-61

RENAULT

INSTRUMENT CLUSTER

R-5 Models — Disconnect battery cable and speedometer cable in engine compartment. Unclip instrument panel cowl and remove. Press left and right side clips until support plate is cleared and remove instrument panel. Disconnect two electrical junction blocks and speedometer cable.

SPEEDOMETER & GAUGES

Speedometer and all gauges may be removed after instrument cluster is removed.

STOP LIGHT SWITCH

Mechanically operated switch attached to the steering column.

SAAB

INSTRUMENT CLUSTER

99 Models — Remove safety padding. Remove four self tapping screws. Disconnect speedometer cable and wiring. Remove bulb holders. Lift out instrument cluster.

TURN SIGNAL FLASHER

Located under instrument panel on left hand side of steering column.

SPEEDOMETER & GAUGES

99 Models — Speedometer and all gauges may be removed after first removing instrument cluster.

STOP LIGHT SWITCH

Mechanical type mounted on brake pedal bracket.

SUBARU

INSTRUMENT CLUSTER

Remove instrument cluster cover screws and remove cover with rear window defogger switch. Remove cluster retaining screws and tip cluster out. Disconnect speedometer cable and wiring harness, then remove cluster.

HAZARD WARNING & TURN SIGNAL FLASHER

Located under instrument panel.

SPEEDOMETER & GAUGES

Speedometer and all gauges may be removed after first removing instrument cluster.

STOP LIGHT SWITCH

Mechanical type mounted on brake pedal bracket. Adjust switch so there is .24-.55" (6-14 mm) free pedal movement before switch turns on brake lights.

TOYOTA

INSTRUMENT CLUSTER

NOTE — Always disconnect battery prior to removing instrument cluster.

All Models — Loosen instrument cluster trim panel screws and remove panel. Loosen steering column clamp bolts. Remove screws, bolts or nuts mounting the cluster to instrument panel. Disconnect speedometer cable and all instrument wire harness connectors, then remove instrument cluster.

NOTE — Removal procedures are similar for all models, however all steps may not apply to each model.

SPEEDOMETER & GAUGES

All Models — Speedometer and all gauges may be removed after first removing instrument cluster.

HAZARD WARNING & TURN SIGNAL FLASHER

All Models — Mounted near steering column behind instrument center panel.

STOP LIGHT SWITCH

Mechanical type mounted on brake pedal bracket. Free travel should be .120 to .240" (3 to 6 mm).