

BMW (Cont.)

- ⑨ - 8 Amp. Left Parking, Tail, Side Marker Lights
- ⑩ - 25 Amp. Heated Rear Window
- ⑪ - 25 Amp. Heater Blower, Auxiliary Fan Control, Air Conditioning Blower
- ⑫ - 8 Amp. Brakes, Horn, Radio
- ⑬ - 25 Amp. Auxiliary Fan Motor
- ⑭ - 16 Amp. Back Up, Brake Warning Lights, Fuel Gauge, Tachometer, Vacuum Advance
- ⑮ - 16 Amp. Windshield Wiper and Washer
- ⑯ - 16 Amp. Cigar Lighter
- ⑰ - 8 Amp. Turn Signal, Hazard Light, Dome Light, Glove Box Light, Clock, Warning Buzzer
- ⑱ - Spare

633CSi, 733i - Fuse block contains 17 fuses, arranged in 3 rows.

- ① - 16 Amp. Fuel Delivery
- ② - 8 Amp. Low Beam Headlight, Right

- ③ - 8 Amp. Low Beam Headlight, Left
- ④ - 16 Amp. Cigar Lighter
- ⑤ - 8 Amp. Clock, Instrument Lights, Turn Signals, Hazard Lights, Seat Belt Warning, Central Locking System
- ⑥ - 8 Amp. Back Up, Engine Instruments, Warning Light, Buzzer
- ⑦ - 8 Amp. High Beam Headlight, Right
- ⑧ - 8 Amp. High Beam Headlight, Left
- ⑨ - 8 Amp. Parking, Side Marker, License Lights, Right Side
- ⑩ - 8 Amp. Left Parking Light
- ⑪ - 16 Amp. Power Mirror, Horn, Windshield Washer/Wipers
- ⑫ - 8 Amp. Brake Light, Glove Box Light, Radio, Safety Check
- ⑬ - 16 Amp. Rear Window Heater, Sunroof
- ⑭ - 25 Amp. Auxiliary Fan Relay, Heating, Air Conditioning
- ⑮ - 8 Amp. Right Fog Light
- ⑯ - 8 Amp. Left Fog Light
- ⑰ - 25 Amp. (2) Auxiliary Fan Motor

CAPRI

Fuse block is located on left hand side of engine compartment and contains 7 fuses. Circuits protected by the fuses are, from left to right:

- 1 - 8 Amp. Cigarette Lighter, Clock, Interior Light, Hazard Flasher.
- 2 - 8 Amp. License Plate Light, Instrument Lights, Map Light.
- 3 - 8 Amp. Right Tail, Parking and Side Marker Lights.
- 4 - 8 Amp. Left Tail, Parking and Side Marker Lights.

- 5 - 8 Amp. Horn, Heater Blower.
- 6 - 16 Amp. Front and Rear Wiper Motors, Back-Up Light, Instrument Lights.
- 7 - 8 Amp. Turn Signals, Stop Lights.

NOTE - Four additional 16 Amp. fuses are located on the bottom of the headlight relay to protect headlight circuits. Relay is located near fuse block. One additional 16 Amp. fuse is located inside the plastic cover of the heated backlight relay. Relay is located under dash below ash tray.

CHALLENGER & SAPPORO**FUSE BLOCK**

Fuse block is located beneath the instrument panel on the drivers side, and contains 10 fuses. Circuits protected are, from front to back:

- ① - 10 Amp. Voltage Regulator
- ② - 10 Amp. Back up Lights

- ③ - 10 Amp. Turn Signals, Gauges, Belt Warning Lights
- ④ - 15 Amp. Radio, Cigar Lighter
- ⑤ - 15 Amp. Windshield Wipers and Washer
- ⑥ - 15 Amp. Heater, Horn
- ⑦ - 15 Amp. Tail Lights, Dash Lights
- ⑧ - 20 Amp. Rear Window Defogger
- ⑨ - 15 Amp. Door & Hazard Warning Lights
- ⑩ - 15 Amp. Dome & Stop Lights

COLT**FUSE BLOCK**

Hardtop fuse block is located on the wall cover to the left of the drivers seat and contains 10 fuses and three spare fuses. Circuits protected are as follows:

- ① - 15 Amp. Cigar Lighter, Radio, Horn.
- ② - 15 Amp. Windshield Wiper/Washer.
- ③ - 10 Amp. Headlights (Upper).
- ④ - 10 Amp. Headlights (Lower).
- ⑤ - 5 Amp. Dome & Instrument Lights.
- ⑥ - 15 Amp. Stop & Hazard Lights.
- ⑦ - 15 Amp. Rear Window Defogger.
- ⑧ - 15 Amp. Heater.
- ⑨ - 15 Amp. Turn Signals, Back-Up Lights, Voltage Regulator
- ⑩ - 15 Amp. Tail & Parking Lights.

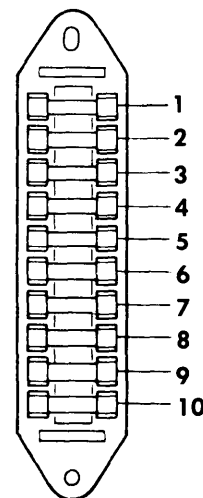


Fig. 2 Colt Hardtop Fuse Block

COLT (Cont.)

Station wagon fuse block is located on the wall cover to the left of the drivers seat and contains 10 fuses. Hardtop models have the fuse block mounted vertically, station wagons mounted horizontally. Circuits protected are as follows:

- ⑧ - 10 Amp. Turn Signals, Gauges
- ⑨ - 10 Amp. Back Up Lights
- ⑩ - 10 Amp. Voltage Regulator, Fuel Cut

- ① - 15 Amp. Stop Lights, Dome Light
- ② - 15 Amp. Hazard Light
- ③ - 15 Amp. Heater, Horn, Air Conditioning
- ④ - 15 Amp. Windshield Wipers, Washers
- ⑤ - 15 Amp. Radio, Cigar Lighter
- ⑥ - 15 Amp. Tail Lights
- ⑦ - 15 Amp. Rear Window Defogger

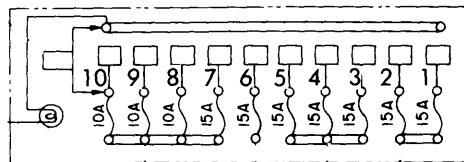


Fig. 3 Colt Station Wagon Fuse Box

COURIER

FUSE BLOCK

Fuse block is located on left side of engine compartment near windshield. Block contains 9 fuses and 2 spares. Circuits protected are, from front to rear:

- ① - 15 Amp. Horn, Stop Lights, Hazard Warning Flasher, Interior Light, Cigar Lighter.
- ② - 15 Amp. Hood & Glove Box Light, Electric Rear Window Defroster.

- ③ - 15 Amp. Headlights (High Beam).
- ④ - 15 Amp. Headlights (Low Beam).
- ⑤ - 10 Amp. Tail, License, Front Parking, Front Side Marker, Instrument Lights.
- ⑥ - 10 Amp. Windshield Wipers/Washers.
- ⑦ - 15 Amp. Heater/Defroster Blower Motor, Radio.
- ⑧ - 10 Amp. Front & Rear Turn Signal Lights, Fasten Seat Belt, Oil Pressure & Brake Warning Lights, Fuel Gauge, Temperature Gauge, Back-Up Lights.
- ⑨ - 15 Amp. Engine.

DATSUN

FUSE BLOCK

200 SX - Fuse block is located under instrument panel, left of steering column and contains 8 fuses. Circuits protected are as follows:

- ① - 10 Amp. Gauges, Flasher, Back-Up Lights.
- ② - 15 Amp. Windshield Wiper/Washer, Heater.
- ③ - 15 Amp. Stop Light, Hazard Warning Lights, Horn.
- ④ - 15 Amp. Cigar Lighter, Clock, Dome Light.
- ⑤ - 15 Amp. Seat Belt Warning.
- ⑥ - 10 Amp. Headlights.
- ⑦ - 10 Amp. Tail, Parking & Interior Lights.
- ⑧ - 20 Amp. Radio, Rear Window Defogger.

B210 - Fuse block is located under instrument panel to left of steering column and contains 8 fuses. Circuits protected are as follows:

- 1 - 10 Amp. Kickdown Switch, Neutral Safety Switch, Turn Signals, Back-Up Lights, Gauges, Warning Lights, Tachometer.
- 2 - 15 Amp. Windshield Wiper/Washer, Heater.
- 3 - 15 Amp. Hazard Warning System, Stop Lights, Horn.
- 4 - 15 Amp. Interior Light, Theft Protection System, Cigarette Lighter.
- 5 - 10 Amp. EGR and Catalyst Warning System.
- 6 - 15 Amp. Headlights.
- 7 - 10 Amp. Parking, Tail, Side Marker and Instrument Lights.
- 8 - 20 Amp. Rear Window Defogger, Radio.

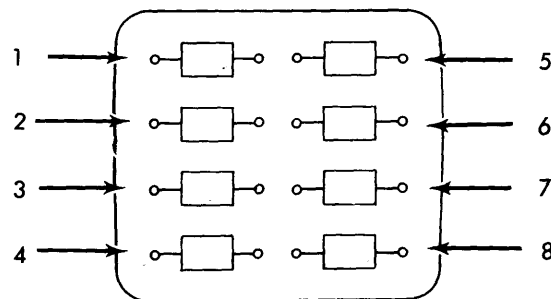


Fig. 4 Datsun B210 Fuse Block

510 - Fuse block is located under the instrument panel and contains 8 fuses. Circuits protected are as follows:

- ① - 15 Amp. Horn, Cigar Lighter
- ② - 15 Amp. Interior & Stop Lights
- ③ - 15 Amp. Tail Lights
- ④ - 15 Amp. Heater, Radio
- ⑤ - 10 Amp. Windshield Wipers & Washer
- ⑥ - 10 Amp. Engine Control
- ⑦ - 10 Amp. Emergency Flasher, Meters
- ⑧ - 20 Amp. Rear Window Defogger

810 - Fuse block is located under the instrument panel on the right kick panel and contains 11 fuses. Circuits protected are as follows:

- ① - 20 Amp. Rear Window Defogger.
- ② - 10 Amp. Flasher.