

## FIAT (Cont.)

Two additional fuses, in separate holders, protect Fuel Pump and Relay (8 Amp.) and Rear Window Defogger (16 Amp.). Fuses in block protect the following circuits:

- 1 - 8 Amp. Gauges, Warning Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater, Windshield Wiper, Seat Belt Buzzer Relay, Emission Control System
- 2 - 16 Amp. Interior Lights, Horns, Engine Fan Motor, Hazard Warning Flasher, Remove Key & Seat Belt Buzzer.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights, Right Tail and Side Marker Lights, and Left License Plate Light.
- 8 - 8 Amp. Right Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right Side License Plate Light, Instrument Cluster Lights, Hazard Warning Flashers, Instrument Control Knob Illumination.

**128 3P Coupe** - Fuse block is located under instrument panel to left of steering column and contains 10 fuses. One additional fuse in separate holder, protects Fuel Pump and Relay (8 Amp.). Fuses in block protect the following circuits:

- 1 - 8 Amp. Stop and Back-Up Lights, Windshield Wiper/Washer, Diverter Valve Relay.
- 2 - 8 Amp. Gauges, Indicator Lights, Turn Signals, Heater Blower, Key and Seat Belt Buzzer Relay, Diverter Solenoid Valve.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Plate Light.
- 8 - 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Instrument Lights, Heater Control Illumination Light, Hazard Warning Flashers.
- 9 - 16 Amp. Horn Relay, Engine Fan Motor, Courtesy Light.
- 10 - 16 Amp. Cigar Lighter, Remove Key/Fasten Seat Belts Buzzer.

**X1/9** - Fuse block is located under instrument panel to left of steering column. Fuse block contains 12 fuses. Fuses in block protect the following circuits:

- 1 - 8 Amp. Gauges, Indicator Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater Blower, Windshield Wiper/Washer, Seat Belt & Key Buzzer System.
- 2 - 8 Amp. Headlight Motors, Carburetor Fan Relay, Courtesy Light, Key/Seat Belt Buzzer.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Light, Control and Instrument Illumination Lights.
- 8 - 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light.
- 9 - 16 Amp. Hazard Warning Flashers and Indicator, Cigarette Lighter, Rear Window Defogger.
- 10 - 16 Amp. Engine Fan, Horn and Relay.
- 11 - 3 Amp. Headlight Concealing Relay.
- 12 - 3 Amp. Headlight Raising Relay.

**131** - Fuse block is located under glove compartment and contains one row of 12 fuses, and another row of 2 fuses. Four spares are included. Fuses number 7 & 8 are the 2 fuses in a separate row. Circuits protected are as follows:

- ① - 8 Amp. Stop & Back-Up Lights, Warning Indicators, Gauges, Heater Fan Motor, Electronic Tachometer; Rear Window, Air Conditioner, Starter Inhibitor Switch & Fasten Seat Belt Relays.
- ② - 10 Amp. Windshield Wiper/Washer
- ③ - 10 Amp. Left Tail & Right Front Parking Lights, Right Front & Left Side Marker Lights.
- ④ - 8 Amp. Left Front Parking & Right Tail Lights, Left Front & Right Side Marker Lights, License Plate Lights, Instrument Lights.
- ⑤ - 8 Amp. Left Outboard Headlight (Low Beam).
- ⑥ - 8 Amp. Right Outboard Headlight (Low Beam).
- ⑦ - 16 Amp. Inboard Headlights (High Beam)
- ⑧ - 16 Amp. Outboard Headlights (High Beam), High Beam Indicator.
- ⑨ - Horn, Horn Relay Winding, Engine Fan Motor.
- ⑩ - 16 Amp. Clock, Courtesy Lights, Cigar Lighter, Radio Antenna Motor (When Installed).
- ⑪ - 16 Amp. Rear Window Defogger, Hazard Warning System.
- ⑫ - 16 Amp. Air Conditioner Compressor & Evaporator Fan & Condenser Motor.
- ⑬ - 16 Amp. Remove Key Buzzer
- ⑭ - Spare Fuse.

## HONDA

### FUSE BLOCK

**Civic & Civic CVCC** - Fuse block is located in front of the right door hinge pillar. Block contains 8 fuses. Circuits protected are, from bottom to top:

- ① - 10 Amp. Voltage Regulator.

- ② - 10 Amp. Windshield Wiper/Washer.
- ③ - 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ - 15 Amp. Heater, Radio, Rear Window Defogger.
- ⑤ - 15 Amp. Hazard Warning Light, Horn, Stop Lights.
- ⑥ - 10 Amp. Cig. Lighter, Clock, Interior Lights.
- ⑦ - 15 Amp. Taillights, License Light, Instrument Lights.
- ⑧ - 15 Amp. Headlights.

## HONDA (Cont.)

**Accord** — Fuse block is located under the dashboard on drivers side. Block contains 10 fuses. One row of 8 and a row of 2. Numbers 9 & 10 are the 2 fuses in a separate row, along with 2 spares and 1 spare main fuse. Circuits protected are as follows, from top to bottom:

- ① — 10 Amp. Windshield Wiper/Washer.
- ② — 10 Amp. Voltage Regulator, Fuel Pump.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Headlight High Beam.
- ⑤ — 15 Amp. Headlight Low Beam.
- ⑥ — 15 Amp. Taillights, Instrument Lights

- ⑦ — 10 Amp. Cig. Lighter, Clock Interior Lights.
- ⑧ — 15 Amp. Hazard Warning Lights, Horn, Stop Lights.
- ⑨ — 15 Amp. Heater.
- ⑩ — 15 Amp. Radio, Rear Window Defroster.

## IN-LINE FUSES

One large 55 Amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.

## JAGUAR

## FUSE BLOCK

**XJ6 Models** — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- ① — 20 Amp. Fog Lights
- ② — 15 Amp. Hazard Warning System
- ③ — 35 Amp. Map & Interior Lights, Cigar Lighter, Clock, Trunk Light
- ④ — 15 Amp. Back Up Lights, Gauges
- ⑤ — 15 Amp. Turn Signals
- ⑥ — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer
- ⑦ — 15 Amp. Instrument Lights
- ⑧ — 15 Amp. Left Side Marker and Tail Lights
- ⑨ — 15 Amp. Right Side Marker and Tail Lights
- ⑩ — 50 Amp. A/C and Heater Relay
- ⑪ — 20 Amp. Windshield Wipers
- ⑫ — 15 Amp. Air Conditioning

**XJS Models** — Fuse block is located under dashboard on right side. Circuits protected are as follows:

- ① — 25 Amp. Fog Lights

- ② — 15 Amp. Hazard Warning
- ③ — 35 Amp. Map & Interior Lights, Cigar Lighter, Electric Aerial, Clock, Seat Belt Warning Light.
- ④ — 10 Amp. Instrument Lights
- ⑤ — 15 Amp. Turn Signals
- ⑥ — 10 Amp. Back Up Lights
- ⑦ — 10 Amp. Panel Switches, License Light, Trunk Light, Gear Selector Light, Cigar Lighter Light, Fibre Optic Unit
- ⑧ — 10 Amp. Left Side Marker & Tail Lights
- ⑨ — 10 Amp. Right Side Marker & Tail Lights
- ⑩ — 50 Amp. Air Conditioning Motor
- ⑪ — 35 Amp. Windshield Wipers & Washer, Horn Relay, Cooling Fan relay, A/C Relay & Clutch
- ⑫ — 35 Amp. Heated Back Light

**XJ12** — Fuse Information not available at time of publication.

## IN-LINE FUSES

**Head Lights** — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

**Horn Relay** — Circuit is protected by a 35 Amp. in-line fuse.

## LANCIA

## FUSE BLOCK

Fuse block is fitted to the engine compartment and is provided with a pressure tight cover. Block contains 11 fuses. Circuits protected are, from right to left:

- ① — 8 Amp. Right Front Side Light, Right License Light, Rear Left Side Light
- ② — 8 Amp. Engine Compartment Light, Trunk Light, Cigar Lighter, Front Left & Rear Right Side Lights, Instrument Light, Left License Light
- ③ — 8 Amp. Right Low Beam Headlight
- ④ — 8 Amp. Left Low Beam Headlight
- ⑤ — 8 Amp. Right High Beam Headlight
- ⑥ — 8 Amp. Left High Beam Headlight, High Beam Indicator
- ⑦ — 8 Amp. Stop Lights, Windshield Washer Motor, Radio

- ⑧ — 16 Amp. No. 14 Solenoid Switch, Heating & Ventilation Booster, Windshield Wipers
- ⑨ — 16 Amp. No. 12 Solenoid Switch, Turn Signals, Coil, Handbrake Warning Light, Instrument & Warning Lights, Cooling Fan Switch
- ⑩ — 8 Amp. Courtesy Light, Door Lights, Clock, Glove Box Light
- ⑪ — 25 Amp. Horn, Cigar Lighter, Clock, Heated Rear Window

## IN-LINE FUSES

In-line fuses protect engine cooling fan (16 Amp), air conditioning booster fan (16 Amp), and an air conditioning compressor solenoid switch (25 Amp). Auxiliary fuse box is located near the left inner wheel well.