

## LUV

### FUSE BLOCK

Fuse block is located in engine compartment on left inner valance panel. Fuse block contains 6 fuses and 4 spares. Circuits protected by fuses are as follows:

- ① - 15 Amp. Tail Lights, Instrument Lights

- ② - 15 Amp. Turn Signals, Stop Lights, Horn
- ③ - 15 Amp. Dome Light, Air Conditioning
- ④ - 15 Amp. Heater, Back Up Lights
- ⑤ - 15 Amp. Fuel Pump, Voltage Regulator
- ⑥ - 15 Amp. Radio, Windshield Wiper & Washer, Cigar Lighter

## MAZDA

### FUSE BLOCK

**Cosmo** - Fuse block is located just below glove box and contains 14 fuses. Circuits protected are as follows:

- ① - 10 Amp. Ignition Reminder Switch
- ② - 15 Amp. Panel Lights, Left Side Marker, Tail Lights, Parking Lights, License Light
- ③ - 15 Amp. Right Side Marker, Tail Lights
- ④ - 10 Amp. Left Side High Beam Headlight, High Beam Indicator
- ⑤ - 10 Amp. Right Side High Beam Headlight
- ⑥ - 10 Amp. Left Low Beam Headlight
- ⑦ - 10 Amp. Right Low Beam Headlight
- ⑧ - 15 Amp. Courtesy Light, Clock, Cigar Lighter, Glove Box Light, Trunk Light.
- ⑨ - 20 Amp. Horn, Hazard Warning Flasher Switch
- ⑩ - 15 Amp. Defogger, Air Conditioner
- ⑪ - 15 Amp. Stop Lights
- ⑫ - 20 Amp. Heat Hazard Warning Light, Ignition Coil, Fuel Pump, Emission Control, Choke Switch
- ⑬ - 10 Amp. Kickdown Switch, EGR Warning, Voltage Regulator

**RX-4** - Fuse block is located just below glove box and contains 13 fuses. Circuits protected are as follows:

- ① - 20 Amp. Horn, Stop Lights, Hazard Warning Flasher Switch
- ② - 15 Amp. Interior Light, Clock, Cigar Lighter, Trunk Light, Key Buzzer, Glove Box Light, Step & Spot Lights
- ③ - 20 Amp. Tail Lights, Front Parking Light, Side Markers, License Light, Instrument Panel Lights
- ④ - 10 Amp. Left High Beam Headlight
- ⑤ - 10 Amp. Right High Beam Headlight, High Beam Indicator
- ⑥ - 10 Amp. Back Up Lights, Warning Lights, Fuel & Temperature Gauge, Turn Signals
- ⑦ - 15 Amp. Voltage Regulator, Kick Down Solenoid, EGR Warning
- ⑧ - 20 Amp. Fuel Pump, Heat Hazard Warning Light, Ignition Coil, Choke Switch, Emission Control
- ⑨ - 10 Amp. Left Low Beam Headlight
- ⑩ - 10 Amp. Right Low Beam Headlight
- ⑪ - 20 Amp. Rear Window Defogger, Air Conditioning
- ⑫ - 20 Amp. Heater, Radio
- ⑬ - 10 Amp. Windshield Wipers & Washers

**GLC** - The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① - 15 Amp. Horn, Stop & Turn Signal Lights.
- ② - 15 Amp. Interior Light, Cigar Lighter, Clock, Key Reminder Buzzer.
- ③ - 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Lights.
- ④ - Not Used.
- ⑤ - Not Used.
- ⑥ - 10 Amp. Rear Window Defogger.
- ⑦ - 10 Amp. Windshield Wiper/Washer, Rear Window Wiper/Washer
- ⑧ - 15 Amp. Heater, Remote Control Hatchback Release.
- ⑨ - 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Indicator.
- ⑩ - 10 Amp. Hazard Warning Lights, Choke Switch, Regulator

**Pickup** - Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① - 15 Amp. Horn, Stop Lights, Interior Light, Cigar Lighter, Hazard Flashers
- ② - 10 Amp. Front Parking Lights, Side Lights, License Light, Tail Lights, Instrument Panel Lights
- ③ - 10 Amp. Back Up Lights, Warning Lights, Fuel Gauge, Water Temperature Gauge, Turn Signals
- ④ - 15 Amp. Choke Switch, Voltage Regulator, Fuel Pump, Fuel Cut
- ⑤ - 15 Amp. Heater, Radio
- ⑥ - 10 Amp. Windshield Wipers & Washer

### IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

## MERCEDES-BENZ

### FUSE BLOCK

**All (Exc. 450 SL & SLC)** - Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

**450 SL & SLC** - Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

### IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

## MG

## FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ② — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ③ — 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights.
- ④ — 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter.

## IN-LINE FUSES

**Auxiliary Equipment** — A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

**Fan Thermostat** — A 35 Amp. in-line fuse protects the fan thermostat circuit.

**Hazard Warning** — A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

**Radio** — A separate additional in-line fuse protects Radio.

## OPEL

## FUSE BLOCK

Fuse block is located on the right side kick panel. Block contains 13 fuse positions and four spare fuses. Circuits protected are as follows:

- ① — 10 Amp. High Beam Headlights
- ② — 15 Amp. Windshield Wiper/Washer, Radio.
- ③ — 15 Amp. Horn, Turn Signals.
- ④ — 15 Amp. Rear Window Defogger.
- ⑤ — 15 Amp. Cig. Lighter, Interior Light.
- ⑥ — 15 Amp. Air Conditioning.
- ⑦ — 15 Amp. Spare Circuit.

- ⑧ — 10 Amp. Headlights Low Beam.
- ⑨ — 10 Amp. Instrument Lights, Emission Control System
- ⑩ — 15 Amp. Ignition Coil, Voltage Regulator, Fuel Pump
- ⑪ — 15 Amp. Heater, Back-Up Lights.
- ⑫ — 15 Amp. Lighting Switch.
- ⑬ — 15 Amp. Taillights.

## FUSIBLE LINKS

Fusible links and in-line fuses are utilized throughout the wiring system to prevent short circuits. Main fusible link is located near the battery.

## PORSCHE

## FUSE BLOCK

**924 Models** — Fuse block is located under instrument panel to left of steering column and contains 15 fuses. Circuits protected are, from left to right:

- ① — 8 Amp. Left Headlight (Low Beam)
- ② — 8 Amp. Right Headlight (Low Beam).
- ③ — 8 Amp. Left Headlight (High Beam).
- ④ — 8 Amp. Right Headlight (High Beam).
- ⑤ — 16 Amp. Additional Headlights.
- ⑥ — 8 Amp. Interior Lights, Retractable Headlights.
- ⑦ — 8 Amp. Emergency Flashers.
- ⑧ — 8 Amp. Turn Signal Indicator, Brake Warning Light.
- ⑨ — 8 Amp. Horn, Back-Up Lights, Rear Window Wiper.
- ⑩ — 8 Amp. Fresh Air Blower.
- ⑪ — 8 Amp. Windshield Wipers.
- ⑫ — 8 Amp. License Plate & Luggage Compartment Lights.
- ⑬ — 8 Amp. Side Marker Light (Right)
- ⑭ — 8 Amp. Side Marker Light (Left).
- ⑮ — 16 Amp. Fan, Fog Lights.

**911SC & Turbo Models** — Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in the engine compartment on left side under regulator cover. Secondary fuse block protects Sportomatic and Fan Relay (5 Amp.), Heater Fan (25 Amp.)

and Rear Window Defogger (25 Amp.). Main fuse block protects the following circuits, front to rear:

- 1 — 16 Amp. Fog Lights.
- 2 — 5 Amp. License Plate & Control Lights, Fog Light Relay.
- 3 — 5 Amp. Right Front and Rear Parking Lights.
- 4 — 5 Amp. Left Front and Rear Parking Lights.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Right Headlight High Beam.
- 8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 — 5 Amp. Right Front Flasher Light.
- 10 — 5 Amp. Left Front Flasher Light.
- 11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.
- 12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.
- 13 — 25 Amp. Windshield Wiper/Washer, Air Conditioner.
- 14 — 25 Amp. Electric Sunroof, Rear Window Wiper.
- 15 — 16 Amp. Cigar Lighter, Blower Switch Control Light.
- 16 — 25 Amp. Fuel Pump
- 17 — 16 Amp. Emergency Flasher.
- 18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.
- 19 — 16 Amp. Headlight Washer.
- 20 — 25 Amp. Blower for Air Conditioner.
- 21 — 25 Amp. Power Windows