

MG

FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ② — 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ③ — 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights.
- ④ — 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter.

IN-LINE FUSES

Auxiliary Equipment — A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Fan Thermostat — A 35 Amp. in-line fuse protects the fan thermostat circuit.

Hazard Warning — A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

Radio — A separate additional in-line fuse protects Radio.

OPEL

FUSE BLOCK

Fuse block is located on the right side kick panel. Block contains 13 fuse positions and four spare fuses. Circuits protected are as follows:

- ① — 10 Amp. High Beam Headlights
- ② — 15 Amp. Windshield Wiper/Washer, Radio.
- ③ — 15 Amp. Horn, Turn Signals.
- ④ — 15 Amp. Rear Window Defogger.
- ⑤ — 15 Amp. Cig. Lighter, Interior Light.
- ⑥ — 15 Amp. Air Conditioning.
- ⑦ — 15 Spare Circuit.

- ⑧ — 10 Amp. Headlights Low Beam.
- ⑨ — 10 Amp. Instrument Lights, Emission Control System
- ⑩ — 15 Amp. Ignition Coil, Voltage Regulator, Fuel Pump
- ⑪ — 15 Amp. Heater, Back-Up Lights.
- ⑫ — 15 Amp. Lighting Switch.
- ⑬ — 15 Amp. Taillights.

FUSIBLE LINKS

Fusible links and in-line fuses are utilized throughout the wiring system to prevent short circuits. Main fusible link is located near the battery.

PORSCHE

FUSE BLOCK

924 Models — Fuse block is located under instrument panel to left of steering column and contains 15 fuses. Circuits protected are, from left to right:

- ① — 8 Amp. Left Headlight (Low Beam)
- ② — 8 Amp. Right Headlight (Low Beam).
- ③ — 8 Amp. Left Headlight (High Beam).
- ④ — 8 Amp. Right Headlight (High Beam).
- ⑤ — 16 Amp. Additional Headlights.
- ⑥ — 8 Amp. Interior Lights, Retractable Headlights.
- ⑦ — 8 Amp. Emergency Flashers.
- ⑧ — 8 Amp. Turn Signal Indicator, Brake Warning Light.
- ⑨ — 8 Amp. Horn, Back-Up Lights, Rear Window Wiper.
- ⑩ — 8 Amp. Fresh Air Blower.
- ⑪ — 8 Amp. Windshield Wipers.
- ⑫ — 8 Amp. License Plate & Luggage Compartment Lights.
- ⑬ — 8 Amp. Side Marker Light (Right)
- ⑭ — 8 Amp. Side Marker Light (Left).
- ⑮ — 16 Amp. Fan, Fog Lights.

911SC & Turbo Models — Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in the engine compartment on left side under regulator cover. Secondary fuse block protects Sportomatic and Fan Relay (5 Amp.), Heater Fan (25 Amp.)

and Rear Window Defogger (25 Amp.). Main fuse block protects the following circuits, front to rear:

- 1 — 16 Amp. Fog Lights.
- 2 — 5 Amp. License Plate & Control Lights, Fog Light Relay.
- 3 — 5 Amp. Right Front and Rear Parking Lights.
- 4 — 5 Amp. Left Front and Rear Parking Lights.
- 5 — 8 Amp. Right Headlight Low Beam.
- 6 — 8 Amp. Left Headlight Low Beam.
- 7 — 8 Amp. Right Headlight High Beam.
- 8 — 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 — 5 Amp. Right Front Flasher Light.
- 10 — 5 Amp. Left Front Flasher Light.
- 11 — 16 Amp. Flasher Relay, Brake and Back-Up Lights.
- 12 — 25 Amp. Rear Window Defroster Relay, Fresh Air Blower, Rear Window Defroster Control Light.
- 13 — 25 Amp. Windshield Wiper/Washer, Air Conditioner.
- 14 — 25 Amp. Electric Sunroof, Rear Window Wiper.
- 15 — 16 Amp. Cigar Lighter, Blower Switch Control Light.
- 16 — 25 Amp. Fuel Pump
- 17 — 16 Amp. Emergency Flasher.
- 18 — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.
- 19 — 16 Amp. Headlight Washer.
- 20 — 25 Amp. Blower for Air Conditioner.
- 21 — 25 Amp. Power Windows

PORSCHE (Cont.)

928 — Fuse block is located in the passenger foot well and contains 34 fuses and 22 relays. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp. Fog Lights
- 2 — Not Connected
- 3 — 8 Amp. License Light, Engine Compartment Light
- 4 — 8 Amp. Switch Illumination Light
- 5 — 8 Amp. Cigar Lighter, Instrument Lights
- 6 — 16 Amp. Windshield Wipers
- 7 — 8 Amp. Rear Window Wipers
- 8 — 8 Amp. Sliding Roof
- 9 — 8 Amp. Back Up Lights, Outside Mirror
- 10 — 8 Amp. Brake Lights, Automatic Speed Control
- 11 — 8 Amp. Left Side Instrument Warning Lights
- 12 — 8 Amp. Right Side Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp. Power Seats
- 15 — 16 Amp. Power Antenna
- 16 — 25 Amp. Electric Radiator Fan
- 17 — 25 Amp. Heater, Air Conditioning Blower
- 18 — 25 Amp. Rear Window Defogger
- 19 — 25 Amp. Headlight Motor
- 20 — 16 Amp. Headlight Washer
- 21 — 25 Amp. Power Windows
- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

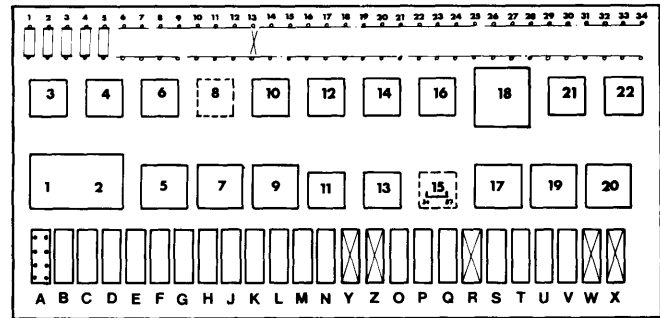


Fig. 4 Porsche 928 Fuse and Relay Block

Relay circuits are located below the fuses on the block.

- 1-2 — Rear Defogger
- 3 — Headlight Motor Control Relay
- 4 — Main Headlight Power Supply Relay
- 5 — Turn Signal Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Occupied
- 9 — Seat Belt Time Relay
- 10 — Two-Tone Horn
- 11 — Current Limiting Diode Pack
- 12 — Fog Lights
- 13 — Headlight Beam Power Supply Relay
- 14 — High/Low Beam Relay
- 15 — Bridge
- 16 — Safety Relay Headlights
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for Air Conditioning
- 19 — Wiper Intermittent
- 20 — Intensive Cleaner Pump
- 21 — Heating and Air Conditioning Blower
- 22 — Defroster

RENAULT

FUSE BLOCK

R-5 — Fuse block is located under the dashboard and to the right of the steering column. Circuits protected are, from left to right:

- ① — 8 Amp. Windshield Wiper.
- ② — 8 Amp. Cig. Lighter, Interior Lights.
- ③ — 5 Amp. Turn Signals.
- ④ — 8 Amp. Heater Motor.
- ⑤ — 15 Amp. Rear Window Defogger, Back-Up Lights.
- ⑥ — 5 Amp. Solenoids.

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

SUBARU

FUSE BLOCK

All Models — Fuse block is located on left side under instrument panel and contains 8 fuses. Circuits protected are as follows, from right to left:

- ① — 25 Amp. Lighting Switch
- ② — 20 Amp. Windshield Wiper & Washer, Fan Motor, Heater, Radio, Cigar Lighter
- ③ — 15 Amp. Hazard Light, Horn, Clock, Dome Light, Stop Lights