

PORSCHE (Cont.)

928 — Fuse block is located in the passenger foot well and contains 34 fuses and 22 relays. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp. Fog Lights
- 2 — Not Connected
- 3 — 8 Amp. License Light, Engine Compartment Light
- 4 — 8 Amp. Switch Illumination Light
- 5 — 8 Amp. Cigar Lighter, Instrument Lights
- 6 — 16 Amp. Windshield Wipers
- 7 — 8 Amp. Rear Window Wipers
- 8 — 8 Amp. Sliding Roof
- 9 — 8 Amp. Back Up Lights, Outside Mirror
- 10 — 8 Amp. Brake Lights, Automatic Speed Control
- 11 — 8 Amp. Left Side Instrument Warning Lights
- 12 — 8 Amp. Right Side Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp. Power Seats
- 15 — 16 Amp. Power Antenna
- 16 — 25 Amp. Electric Radiator Fan
- 17 — 25 Amp. Heater, Air Conditioning Blower
- 18 — 25 Amp. Rear Window Defogger
- 19 — 25 Amp. Headlight Motor
- 20 — 16 Amp. Headlight Washer
- 21 — 25 Amp. Power Windows
- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

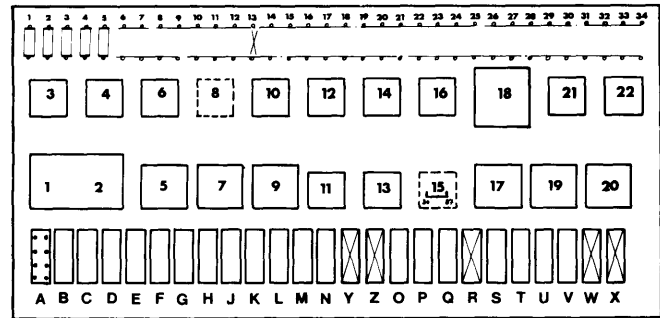


Fig. 4 Porsche 928 Fuse and Relay Block

Relay circuits are located below the fuses on the block.

- 1-2 — Rear Defogger
- 3 — Headlight Motor Control Relay
- 4 — Main Headlight Power Supply Relay
- 5 — Turn Signal Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Occupied
- 9 — Seat Belt Time Relay
- 10 — Two-Tone Horn
- 11 — Current Limiting Diode Pack
- 12 — Fog Lights
- 13 — Headlight Beam Power Supply Relay
- 14 — High/Low Beam Relay
- 15 — Bridge
- 16 — Safety Relay Headlights
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for Air Conditioning
- 19 — Wiper Intermittent
- 20 — Intensive Cleaner Pump
- 21 — Heating and Air Conditioning Blower
- 22 — Defroster

RENAULT

FUSE BLOCK

R-5 — Fuse block is located under the dashboard and to the right of the steering column. Circuits protected are, from left to right:

- ① — 8 Amp. Windshield Wiper.
- ② — 8 Amp. Cig. Lighter, Interior Lights.
- ③ — 5 Amp. Turn Signals.
- ④ — 8 Amp. Heater Motor.
- ⑤ — 15 Amp. Rear Window Defogger, Back-Up Lights.
- ⑥ — 5 Amp. Solenoids.

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

SUBARU

FUSE BLOCK

All Models — Fuse block is located on left side under instrument panel and contains 8 fuses. Circuits protected are as follows, from right to left:

- ① — 25 Amp. Lighting Switch
- ② — 20 Amp. Windshield Wiper & Washer, Fan Motor, Heater, Radio, Cigar Lighter
- ③ — 15 Amp. Hazard Light, Horn, Clock, Dome Light, Stop Lights

SUBARU (Cont.)

- ④ — 15 Amp. Ignition Coil, Fuel Pump, Gauges
- ⑤ — 15 Amp. Back Up Lights, Turn Signals, Rear Window Defogger

- ⑥ — 15 Amp. Parking Lights, Tail Lights, License Light
- ⑦ — 15 Amp. Headlight Low Beam
- ⑧ — 11 Amp. Headlight High Beam

TOYOTA

FUSE BLOCK

Cressida — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are as follows:

- ① — 15 Amp. Front Parking Lights, Side Markers, Tail Lights, License Light, Glove Box Light, Trunk & Panel Lights
- ② — 15 Amp. Stop Lights, Emergency Lights
- ③ — 15 Amp. Cigar Lighter, Clock, Dome, Courtesy, Luggage Light
- ④ — 15 Amp. Radio, Stereo
- ⑤ — 15 Amp. Emission Control Computer, Electric Choke
- ⑥ — 15 Amp. Turn Signals, Windshield Wipers & Washers, ESP
- ⑦ — 15 Amp. Back Up Lights, Warning Lights, Heater Relay, Rear Window Defogger Relay

Corona — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- 1 — 5 Amp. Radio, Tape Player.
- 2 — 10 Amp. Cigar Lighter, Door Warning Light.
- 3 — 15 Amp. Light Control Relay, Parking, Side Marker, Instrument Panel, Tail, and License Plate Lights.
- 4 — 15 Amp. Horn, Hazard Warning Lights, Stop Lights, Seat Belt Warning Light and Buzzer.
- 5 — 10 Amp. Interior Lights.
- 6 — 15 Amp. Spare Terminal.
- 7 — 15 Amp. Windshield Wiper/Washer.
- 8 — 10 Amp. Ignition Coil.
- 9 — 15 Amp. Turn Signal Lights, Regulator, Main Relay.
- 10 — 15 Amp. Heater Blower, Gauges, Back-up Lights, Brake Warning Lights.
- 11 — 15 Amp. Rear Window Defogger.

Celica — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Front Parking Lights, Front & Rear Side Marker Lights, Tail, License, Glove Box & Instrument Lights.
- ② — 15 Amp. Stop Lights, Hazard Warning Lights
- ③ — 15 Amp. Cigar Lighter, Clock; Interior, Door Courtesy & Luggage Compartment Lights
- ④ — 20 Amp. Rear Window Defogger
- ⑤ — 15 Amp. Instrument Warning Lights, Gauges, Heater Relay, Defogger Switch
- ⑥ — 15 Amp. Turn Signal Lights, Windshield Wiper/Washer
- ⑦ — 15 Amp. Main Relay, Regulator IG Terminal.
- ⑧ — 15 Amp. Radio & Tape Player.

Corolla — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Stop Lights, Emergency Flasher
- ② — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Tail Lights, License Light
- ③ — 15 Amp. Cigar Lighter, Interior Lights, Clock, Spot Light
- ④ — 15 Amp. Radio, Stereo Tape Player
- ⑤ — 15 Amp. Heater
- ⑥ — 15 Amp. Turn Signals, Windshield Wiper & Washer
- ⑦ — 15 Amp. Voltage Regulator, Fuel Cut Solenoid, Emission Control, Choke Coil, Electric Fan
- ⑧ — 15 Amp. Defogger, Back Up Lights, Warning Lights, Gauges

Pickup — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Instrument Panel, Parking, Side Marker, Tail Lights, License Light
- ② — 20 Amp. Horns, Stop Lights
- ③ — 15 Amp. Cigar Lighter, Dome Light, Emergency Flasher, Fan
- ④ — 20 Amp. Radio, Windshield Wipers & Washer
- ⑤ — 20 Amp. Heater Blower, Gauges, Back Up Lights
- ⑥ — 15 Amp. Turn Signals
- ⑦ — 15 Amp. Emission Control, Alternator Regulator
- ⑧ — 20 Amp. Spare

Land Cruiser — Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 — 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 — 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 — 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 — 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 — 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 — 15 Amp. Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil, Emission Control System, Voltage Regulator, Fuel Cut Solenoid.
- 8 — 20 Amp. Headlights.

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder.

Block contains 3 fuses and 2 spares. Circuits protected are as follows: