

## SUBARU (Cont.)

- ④ — 15 Amp. Ignition Coil, Fuel Pump, Gauges
- ⑤ — 15 Amp. Back Up Lights, Turn Signals, Rear Window Defogger

- ⑥ — 15 Amp. Parking Lights, Tail Lights, License Light
- ⑦ — 15 Amp. Headlight Low Beam
- ⑧ — 11 Amp. Headlight High Beam

## TOYOTA

## FUSE BLOCK

**Cressida** — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are as follows:

- ① — 15 Amp. Front Parking Lights, Side Markers, Tail Lights, License Light, Glove Box Light, Trunk & Panel Lights
- ② — 15 Amp. Stop Lights, Emergency Lights
- ③ — 15 Amp. Cigar Lighter, Clock, Dome, Courtesy, Luggage Light
- ④ — 15 Amp. Radio, Stereo
- ⑤ — 15 Amp. Emission Control Computer, Electric Choke
- ⑥ — 15 Amp. Turn Signals, Windshield Wipers & Washers, ESP
- ⑦ — 15 Amp. Back Up Lights, Warning Lights, Heater Relay, Rear Window Defogger Relay

**Corona** — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- 1 — 5 Amp. Radio, Tape Player.
- 2 — 10 Amp. Cigar Lighter, Door Warning Light.
- 3 — 15 Amp. Light Control Relay, Parking, Side Marker, Instrument Panel, Tail, and License Plate Lights.
- 4 — 15 Amp. Horn, Hazard Warning Lights, Stop Lights, Seat Belt Warning Light and Buzzer.
- 5 — 10 Amp. Interior Lights.
- 6 — 15 Amp. Spare Terminal.
- 7 — 15 Amp. Windshield Wiper/Washer.
- 8 — 10 Amp. Ignition Coil.
- 9 — 15 Amp. Turn Signal Lights, Regulator, Main Relay.
- 10 — 15 Amp. Heater Blower, Gauges, Back-up Lights, Brake Warning Lights.
- 11 — 15 Amp. Rear Window Defogger.

**Celica** — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Front Parking Lights, Front & Rear Side Marker Lights, Tail, License, Glove Box & Instrument Lights.
- ② — 15 Amp. Stop Lights, Hazard Warning Lights
- ③ — 15 Amp. Cigar Lighter, Clock; Interior, Door Courtesy & Luggage Compartment Lights
- ④ — 20 Amp. Rear Window Defogger
- ⑤ — 15 Amp. Instrument Warning Lights, Gauges, Heater Relay, Defogger Switch
- ⑥ — 15 Amp. Turn Signal Lights, Windshield Wiper/Washer
- ⑦ — 15 Amp. Main Relay, Regulator IG Terminal.
- ⑧ — 15 Amp. Radio & Tape Player.

**Corolla** — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Stop Lights, Emergency Flasher
- ② — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Tail Lights, License Light
- ③ — 15 Amp. Cigar Lighter, Interior Lights, Clock, Spot Light
- ④ — 15 Amp. Radio, Stereo Tape Player
- ⑤ — 15 Amp. Heater
- ⑥ — 15 Amp. Turn Signals, Windshield Wiper & Washer
- ⑦ — 15 Amp. Voltage Regulator, Fuel Cut Solenoid, Emission Control, Choke Coil, Electric Fan
- ⑧ — 15 Amp. Defogger, Back Up Lights, Warning Lights, Gauges

**Pickup** — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 15 Amp. Instrument Panel, Parking, Side Marker, Tail Lights, License Light
- ② — 20 Amp. Horns, Stop Lights
- ③ — 15 Amp. Cigar Lighter, Dome Light, Emergency Flasher, Fan
- ④ — 20 Amp. Radio, Windshield Wipers & Washer
- ⑤ — 20 Amp. Heater Blower, Gauges, Back Up Lights
- ⑥ — 15 Amp. Turn Signals
- ⑦ — 15 Amp. Emission Control, Alternator Regulator
- ⑧ — 20 Amp. Spare

**Land Cruiser** — Fuse block is mounted under dash to left of steering column (Station Wagon Models) or on left hand kick panel (All exc. Station Wagon Models). Fuse block contains 8 fuses. Circuits protected are, from end of block labeled "TOP":

- 1 — 15 Amp. Instrument, Parking, Side Marker, Tail and License Plate Lights.
- 2 — 20 Amp. Stop Lights, Horn and Hazard Warning System.
- 3 — 20 Amp. Cigarette Lighter, Interior Lights and Inspection Light Socket.
- 4 — 20 Amp. Radio, Windshield Wiper and Washer Motors.
- 5 — 20 Amp. Back-Up Lights, Heater and Gauges.
- 6 — 15 Amp. Turn Signal Lights.
- 7 — 15 Amp. Ignition Coil, Emission Control System, Voltage Regulator, Fuel Cut Solenoid.
- 8 — 20 Amp. Headlights.

## FUSIBLE LINKS

**All Models** — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

## TRIUMPH

## FUSE BLOCK

**Spitfire** — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder.

Block contains 3 fuses and 2 spares. Circuits protected are as follows:

## TRIUMPH (Cont.)

- ① — 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② — 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ — 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights

**TR7** — Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① — 35 Amp. Air Conditioner.
- ② — 35 Amp. Cigar Lighter, Horn, Clock, Hazard Warning System, Courtesy Light.
- ③ — 35 Amp. Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals, Air Conditioner Control System.
- ④ — 35 Amp. Interior Lights, Parking & Side Marker Lights, Tail Lights.

## VOLKSWAGEN

### FUSE BLOCK

**Type 1 (Beetle)** — Fuse block is located under instrument panel near the center of vehicle and contains 12 fuses. Additional in-line fuses are located and protect circuits as follows: An 8 Amp. fuse located in engine compartment above coil, protects the Back-Up Lights. An 8 Amp. fuse located under the rear seat, left side, protects the Rear Window Defogger. A 16 Amp. fuse located in front luggage compartment near heater protects the auxiliary heater. Fuse block circuits protected are, from left to right:

- ① — 8 Amp. Left Tail Light.
- ② — 8 Amp. Right Tail Light, Parking & Side Marker Lights, License Plate Light.
- ③ — 8 Amp. Left Low Beam.
- ④ — 8 Amp. Right Low Beam.
- ⑤ — 8 Amp. Left High Beam, High Beam Warning Light.
- ⑥ — 8 Amp. Right High Beam.
- ⑦ — 8 Amp. Not Used.
- ⑧ — 8 Amp. Emergency Flasher.
- ⑨ — 16 Amp. Interior Light.
- ⑩ — 16 Amp. Windshield Wiper, Fresh Air Fan, Rear Window Defogger.
- ⑪ — 8 Amp. Safety Belt Warning System, Stop Lights, Brake Warning Light, Horn.
- ⑫ — 8 Amp. Turn Signals, Gauges, Warning Lights, Emission System (EGR).

**Type 2 (Transporter)** — Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Two additional in-line fuses are used as follows: An 8 Amp. fuse, located in engine compartment near ignition coil on manual transmission models, protects the Back-Up Lights. A 16 Amp. fuse, located in engine compartment near blower motor protects the Warm Air Blower. Fuses in block protect the following circuits, left to right:

- ① — 8 Amp. Left Tail Light, Left Rear Marker Light.
- ② — 8 Amp. Right Tail Light, Parking Lights, License Plate Light, Right Rear Side Marker Light, Front Side Marker Lights.
- ③ — 8 Amp. Left Low Beam.
- ④ — 8 Amp. Right Low Beam.
- ⑤ — 8 Amp. Left High Beam, High Beam Indicator.
- ⑥ — 8 Amp. Right High Beam.
- ⑦ — 8 Amp. Accessories.
- ⑧ — 8 Amp. Emergency Flasher, Interior Lights.
- ⑨ — 16 Amp. Accessories.
- ⑩ — 16 Amp. Windshield Wipers, Rear Window Defogger

- ⑪ — 8 Amp. Horn, Stop Lights, Brake Warning Light.
- ⑫ — 8 Amp. Turn Signals Warning Lights, Back-Up Lights.

**Rabbit & Scirocco** — Fuse block is located under instrument panel on left side of vehicle and contains 15 fuses in one centralized unit. Two additional in-line fuses are used as follows: An 8 Amp. fuse located above fuse block, protects Rear Window Wiper. A 16 Amp. fuse located above fuse block, protects Electric Fuel Pump. Circuits protected by fuses in block are:

- ① — 8 Amp. Left Headlight Low Beam.
- ② — 8 Amp. Right Headlight Low Beam.
- ③ — 8 Amp. Left Headlight High Beam and Indicator.
- ④ — 8 Amp. Right Headlight High Beam.
- ⑤ — 16 Amp. Rear Window Defogger.
- ⑥ — 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ — 8 Amp. Interior Lights, Cigar Lighter.
- ⑧ — 8 Amp. Turn Signal System.
- ⑨ — 8 Amp. Back Up Lights, Shift Console Light, Horn
- ⑩ — 16 Amp. Fresh Air Fan.
- ⑪ — 8 Amp. Windshield Wiper & Washer
- ⑫ — 8 Amp. Luggage Compartment & License Plate Lights.
- ⑬ — 8 Amp. Right Parking, Tail & Side Marker Lights.
- ⑭ — 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ — 16 Amp. Radiator Fan.

**Dasher** — Fuse block is located on the left side behind the dashboard bin and contains 15 fuses. One additional fuse is located above fuse No. 7. A 16 Amp. fuse protects the Fuel Pump Relay. Circuits protected by fuses in the block are, from left to right:

- ① — 8 Amp. Left Low Beam.
- ② — 8 Amp. Right Low Beam.
- ③ — 8 Amp. Left High Beam & Warning Light.
- ④ — 8 Amp. Right High Beam.
- ⑤ — 16 Amp. Rear Window Defogger.
- ⑥ — 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ — 8 Amp. Cigar Lighter, Clock, Radio, Interior Light.
- ⑧ — 8 Amp. Gauges, Warning Lights, Turn Signal Indicator.
- ⑨ — 8 Amp. Back-Up Lights, Shift Console Light.
- ⑩ — 16 Amp. Fresh Air Fan, Rear Window Defogger (Switch Current)
- ⑪ — 8 Amp. Horn, Windshield Wiper/Washer.
- ⑫ — 8 Amp. License Plate Light.
- ⑬ — 8 Amp. Right Tail, Parking & Side Marker Lights.
- ⑭ — 8 Amp. Left Tail, Parking & Side Marker Lights.
- ⑮ — 16 Amp. Radiator Fan.