

## TRIUMPH (Cont.)

- ① - 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② - 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ - 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights

**TR7** - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① - 35 Amp. Air Conditioner.
- ② - 35 Amp. Cigar Lighter, Horn, Clock, Hazard Warning System, Courtesy Light.
- ③ - 35 Amp. Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals, Air Conditioner Control System.
- ④ - 35 Amp. Interior Lights, Parking & Side Marker Lights, Tail Lights.

## VOLKSWAGEN

### FUSE BLOCK

**Type 1 (Beetle)** - Fuse block is located under instrument panel near the center of vehicle and contains 12 fuses. Additional in-line fuses are located and protect circuits as follows: An 8 Amp. fuse located in engine compartment above coil, protects the Back-Up Lights. An 8 Amp. fuse located under the rear seat, left side, protects the Rear Window Defogger. A 16 Amp. fuse located in front luggage compartment near heater protects the auxiliary heater. Fuse block circuits protected are, from left to right:

- ① - 8 Amp. Left Tail Light.
- ② - 8 Amp. Right Tail Light, Parking & Side Marker Lights, License Plate Light.
- ③ - 8 Amp. Left Low Beam.
- ④ - 8 Amp. Right Low Beam.
- ⑤ - 8 Amp. Left High Beam, High Beam Warning Light.
- ⑥ - 8 Amp. Right High Beam.
- ⑦ - 8 Amp. Not Used.
- ⑧ - 8 Amp. Emergency Flasher.
- ⑨ - 16 Amp. Interior Light.
- ⑩ - 16 Amp. Windshield Wiper, Fresh Air Fan, Rear Window Defogger.
- ⑪ - 8 Amp. Safety Belt Warning System, Stop Lights, Brake Warning Light, Horn.
- ⑫ - 8 Amp. Turn Signals, Gauges, Warning Lights, Emission System (EGR).

**Type 2 (Transporter)** - Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Two additional in-line fuses are used as follows: An 8 Amp. fuse, located in engine compartment near ignition coil on manual transmission models, protects the Back-Up Lights. A 16 Amp. fuse, located in engine compartment near blower motor protects the Warm Air Blower. Fuses in block protect the following circuits, left to right:

- ① - 8 Amp. Left Tail Light, Left Rear Marker Light.
- ② - 8 Amp. Right Tail Light, Parking Lights, License Plate Light, Right Rear Side Marker Light, Front Side Marker Lights.
- ③ - 8 Amp. Left Low Beam.
- ④ - 8 Amp. Right Low Beam.
- ⑤ - 8 Amp. Left High Beam, High Beam Indicator.
- ⑥ - 8 Amp. Right High Beam.
- ⑦ - 8 Amp. Accessories.
- ⑧ - 8 Amp. Emergency Flasher, Interior Lights.
- ⑨ - 16 Amp. Accessories.
- ⑩ - 16 Amp. Windshield Wipers, Rear Window Defogger

- ⑪ - 8 Amp. Horn, Stop Lights, Brake Warning Light.
- ⑫ - 8 Amp. Turn Signals Warning Lights, Back-Up Lights.

**Rabbit & Scirocco** - Fuse block is located under instrument panel on left side of vehicle and contains 15 fuses in one centralized unit. Two additional in-line fuses are used as follows: An 8 Amp. fuse located above fuse block, protects Rear Window Wiper. A 16 Amp. fuse located above fuse block, protects Electric Fuel Pump. Circuits protected by fuses in block are:

- ① - 8 Amp. Left Headlight Low Beam.
- ② - 8 Amp. Right Headlight Low Beam.
- ③ - 8 Amp. Left Headlight High Beam and Indicator.
- ④ - 8 Amp. Right Headlight High Beam.
- ⑤ - 16 Amp. Rear Window Defogger.
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ - 8 Amp. Interior Lights, Cigar Lighter.
- ⑧ - 8 Amp. Turn Signal System.
- ⑨ - 8 Amp. Back Up Lights, Shift Console Light, Horn
- ⑩ - 16 Amp. Fresh Air Fan.
- ⑪ - 8 Amp. Windshield Wiper & Washer
- ⑫ - 8 Amp. Luggage Compartment & License Plate Lights.
- ⑬ - 8 Amp. Right Parking, Tail & Side Marker Lights.
- ⑭ - 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ - 16 Amp. Radiator Fan.

**Dasher** - Fuse block is located on the left side behind the dashboard bin and contains 15 fuses. One additional fuse is located above fuse No. 7. A 16 Amp. fuse protects the Fuel Pump Relay. Circuits protected by fuses in the block are, from left to right:

- ① - 8 Amp. Left Low Beam.
- ② - 8 Amp. Right Low Beam.
- ③ - 8 Amp. Left High Beam & Warning Light.
- ④ - 8 Amp. Right High Beam.
- ⑤ - 16 Amp. Rear Window Defogger.
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ - 8 Amp. Cigar Lighter, Clock, Radio, Interior Light.
- ⑧ - 8 Amp. Gauges, Warning Lights, Turn Signal Indicator.
- ⑨ - 8 Amp. Back-Up Lights, Shift Console Light.
- ⑩ - 16 Amp. Fresh Air Fan, Rear Window Defogger (Switch Current)
- ⑪ - 8 Amp. Horn, Windshield Wiper/Washer.
- ⑫ - 8 Amp. License Plate Light.
- ⑬ - 8 Amp. Right Tail, Parking & Side Marker Lights.
- ⑭ - 8 Amp. Left Tail, Parking & Side Marker Lights.
- ⑮ - 16 Amp. Radiator Fan.

## VOLVO

## FUSE BLOCK

**240 Series** – Fuse block is located in front of front left door pillar. Circuits protected are, from top to bottom:

- ① – 16 Amp. Cigar Lighter, Wipers Front & Rear
- ② – 16 Amp. Heater Fan, Horn, Radio
- ③ – 16 Amp. Rear Defogger, Overdrive
- ④ – 8 Amp. Back Up Lights, Air Conditioning
- ⑤ – 8 Amp. Instrument Lights, Turn Signals, Warning Lights, Fuel Injection Relay
- ⑥ – 8 Amp. Stop Lights, Trunk Light, Rear Interior Light
- ⑦ – 16 Amp. Fuel Pump
- ⑧ – 8 Amp. Clock, Glove Box Light, Dome & Hazard Light
- ⑨ – 8 Amp. Seat Belt Warning
- ⑩ – 16 Amp. Spare
- ⑪ – 8 Amp. Side Marker Left, Parking Light, License Light
- ⑫ – 8 Amp. Side Marker Right, Parking & License Light

**260 Series** – Fuse block is located in front of front left door pillar and contains 12 fuses. Circuits protected are, from top to bottom:

- ① – 16 Amp. Cigar Lighter, Wipers Front & Rear
- ② – 16 Amp. Heater Fan, Horn, Radio
- ③ – 16 Amp. Rear Defogger, Overdrive
- ④ – 8 Amp. Back Up Light, A/C, Heated Driver Seat
- ⑤ – 8 Amp. Instrument Lights, Turn Signals, Warning Lights, Fuel Injection Relay, Electric Side Mirrors
- ⑥ – 8 Amp. Stop Lights, Trunk Light, Rear Interior Light
- ⑦ – 16 Amp. Fuel Pump
- ⑧ – 8 Amp. Clock, Glove Box Light, Dome & Hazard Light
- ⑨ – 8 Amp. Seat Belt Warning
- ⑩ – 16 Amp. Window Lifts
- ⑪ – 8 Amp. Side Marker Left, Parking Light, License Light
- ⑫ – 8 Amp. Side Marker Right, Parking Light, License Light