

## VOLVO

## FUSE BLOCK

**240 Series** — Fuse block is located in front of front left door pillar. Circuits protected are, from top to bottom:

- ① — 16 Amp. Cigar Lighter, Wipers Front & Rear
- ② — 16 Amp. Heater Fan, Horn, Radio
- ③ — 16 Amp. Rear Defogger, Overdrive
- ④ — 8 Amp. Back Up Lights, Air Conditioning
- ⑤ — 8 Amp. Instrument Lights, Turn Signals, Warning Lights, Fuel Injection Relay
- ⑥ — 8 Amp. Stop Lights, Trunk Light, Rear Interior Light
- ⑦ — 16 Amp. Fuel Pump
- ⑧ — 8 Amp. Clock, Glove Box Light, Dome & Hazard Light
- ⑨ — 8 Amp. Seat Belt Warning
- ⑩ — 16 Amp. Spare
- ⑪ — 8 Amp. Side Marker Left, Parking Light, License Light
- ⑫ — 8 Amp. Side Marker Right, Parking & License Light

**260 Series** — Fuse block is located in front of front left door pillar and contains 12 fuses. Circuits protected are, from top to bottom:

- ① — 16 Amp. Cigar Lighter, Wipers Front & Rear
- ② — 16 Amp. Heater Fan, Horn, Radio
- ③ — 16 Amp. Rear Defogger, Overdrive
- ④ — 8 Amp. Back Up Light, A/C, Heated Driver Seat
- ⑤ — 8 Amp. Instrument Lights, Turn Signals, Warning Lights, Fuel Injection Relay, Electric Side Mirrors
- ⑥ — 8 Amp. Stop Lights, Trunk Light, Rear Interior Light
- ⑦ — 16 Amp. Fuel Pump
- ⑧ — 8 Amp. Clock, Glove Box Light, Dome & Hazard Light
- ⑨ — 8 Amp. Seat Belt Warning
- ⑩ — 16 Amp. Window Lifts
- ⑪ — 8 Amp. Side Marker Left, Parking Light, License Light
- ⑫ — 8 Amp. Side Marker Right, Parking Light, License Light