

AUDI

FUSE BLOCK

Fox — Fuse block is located on left behind dashboard bin attached to the steering column. It contains 15 fuses arranged horizontally. Circuits protected by the fuses are, from left to right:

- ① — 8 Amp. Low Beam Left.
- ② — 8 Amp. Low Beam Right.
- ③ — 8 Amp. High Beam Left, High Beam Warning Light.
- ④ — 8 Amp. High Beam Right.
- ⑤ — 16 Amp. Rear Window Defogger.
- ⑥ — 8 Amp. Stop Lights, Hazard Flasher.
- ⑦ — 8 Amp. Cig. Lighter, Radio, Clock, Interior Light.
- ⑧ — 8 Amp. Fuel & Temperature Gauge, Warning Lights, Turn Signals, Wiper/Washer (Automatic), EGR System.
- ⑨ — 8 Amp. Back-Up Lights, Shift Console Light.
- ⑩ — 16 Amp. Fresh Air Fan, Rear Window Defogger, Voltmeter.
- ⑪ — 8 Amp. Horn, Windshield Wiper/Washer.
- ⑫ — 8 Amp. License Plate Light.
- ⑬ — 8 Amp. Tail, Parking & Side Marker Lights (Right).
- ⑭ — 8 Amp. Tail, Parking & Side Marker Lights (Left)
- ⑮ — 16 Amp. Radiator Fan.

5000 Models — Fuse block is located in engine compartment left rear corner. Fuses are numbered from 1 to 17, with 17 closest to the front of the car and 1 nearest the rear. Circuits protected are:

- ① — 25 Amp. A/C, Heater Fan, Tachometer
- ② — 8 Amp. Fog Lights
- ③ — 8 Amp. High Beam Headlight, Left
- ④ — 8 Amp. High Beam Headlight, Right
- ⑤ — 16 Amp. Fuel Pump
- ⑥ — 8 Amp. Right Parking, Marker Lights
- ⑦ — 8 Amp. Left Parking, Marker Lights, Engine Comp. Light
- ⑧ — 8 Amp. Instrument Panel, Glove Compartment, License Plate Lights
- ⑨ — 16 Amp. Horn, Instruments, Power Windows, Sunroof
- ⑩ — 25 Amp. Radiator Fan
- ⑪ — 16 Amp. Brake Lights
- ⑫ — 16 Amp. Lighter, Radio, Antenna, Clock, Dome Light
- ⑬ — 8 Amp. Low Beam Headlight, Right
- ⑭ — 8 Amp. Low Beam Headlight, Left
- ⑮ — 16 Amp. Back-up Lights, Wipers
- ⑯ — 25 Amp. Rear Window Defogger
- ⑰ — Flashers

BMW

FUSE BLOCK

320i — Fuse block is located at left front corner of engine compartment. Fuses are arranged in 6 rows of 3, with first row toward battery. Number 1 fuse is next to front relay. Protected circuits are:

- ① — 8 Amp. Right Fog Light
- ② — 8 Amp. Left Fog Light
- ③ — 16 Amp. Fuel Pump
- ④ — 8 Amp. Right Low Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Dash Lights, Right Park and Taillights, Hood Light
- ⑦ — 16 Amp. High Beam
- ⑧ — 16 Amp. High Beam
- ⑨ — 8 Amp. Left Park and Taillights
- ⑩ — 25 Amp. Defogger
- ⑪ — 25 Amp. Heater Fan, A/C Fan
- ⑫ — 8 Amp. Brake Lights, Glove Box, Radio
- ⑬ — 25 Amp. Auxiliary Fan
- ⑭ — 16 Amp. Backup Lights, Gauges & Warning Lights, Ignition Vacuum Advance Circuit
- ⑮ — 16 Amp. Horn, Wipers, Washers
- ⑯ — 16 Amp. Lighter
- ⑰ — 8 Amp. Turn Signals, Hazard Flashers, Clock, Buzzers
- ⑱ — Spare

528i, 633CSi and 733i — All models have fuse block at left front corner of engine compartment. Fuses are located in 3 rows with 6 in first row, 8 in second row, and 2 or 3 in third row. Fuses are numbered from center of car toward left side, and protect the following circuits:

- ① — 8 Amp. (528i), 16 Amp. (633CSi and 733i) Fuel Pump, Emission Controls
- ② — 8 Amp. Right Low Beam
- ③ — 8 Amp. Left Low Beam
- ④ — 16 Amp. Lighter
- ⑤ — 8 Amp. Door Locks, Courtesy Lights, Turn Signals (Exc. 528i), Hazard Flashers
- ⑥ — 8 Amp. Backup Lights, Gauges, Buzzers, Power Windows
- ⑦ — 8 Amp. Right High Beam
- ⑧ — 8 Amp. Left High Beam
- ⑨ — 8 Amp. Right Parking and Marker Lights, Instrument Panel and Console Lights
- ⑩ — 8 Amp. Left Parking and Marker Lights
- ⑪ — 16 Amp. Wipers, Washers, Power Mirrors, Turn Signals (528i)
- ⑫ — 8 Amp. Brake Lights, Radio, Safety Check Panel
- ⑬ — 16 Amp. Defogger, Sun Roof
- ⑭ — 25 Amp. A/C, Heater Fan, Auxiliary Fan Relay
- ⑮ — 8 Amp. Right Fog Light
- ⑯ — 8 Amp. Left Fog Light
- ⑰ — 25 Amp. (2 on 633CSi and 733i) Auxiliary Fan