

CHRYSLER CORP. IMPORTS

FUSE BLOCK

Arrow — Fuse block is located on left kick panel. Fuse circuits and ratings are listed on cover. Fuses are numbered from front to rear, top row first, then bottom. Circuits protected are as follows:

- ① — 10 Amp. Right High Beam
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Taillights, Marker Lights, License
- ④ — 5 Amp. Parking Lights
- ⑤ — 15 Amp. Defogger
- ⑥ — 10 Amp. Back-up Lights
- ⑦ — 10 Amp. Voltage Regulator, Turn Signals
- ⑧ — 10 Amp. Right Low Beam
- ⑨ — 10 Amp. Left Low Beam
- ⑩ — 15 Amp. Radio, Horn, Lighter
- ⑪ — 15 Amp. Wiper, Washer
- ⑫ — 15 Amp. Heater, Air Conditioner
- ⑬ — 15 Amp. Hazard Flashers, Stop Lights
- ⑭ — 5 Amp. Dome, Buzzer, Indicators

Arrow Pickup, Dodge D50 Pickup — Fuse block is located beneath instrument panel on left side. Fuses are numbered with first fuse at bottom right side of block and last fuse on top left. Circuits protected are:

- ① — 15 Amp. High Beams
- ② — 15 Amp. Low Beams
- ③ — 15 Amp. Heater, Windshield Washer
- ④ — 15 Amp. Wipers, Radio, Lighter
- ⑤ — 15 Amp. Taillights, Parking Lights
- ⑥ — 15 Amp. Stop Lights, Dome
- ⑦ — 15 Amp. Hazard Flashers
- ⑧ — 15 Amp. Turn Signal, Backup Lights

Challenger, Sapporo — Fuse block is underneath dash on driver's side. Fuses are arranged in one row with first fuse to right side. A check lamp system is provided. With ignition "ON" headlight switch at first position, check light should come on for each circuit as knob is moved along top of fuse panel. If light is not lit, fuse is blown. Be sure to return knob to rest position to avoid draining battery. Circuits protected are:

- ① — 15 Amp. Stop Lights, Dome
- ② — 15 Amp. Hazard Flashers, Courtesy Lights
- ③ — 20 Amp. Defogger
- ④ — 15 Amp. Taillights, Instrument Lights
- ⑤ — 15 Amp. Heater, A/C, Horn
- ⑥ — 15 Amp. Wiper, Washers
- ⑦ — 15 Amp. Lighter, Radio

- ⑧ — 10 Amp. Turn Signals, Dash Warning Lights
- ⑨ — 10 Amp. Backup Lights
- ⑩ — 10 Amp. Voltage Regulator

Champ, Colt Hatchback — Fuse block is located beneath instrument panel on left side. Fuses are numbered from right to left, and protect the following circuits:

- ① — 15 Amp. Backup Lights, Gauges, Defogger
- ② — 15 Amp. Wipers, Washers
- ③ — 15 Amp. Turn Signals, Indicators
- ④ — 15 Amp. Lighter, Radio
- ⑤ — 15 Amp. Heater
- ⑥ — 15 Amp. Hazard Flashers, Dome Light
- ⑦ — 15 Amp. Stop Lights
- ⑧ — 15 Amp. Taillights, Parking Lights
- ⑨ — 15 Amp. Low Beams
- ⑩ — 15 Amp. High Beams

Colt Coupe and Sedan — Fuse block is located underneath dashboard on driver's side. Fuses are numbered from right to left and protect the following circuits:

- ① — 15 Amp. Lighter, Radio, Horn
- ② — 15 Amp. Wipers, Washers, Gauges
- ③ — 10 Amp. High Beams
- ④ — 10 Amp. Low Beams
- ⑤ — 5 Amp. Dome, Meter
- ⑥ — 15 Amp. Stop Lights, Hazard Flashers
- ⑦ — 15 Amp. Defogger
- ⑧ — 15 Amp. Heater
- ⑨ — 15 Amp. Turn Signals, Backup, Voltage Regulator
- ⑩ — 15 Amp. Taillights, Parking Lights

Colt Station Wagon — Fuse block is underneath dash on driver's side. Fuses are arranged in order with first fuse to right side. A check lamp system is provided. With headlights and ignition "ON", check light should come on for each circuit as knob is moved across top of panel. If light is not lit, fuse is blown. Be sure to return check knob to rest position to avoid draining battery. Fuses protect circuits as listed:

- ① — 15 Amp. Stop, Dome, Seat Belt Warning
- ② — 15 Amp. Hazard Flashers
- ③ — 15 Amp. Heater, A/C, Horn
- ④ — 15 A. Wipers, Washers
- ⑤ — 15 Amp. Radio, Lighter
- ⑥ — 15 Amp. Taillights, Meter
- ⑦ — 15 Amp. Defogger
- ⑧ — 15 Amp. Turn Signals, Gauges
- ⑨ — 10 Amp. Backup Lights
- ⑩ — 10 Amp. Voltage Regulator

COURIER

FUSE BLOCK

Fuse block is located in engine compartment on left side near windshield. Fuses are numbered with first fuse in back row toward outside, and last fuse in front row toward engine. Fuses and circuits protected are:

- ① — 15 Amp. Horn, Stop Lights, Hazard Warning Flasher, Interior Light, Cigar Lighter.
- ② — 15 Amp. Hood & Glove Box Light, Electric Rear Window Defroster.

- ③ — Blank
- ④ — 15 Amp. Headlights (High Beam).
- ⑤ — 15 Amp. Headlights (Low Beam).
- ⑥ — 10 Amp. Tail, License, Front Parking, Front Side Marker, Instrument Lights.
- ⑦ — 10 Amp. Windshield Wipers/Washers.
- ⑧ — 15 Amp. Heater/Defroster Blower Motor, Radio.
- ⑨ — 10 Amp. Front & Rear Turn Signal Lights, Fasten Seat Belt, Oil Pressure & Brake Warning Lights, Fuel Gauge, Temperature Gauge, Back-Up Lights.
- ⑩ — 15 Amp. Engine.