

## DATSUN

### FUSE BLOCK

**200SX** — Fuse block is located under the dash on the left side. It contains 5 fuses which protect various circuits. A single, 20 Amp. inline fuse protects the air conditioner circuit.

- ① — 10 Amp. Parking Lights, Tail Lights
- ② — 15 Amp. Headlights
- ③ — 15 Amp. Heater, Wipers, Washers
- ④ — 20 Amp. Radio, Defogger
- ⑤ — 15 Amp. Stop Lights, Flashers, Horn

**210** — Fuse block is located on left kick panel under hood release handle. A single inline fuse of 20 Amp. capacity protects the air conditioner circuit, while 8 fuses in the block protect the following circuits:

- ① — 10 Amp. Wipers, Washers
- ② — 15 Amp. Horn, Lighter
- ③ — 15 Amp. Stop Lights, Courtesy Lights
- ④ — 15 Amp. Taillights
- ⑤ — 15 Amp. Heater, Radio
- ⑥ — 10 Amp. Engine
- ⑦ — 10 Amp. Flashers, Meter
- ⑧ — 20 Amp. Defogger

**280ZX** — Fuse block is located in right kick panel and contains 12 fuses, which protect the following circuits:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 20 Amp. Stop Lights, Horn
- ④ — 15 Amp. Marker Lights, Taillights
- ⑤ — 10 Amp. Courtesy Lights
- ⑥ — 20 Amp. Hazard Flashers
- ⑦ — 20 Amp. Air Conditioner
- ⑧ — 10 Amp. Radio
- ⑨ — 15 Amp. Wipers, Washers
- ⑩ — 10 Amp. Turn Signals
- ⑪ — 10 Amp. Gauges
- ⑫ — 20 Amp. Defogger

**310** — Fuse block is mounted on left kick panel below hood release handle. Circuits protected are:

- ① — 10 Amp. Defogger
- ② — 10 Amp. Voltage Regulator, Fuel Cut-Off
- ③ — 10 Amp. Turn Signals, Backup Light, Gauge Lights
- ④ — 10 Amp. Radiator Fan Motor
- ⑤ — 10 Amp. Heater, A/C, Radio
- ⑥ — 10 Amp. A/C Fan Motor

- ⑦ — 10 Amp. Right Taillight, Dash Light
- ⑧ — 10 Amp. Left Taillight, License Plate Light
- ⑨ — 10 Amp. Stop Lights, Clock
- ⑩ — 10 Amp. Hazard Flashers, Courtesy Lights
- ⑪ — 10 Amp. Wipers, Washers
- ⑫ — 10 Amp. Horn
- ⑬ — 10 Amp. Lighter

**510** — Fuse block is located under instrument panel near hood release handle. A separate 20 Amp. inline fuse protects the air conditioner circuit. Circuits protected through the fuse block include:

- ① — 15 Amp. Horn, Lighter
- ② — 15 Amp. Stop Lights, Courtesy Lights
- ③ — 15 Amp. Taillights
- ④ — 15 Amp. Heater, Radio
- ⑤ — 10 Amp. Wipers, Washers
- ⑥ — 10 Amp. Engine Controls
- ⑦ — 10 Amp. Flashers, Meter
- ⑧ — 20 Amp. Defogger

**810** — Fuse block is located behind cover in right kick panel. A single 20 Amp. inline fuse protects air conditioner, while the following circuits are protected through fuse block:

- ① — 20 Amp. Stop Lights, Horn
- ② — 10 Amp. Courtesy Lights
- ③ — 10 Amp. Taillights, Side Marker Lights
- ④ — 15 Amp. Heater, Radio
- ⑤ — 10 Amp. Wipers, Washers
- ⑥ — 10 Amp. Lights
- ⑦ — 5 Amp. Engine Solenoid
- ⑧ — 10 Amp. Flashers, Meter
- ⑨ — 20 Amp. Defogger

**Pickup** — Fuse block is beneath headlight switch, under left side of dash. Two inline fuses (each 15 Amp.) protect the air conditioner, lighter and clock. Fuses in the fuse block protect the following circuits:

- ① — 10 Amp. Automatic Choke
- ② — 15 Amp. Wipers, Washers, Heater
- ③ — 10 Amp. Gauges, Warning Lights, Back-up Lights
- ④ — 10 Amp. Parking Lights, Taillights
- ⑤ — 15 Amp. Headlights
- ⑥ — 15 Amp. Horn, Stop Lights, Hazard Flashers

### FUSIBLE LINK

**All Models** — Fusible link is located in wire between battery and alternator near the battery. Its purpose is to protect the alternator and related circuits.

## FIAT

### FUSE BLOCK

**128 (Except 3P Coupe)** — Fuse block is located to left of steering column under dash. A separate 8 Amp. fuse protects fuel pump, and another inline fuse of 16 Amp. protects Defogger and Lighter. Fuses in block protect the following circuits (numbered from right to left):

- ① — 8 Amp. Gauges, Back-up, Stop, and Turn Lamps, Washers, Wipers, Defogger Relay

- ② — 16 Amp. Horn, Courtesy Lights, Hazard Flashers, Engine Fan
- ③ — 8 Amp. Left High Beam, High Beam Indicator
- ④ — 8 Amp. Right High Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Right Low Beam
- ⑦ — 8 Amp. Parking and Marker Lights (Left Front and Right Rear), Dashboard Lights
- ⑧ — 8 Amp. Parking and Marker Lights (Right Front and Left Rear)

## FIAT (Cont.)

**128 3P Coupe** — Fuse block is underneath dash to left of steering column. A separate inline fuse (8 Amp.) protects fuel pump and relay. Circuits protected through fuse block are numbered from left to right and include:

- ① — 8 Amp. Stop Lights, Backup Lights, Wipers, Washers, Ignition Retard Electrovalve
- ② — 8 Amp. Gauges, Warning Lights, Engine Solenoid
- ③ — 8 Amp. Left High Beam, High Beam Indicator
- ④ — 8 Amp. Right High Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Right High Beam
- ⑦ — 8 Amp. Left Front and Right Rear Parking and Marker Lights
- ⑧ — 8 Amp. Left Rear and Right Front Parking and Marker Lights, Dashboard Illumination
- ⑨ — 16 Amp. Horn, Engine Fan, Courtesy Lights
- ⑩ — 16 Amp. Defogger, Lighter, Belts Buzzer

**Brava** — Fuse block is positioned in box underneath glove compartment. Fuses are numbered from right to left (1-12 in bottom row, 13 and 14 in top row) and protect the following circuits:

- ① — 8 Amp. Left Front and Right Rear Tail and Marker Lights, Instrument Panel Illumination
- ② — 8 Amp. Left Rear and Right Front Tail and Marker Lights, License Plate Lights
- ③ — 16 Amp. Optional Accessory Circuit
- ④ — 8 Amp. Wipers, Washers
- ⑤ — 8 Amp. Stop and Backup Lights, Gauges, Heater Fan, A/C Relay, Defogger Relay, Warning Buzzers
- ⑥ — 16 Amp. A/C Condenser Motor
- ⑦ — 16 Amp. A/C Compressor, Fast Idle Electrovalve
- ⑧ — 16 Amp. Defogger, Hazard Flashers
- ⑨ — 8 Amp. Clock, Courtesy Lights, Lighter, Antenna
- ⑩ — 16 Amp. Horns, Engine Fan Motor
- ⑪ — 8 Amp. Left Low Beam
- ⑫ — 8 Amp. Right Low Beam
- ⑬ — 8 Amp. Left High Beam, High Beam Indicator
- ⑭ — 8 Amp. Right High Beam

**Spider 2000** — Fuse block is placed under dash on left side of steering column. One fuse (8 Amp.) is located in separate inline holder and powers Lighter. Other fuses in block are numbered from right to left and protect the following circuits:

- ① — 8 Amp. Turn and Stop Lights, Gauges, Warning Lights
- ② — 8 Amp. Wipers, Washers, Heater Fan
- ③ — 8 Amp. Left High Beam, High Beam Indicator
- ④ — 8 Amp. Right High Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Right Low Beam
- ⑦ — 8 Amp. Right Front and Left Rear Parking and Marker Lights

- ⑧ — 8 Amp. Left Front and Right Rear Parking and Marker Lights, Trunk Light, Dashboard Illumination
- ⑨ — 25 Amp. Clock, Hazard Flashers, Courtesy Lights, Buzzers
- ⑩ — 16 Amp. Horns, Engine Fan
- ⑪ — 16 Amp. Optional Left Power Window
- ⑫ — 16 Amp. Optional Right Power Window

**Strada** — Fuse block is under dashboard on left side. All fuses are in the fuse block and are numbered right to left, protecting these circuits:

- ① — 16 Amp. Horns, Engine Fan
- ② — 8 Amp. Left Low Beam
- ③ — 8 Amp. Right Low Beam
- ④ — 8 Amp. Left High Beam, High Beam Indicator
- ⑤ — 8 Amp. Right High Beam
- ⑥ — 8 Amp. Wipers, Washers
- ⑦ — 8 Amp. Stop and Backup Lights, Heater Fan, Defogger Relay, Instruments, Dash Lights, Turn Signals
- ⑧ — 8 Amp. Left Rear and Right Front Parking and Marker Lights
- ⑨ — 8 Amp. Right Rear and Left Front Parking and Marker Lights, Instrument Lights, License Plate Light
- ⑩ — 8 Amp. Clock, Courtesy Lights, Buzzers, Lighter
- ⑪ — 16 Amp. Hazard Flashers, Defogger

**X1/9** — Fuse block is located in swing-down panel below glove compartment. One inline (8 Amp.) fuse protects Lighter, Clock, Courtesy Lights, and Buzzers. All other fuses are in block, numbered from left to right:

- ① — 8 Amp. Turn Signals, Stop Lights, Heater Fan, Gauges, Washers, Wipers, Backup Lights, Engine Relay, Dash Lights
- ② — 8 Amp. Carburetor Fan and Relay
- ③ — 8 Amp. Left High Beam, High Beam Indicator
- ④ — 8 Amp. Right High Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Right Low Beam
- ⑦ — 8 Amp. Left Front and Right Rear Parking and Marker Lights
- ⑧ — 8 Amp. Right Front and Left Rear Parking and Marker Lights, License Plate
- ⑨ — 16 Amp. Right Headlight Motor
- ⑩ — 16 Amp. Left Headlight Motor
- ⑪ — 16 Amp. Defogger, Hazard Flashers
- ⑫ — 16 Amp. Engine Fan, Horns
- ⑬ — 16 Amp. Spare
- ⑭ — 3 Amp. Spare
- ⑮ — 3 Amp. Headlight Closing Switch
- ⑯ — 3 Amp. Headlight Opening Switch

## FIESTA

## FUSE BLOCK

Fuse block is located under left side of instrument panel. Additional fuses are located inline to radio (2 Amp.), under cover of Defogger Relay (16 Amp.) and Cooling Fan Relay (16 Amp.). Fuses are numbered from left to right and protect the following circuits:

- ① — 16 Amp. Courtesy Lights, Horn, Flashers, Lighter, Stop Lights

- ② — 8 Amp. Washers, Heater Fan, Backup Lights, Seat Belt
- ③ — 8 Amp. Wipers, Rear Wiper/Washer, Instrument Cluster, Brake Warning, Emission System
- ④ — 8 Amp. Right Marker and Taillights, License Plate Light
- ⑤ — 8 Amp. Gauge Lights, Left Marker and Taillights
- ⑥ — 8 Amp. High Beams
- ⑦ — 8 Amp. Low Beams
- ⑧ — 8 Amp. Cooling Fan
- ⑨ — Blank