

HONDA

FUSE BLOCK

Civic & Civic CVCC — Fuse block is located in front of the right door hinge pillar. Block contains 8 fuses. Circuits protected are, from bottom to top:

- ① — 10 Amp. Voltage Regulator.
- ② — 10 Amp. Windshield Wiper/Washer.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Heater, Radio, Rear Window Defogger.
- ⑤ — 15 Amp. Hazard Warning Light, Horn, Stop Lights.
- ⑥ — 10 Amp. Cig. Lighter, Clock, Interior Lights.
- ⑦ — 15 Amp. Taillights, License Light, Instrument Lights.
- ⑧ — 15 Amp. Headlights.

Accord — Fuse block is located in a swing-down panel to left of steering column. Fuses are arranged in 2 rows. Moving from right to left, short row first, protected circuits are:

- ① — 10 Amp. Right High Beam
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Right Low Beam
- ④ — 10 Amp. Left Low Beam
- ⑤ — 10 Amp. Optional A/C
- ⑥ — 15 Amp. Wipers, Washers
- ⑦ — 10 Amp. Regulator, Fuel Pump
- ⑧ — 10 Amp. Turn Signals, Backup Lights, Fuel Pump
- ⑨ — 20 Amp. Heater
- ⑩ — 15 Amp. Radio, Defogger

- ⑪ — 15 Amp. Taillights, Gauge Lights, License Light
- ⑫ — 10 Amp. Courtesy Light, Clock, Lighter
- ⑬ — 15 Amp. Hazard Flashers, Horn, Stop Lights

Prelude — Fuse block is located in swing-down panel to left of steering column. Fuses are arranged in 2 rows. Moving from right to left, short row first, protected circuits are:

- ① — 10 Amp. Right High Beam, High Beam Indicator
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Right Low Beam
- ④ — 10 Amp. Left Low Beam
- ⑤ — 15 Amp. Heater Fan
- ⑥ — 15 Amp. Defogger, Radio
- ⑦ — Blank for Accessories
- ⑧ — 15 Amp. Wipers, Washers
- ⑨ — 10 Amp. Fuel Pump, Engine Controls
- ⑩ — 10 Amp. Backup Lights, Gauges, Warning Lights, Turn Signals, Buzzers, Sunroof Relay
- ⑪ — 15 Amp. Engine Fan
- ⑫ — 15 Amp. Taillights, Dashboard Lights
- ⑬ — 10 Amp. Courtesy Light, Trunk Light, Clock, Door Buzzer
- ⑭ — 15 Amp. Horn, Brake Lights, Hazard Flashers

IN-LINE FUSES

One or two main fuses are installed near the battery to protect entire electrical system. A spare fuse is provided inside fuse block cover.

JAGUAR

FUSE BLOCK

XJ6 Models — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- ① — 20 Amp. Fog Lights
- ② — 15 Amp. Hazard Warning System
- ③ — 35 Amp. Map & Interior Lights, Cigar Lighter, Clock, Trunk Light
- ④ — 15 Amp. Back Up Lights, Gauges
- ⑤ — 15 Amp. Turn Signals
- ⑥ — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer
- ⑦ — 15 Amp. Instrument Lights
- ⑧ — 15 Amp. Left Side Marker and Tail Lights
- ⑨ — 15 Amp. Right Side Marker and Tail Lights
- ⑩ — 50 Amp. A/C and Heater Relay
- ⑪ — 20 Amp. Windshield Wipers
- ⑫ — 15 Amp. Air Conditioning

XJS Models — Fuse block is located under dashboard on right side. Circuits protected are as follows:

- ① — 25 Amp. Fog Lights
- ② — 15 Amp. Hazard Warning
- ③ — 35 Amp. Map & Interior Lights, Cigar Lighter, Electric Aerial, Clock, Seat Belt Warning Light.
- ④ — 10 Amp. Instrument Lights
- ⑤ — 15 Amp. Turn Signals
- ⑥ — 10 Amp. Back Up Lights

- ⑦ — 10 Amp. Panel Switches, License Light, Trunk Light, Gear Selector Light, Cigar Lighter Light, Fibre Optic Unit
- ⑧ — 10 Amp. Left Side Marker & Tail Lights
- ⑨ — 10 Amp. Right Side Marker & Tail Lights
- ⑩ — 50 Amp. Air Conditioning Motor
- ⑪ — 35 Amp. Windshield Wipers & Washer, Horn Relay, Cooling Fan relay, A/C Relay & Clutch
- ⑫ — 35 Amp. Heated Back Light

XJ12 — Fuse block is located behind dash panel on lower left side. Headlight fuses are located in separate fuse blocks mounted on each side of front crossmember in engine compartment. High beams use a 25 Amp. fuse; low beams use 10 Amp. Fuses in main panel protect the following circuits:

- ① — 20 Amp. Fog Lights
- ② — 15 Amp. Hazard Flashers
- ③ — 35 Amp. Clock, Lighter, Courtesy Lights, Antenna
- ④ — 15 Amp. Backup Lights, Instrument
- ⑤ — 15 Amp. Turn Signals
- ⑥ — 35 Amp. Brake Lights, Horn Relay, Radiator Fan Relay, Engine Controls, Washers
- ⑦ — 15 Amp. Panel Lights
- ⑧ — 15 Amp. Left Marker and Taillights
- ⑨ — 15 Amp. Right Marker and Taillights
- ⑩ — 50 Amp. A/C and Heater Relay
- ⑪ — 50 Amp. A/C Controls, Compressor, Wipers
- ⑫ — 35 Amp. Defogger

IN-LINE FUSES

Head Lights — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

Horn Relay — Circuit is protected by a 35 Amp. in-line fuse.

LUV**FUSE BLOCK**

Fuse block is located in engine compartment on left inner valance panel. Fuse block contains 6 fuses and 4 spares. Circuits protected by fuses are as follows:

- ① – 15 Amp. Tail Lights, Instrument Lights

- ② – 15 Amp. Turn Signals, Stop Lights, Horn
- ③ – 15 Amp. Dome Light, Air Conditioning
- ④ – 15 Amp. Heater, Back Up Lights
- ⑤ – 15 Amp. Fuel Pump, Voltage Regulator
- ⑥ – 15 Amp. Radio, Windshield Wiper & Washer, Cigar Lighter

MAZDA**FUSE BLOCK**

626 – Fuse block is located beneath dashboard on left side of steering column. Fuse capacities and circuits protected are marked on fuse block cover.

GLC – The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① – 15 Amp. Horn, Stop & Turn Signal Lights.
- ② – 15 Amp. Interior Light, Cigar Lighter, Clock, Key Reminder Buzzer.
- ③ – 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Lights.
- ④ – Not Used.
- ⑤ – Not Used.
- ⑥ – 10 Amp. Rear Window Defogger.
- ⑦ – 10 Amp. Wipers, Washers
- ⑧ – 15 Amp. Rear Wiper, Washer, Heater
- ⑨ – 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Indicator.
- ⑩ – 10 Amp. Hazard Warning Lights, Choke Switch, Regulator

Pickup – Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① – 15 Amp. Horn, Stop Lights, Interior Light, Cigar Lighter, Hazard Flashers
- ② – 10 Amp. Front Parking Lights, Side Lights, License Light, Tail Lights, Instrument Panel Lights
- ③ – 10 Amp. Back Up Lights, Warning Lights, Fuel Gauge, Water Temperature Gauge, Turn Signals
- ④ – 15 Amp. Choke Switch, Voltage Regulator, Fuel Pump, Fuel Cut
- ⑤ – 15 Amp. Heater, Radio
- ⑥ – 10 Amp. Windshield Wipers & Washer

RX-7 – Fuse Panel is located beneath instrument panel on left side near kick panel. Starting from top row, right side and moving to left, circuits protected are:

- ① – 10 Amp. Hazard Flashers
- ② – 10 Amp. Dash Lights, Taillights, Marker Lights
- ③ – 15 Amp. Courtesy Light, Lighter, Hatch Release, Buzzer
- ④ – 15 Amp. Horn, Stop Lights
- ⑤ – 20 Amp. Defogger, A/C Compressor
- ⑥ – 10 Amp. Wipers, Washers
- ⑦ – 20 Amp. Heater, Radio
- ⑧ – 10 Amp. Gauges, Indicator Lights, Backup Lights
- ⑨ – 15 Amp. Kick-Down, Regulator
- ⑩ – 20 Amp. Ignition, Emission Controls, Fuel Pump

IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ**FUSE BLOCK**

All (Exc. 450 SL & SLC) – Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

450 SL & SLC – Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

MG**FUSE BLOCK**

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ② – 35 Amp. One Parking Light, One Tail Light, One Licence Plate Light, One Front & Rear Side Marker Light.
- ③ – 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights.
- ④ – 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter.

IN-LINE FUSES

Auxiliary Equipment – A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Fan Thermostat – A 35 Amp. in-line fuse protects the fan thermostat circuit.

Hazard Warning – A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

Radio – A separate additional in-line fuse protects Radio.