

LUV

FUSE BLOCK

Fuse block is located in engine compartment on left inner valance panel. Fuse block contains 6 fuses and 4 spares. Circuits protected by fuses are as follows:

- ① – 15 Amp. Tail Lights, Instrument Lights

- ② – 15 Amp. Turn Signals, Stop Lights, Horn
- ③ – 15 Amp. Dome Light, Air Conditioning
- ④ – 15 Amp. Heater, Back Up Lights
- ⑤ – 15 Amp. Fuel Pump, Voltage Regulator
- ⑥ – 15 Amp. Radio, Windshield Wiper & Washer, Cigar Lighter

MAZDA

FUSE BLOCK

626 – Fuse block is located beneath dashboard on left side of steering column. Fuse capacities and circuits protected are marked on fuse block cover.

GLC – The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① – 15 Amp. Horn, Stop & Turn Signal Lights.
- ② – 15 Amp. Interior Light, Cigar Lighter, Clock, Key Reminder Buzzer.
- ③ – 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Lights.
- ④ – Not Used.
- ⑤ – Not Used.
- ⑥ – 10 Amp. Rear Window Defogger.
- ⑦ – 10 Amp. Wipers, Washers
- ⑧ – 15 Amp. Rear Wiper, Washer, Heater
- ⑨ – 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Indicator.
- ⑩ – 10 Amp. Hazard Warning Lights, Choke Switch, Regulator

Pickup – Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① – 15 Amp. Horn, Stop Lights, Interior Light, Cigar Lighter, Hazard Flashers
- ② – 10 Amp. Front Parking Lights, Side Lights, License Light, Tail Lights, Instrument Panel Lights
- ③ – 10 Amp. Back Up Lights, Warning Lights, Fuel Gauge, Water Temperature Gauge, Turn Signals
- ④ – 15 Amp. Choke Switch, Voltage Regulator, Fuel Pump, Fuel Cut
- ⑤ – 15 Amp. Heater, Radio
- ⑥ – 10 Amp. Windshield Wipers & Washer

RX-7 – Fuse Panel is located beneath instrument panel on left side near kick panel. Starting from top row, right side and moving to left, circuits protected are:

- ① – 10 Amp. Hazard Flashers
- ② – 10 Amp. Dash Lights, Taillights, Marker Lights
- ③ – 15 Amp. Courtesy Light, Lighter, Hatch Release, Buzzer
- ④ – 15 Amp. Horn, Stop Lights
- ⑤ – 20 Amp. Defogger, A/C Compressor
- ⑥ – 10 Amp. Wipers, Washers
- ⑦ – 20 Amp. Heater, Radio
- ⑧ – 10 Amp. Gauges, Indicator Lights, Backup Lights
- ⑨ – 15 Amp. Kick-Down, Regulator
- ⑩ – 20 Amp. Ignition, Emission Controls, Fuel Pump

IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ

FUSE BLOCK

All (Exc. 450 SL & SLC) – Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

450 SL & SLC – Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

MG

FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light.
- ② – 35 Amp. One Parking Light, One Tail Light, One Licence Plate Light, One Front & Rear Side Marker Light.
- ③ – 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights.
- ④ – 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter.

IN-LINE FUSES

Auxiliary Equipment – A 35 Amp. in-line fuse located above fuse block (MG Midget) or below fuse block (MGB) protects Windshield Wipers/Washer, Heater Blower Motor, and Radio.

Fan Thermostat – A 35 Amp. in-line fuse protects the fan thermostat circuit.

Hazard Warning – A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

Radio – A separate additional in-line fuse protects Radio.

PORSCHÉ (Cont.)

928 — Fuse block is located in the passenger foot well and contains 34 fuses and 22 relays. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp. Fog Lights
- 2 — Not Connected
- 3 — 8 Amp. License Light, Engine Compartment Light
- 4 — 8 Amp. Switch Illumination Light
- 5 — 8 Amp. Cigar Lighter, Instrument Lights
- 6 — 16 Amp. Windshield Wipers
- 7 — 8 Amp. Rear Window Wipers
- 8 — 8 Amp. Sliding Roof
- 9 — 8 Amp. Back Up Lights, Outside Mirror
- 10 — 8 Amp. Brake Lights, Automatic Speed Control
- 11 — 8 Amp. Left Side Instrument Warning Lights
- 12 — 8 Amp. Right Side Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp. Power Seats
- 15 — 16 Amp. Power Antenna
- 16 — 25 Amp. Electric Radiator Fan
- 17 — 25 Amp. Heater, Air Conditioning Blower
- 18 — 25 Amp. Rear Window Defogger
- 19 — 25 Amp. Headlight Motor
- 20 — 16 Amp. Headlight Washer
- 21 — 25 Amp. Power Windows
- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

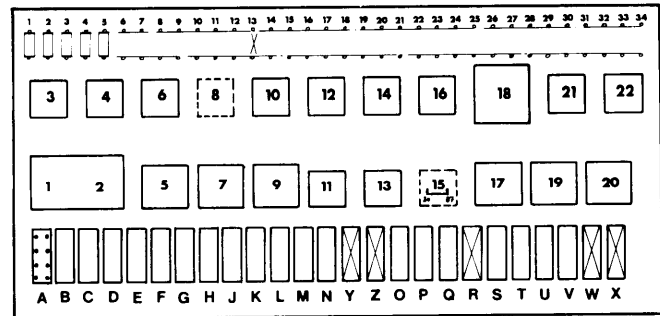


Fig. 4 Porsche 928 Fuse and Relay Block

Relay circuits are located below the fuses on the block.

- 1 — 2 — Rear Defogger
- 3 — Headlight Motor Control Relay
- 4 — Main Headlight Power Supply Relay
- 5 — Turn Signal Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Occupied
- 9 — Seat Belt Time Relay
- 10 — Horns
- 11 — A/C Compressor
- 12 — Fog Lights
- 13 — Headlight Beam Power Supply Relay
- 14 — High/Low Beam Relay
- 15 — Bridge
- 16 — Safety Relay Headlights
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for Air Conditioning
- 19 — Wiper Intermittent
- 20 — Intensive Cleaner Pump
- 21 — Heating and Air Conditioning Blower
- 22 — Defroster

RENAULT

FUSE BLOCK

LeCar — Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- ① — 5 Amp. Left Side Parking Lights, Dash Lights

- ② — 5 Amp. Right Parking Lights
- ③ — 8 Amp. Wipers, Washers
- ④ — 5 Amp. Lighter, Courtesy Light
- ⑤ — 8 Amp. Heater Fan, Radio
- ⑥ — 5 Amp. Turn Signals
- ⑦ — Blank
- ⑧ — 16 Amp. Backup Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Speed Sensor

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.