

OPEL

FUSE BLOCK

Fuse block is located on the right side kick panel. Block contains 13 fuse positions and four spare fuses. Circuits protected are as follows:

- ① - 10 Amp. High Beam Headlights
- ② - 15 Amp. Windshield Wiper/Washer, Radio.
- ③ - 15 Amp. Horn, Turn Signals.
- ④ - 15 Amp. Rear Window Defogger.
- ⑤ - 15 Amp. Cig. Lighter, Interior Light.
- ⑥ - 15 Amp. Air Conditioning.
- ⑦ - 15 Spare Circuit.

- ⑧ - 10 Amp. Headlights Low Beam.
- ⑨ - 10 Amp. Instrument Lights, Emission Control System
- ⑩ - 15 Amp. Ignition Coil, Voltage Regulator, Fuel Pump
- ⑪ - 15 Amp. Heater, Back-Up Lights.
- ⑫ - 15 Amp. Lighting Switch.
- ⑬ - 15 Amp. Taillights.

FUSIBLE LINKS

Fusible links and in-line fuses are utilized throughout the wiring system to prevent short circuits. Main fusible link is located near the battery.

PEUGEOT

FUSE BLOCK

504 - Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- ① - 10 Amp. Turn Signals, Gauges, Accessories
- ② - 10 Amp. Clock, Courtesy Lights, Trunk Light, Horn, Lighter, Hazard Flashers
- ③ - 15 Amp. Power Windows
- ④ - 15 Amp. Heater Fan, Defogger, Wipers, Washers
- ⑤ - 10 Amp. Engine Fan, Stop and Backup Lights, Starter Switch
- ⑥ - 15 Amp. Marker and License Lights, Panel Lights

604 - Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and numbered from left to right, top row first. Protected circuits are:

- ① - 10 Amp. Lighter, Horns, Flashers, Courtesy Light
- ② - 10 Amp. Stop and Backup Lights, Gauges, Indicator Lights, Starter Switch
- ③ - 16 Amp. Defogger, Indicator Lights, Accessories
- ④ - 16 Amp. A/C Fan, Wipers, Washers, Sunroof
- ⑤ - 10 Amp. Parking and Marker Lights, Dash Lights
- ⑥ - 16 Amp. Heater Fan and A/C Compressor Relays
- ⑦ - 16 Amp. Power Windows
- ⑧ - 16 Amp. Rear Window Lockout

PORSCHE

FUSE BLOCK

924 - Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- ① - 8 Amp. Left Headlight (Low Beam)
- ② - 8 Amp. Right Headlight (Low Beam).
- ③ - 8 Amp. Left Headlight (High Beam).
- ④ - 8 Amp. Right Headlight (High Beam).
- ⑤ - 16 Amp. Additional Headlights.
- ⑥ - 8 Amp. Interior Lights, Retractable Headlights.
- ⑦ - 8 Amp. Emergency Flashers, Clock
- ⑧ - 8 Amp. Turn Signal Indicators
- ⑨ - 8 Amp. Backup Lights, Rear Wiper, Mirrors
- ⑩ - 8 Amp. Fresh Air Blower.
- ⑪ - 8 Amp. Windshield Wipers.
- ⑫ - 8 Amp. License Plate & Luggage Compartment Lights.
- ⑬ - 8 Amp. Side Marker Light (Right)
- ⑭ - 8 Amp. Side Marker Light (Left).
- ⑮ - 16 Amp. Fan, Fog Lights.
- ⑯ - 8 Amp. Horn
- ⑰ - 16 Amp. Fuel Pump
- ⑱ - 16 Amp. Engine Fan, Antenna
- ⑲ - 25 Amp. Defogger
- ⑳ - 16 Amp. A/C Condenser Fan
- ㉑ - 25 Amp. A/C Compressor, Fresh Air Fan
- ㉒ - Blank
- ㉓ - 25 Amp. Power Windows
- ㉔ - Blank

911SC & Turbo Models - Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in the engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window Defogger and Wiper Return (25 Amp.). Main fuses, numbered from front of car to rear, protect the following circuits:

- 1 - 16 Amp. Fog Lamps
- 2 - 5 Amp. License Plate Light
- 3 - 5 Amp. Right Front and Rear Parking Lights.
- 4 - 5 Amp. Left Front and Rear Parking Lights.
- 5 - 8 Amp. Right Headlight Low Beam.
- 6 - 8 Amp. Left Headlight Low Beam.
- 7 - 8 Amp. Right Headlight High Beam.
- 8 - 8 Amp. Left Headlight High Beam, High Beam Indicator.
- 9 - 5 Amp. Right Front Flasher Light.
- 10 - 5 Amp. Left Front Flasher Light.
- 11 - 16 Amp. Flasher Relay, Stop and Backup Lights, Speed Control
- 12 - 25 Amp. Defogger Indicator and Relay, Fresh Air Blower
- 13 - 25 Amp. Windseld Wiper, Washer
- 14 - 25 Amp. Sunroof, Mirrors, Rear Wiper
- 15 - 16 Amp. Cigar Lighter, Blower Switch Control Light.
- 16 - 25 Amp. Fuel Pump
- 17 - 16 Amp. Emergency Flasher.
- 18 - 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock.
- 19 - 16 Amp. Headlight Washer.
- 20 - 25 Amp. Blower for Air Conditioner.
- 21 - 25 Amp. Power Windows