

PORSCHÉ (Cont.)

928 — Fuse block is located in the passenger foot well and contains 34 fuses and 22 relays. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp. Fog Lights
- 2 — Not Connected
- 3 — 8 Amp. License Light, Engine Compartment Light
- 4 — 8 Amp. Switch Illumination Light
- 5 — 8 Amp. Cigar Lighter, Instrument Lights
- 6 — 16 Amp. Windshield Wipers
- 7 — 8 Amp. Rear Window Wipers
- 8 — 8 Amp. Sliding Roof
- 9 — 8 Amp. Back Up Lights, Outside Mirror
- 10 — 8 Amp. Brake Lights, Automatic Speed Control
- 11 — 8 Amp. Left Side Instrument Warning Lights
- 12 — 8 Amp. Right Side Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp. Power Seats
- 15 — 16 Amp. Power Antenna
- 16 — 25 Amp. Electric Radiator Fan
- 17 — 25 Amp. Heater, Air Conditioning Blower
- 18 — 25 Amp. Rear Window Defogger
- 19 — 25 Amp. Headlight Motor
- 20 — 16 Amp. Headlight Washer
- 21 — 25 Amp. Power Windows
- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

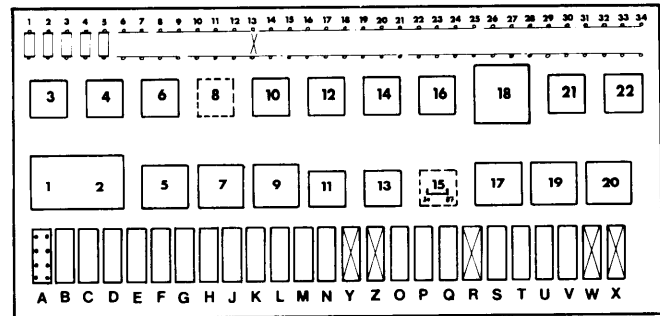


Fig. 4 Porsche 928 Fuse and Relay Block

Relay circuits are located below the fuses on the block.

- 1 — 2 — Rear Defogger
- 3 — Headlight Motor Control Relay
- 4 — Main Headlight Power Supply Relay
- 5 — Turn Signal Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Occupied
- 9 — Seat Belt Time Relay
- 10 — Horns
- 11 — A/C Compressor
- 12 — Fog Lights
- 13 — Headlight Beam Power Supply Relay
- 14 — High/Low Beam Relay
- 15 — Bridge
- 16 — Safety Relay Headlights
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for Air Conditioning
- 19 — Wiper Intermittent
- 20 — Intensive Cleaner Pump
- 21 — Heating and Air Conditioning Blower
- 22 — Defroster

RENAULT

FUSE BLOCK

LeCar — Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- ① — 5 Amp. Left Side Parking Lights, Dash Lights

- ② — 5 Amp. Right Parking Lights
- ③ — 8 Amp. Wipers, Washers
- ④ — 5 Amp. Lighter, Courtesy Light
- ⑤ — 8 Amp. Heater Fan, Radio
- ⑥ — 5 Amp. Turn Signals
- ⑦ — Blank
- ⑧ — 16 Amp. Backup Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Speed Sensor

SAAB

FUSE BLOCK

99 Models — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine com-

partment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

SAAB (Cont.)

900 Models — Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- ① — 8 Amp. Right High Beam
- ② — 8 Amp. Left High Beam
- ③ — 8 Amp. Right Low Beam
- ④ — 8 Amp. Left Low Beam
- ⑤ — 16 Amp. Engine Fan
- ⑥ — 16 Amp. Defogger
- ⑦ — 5 Amp. Interior Lights
- ⑧ — 8 Amp. Fuel Pump
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 5 Amp. Stop Lights
- ⑪ — 16 Amp. A/C Fan
- ⑫ — 5 Amp. Right Parking and Taillights
- ⑬ — 5 Amp. Left Parking and Taillights
- ⑭ — 8 Amp. Horn
- ⑮ — Blank
- ⑯ — 16 Amp. Heated Driver's Seat
- ⑰ — 25 Amp. Heater Fan
- ⑱ — 8 Amp. Spare
- ⑲ — 8 Amp. Warning Lights
- ⑳ — 8 Amp. Turn Signals
- ㉑ — 8 Amp. Wipers
- ㉒ — 8 Amp. Cornering Lights

SUBARU

FUSE BLOCK

The fuse block is located underneath dashboard on left side. The heater is protected by a 15 Amp. inline fuse. All other circuits are fuses through the block. Protected circuits are:

- ① — 15 Amp. High Beams
- ② — 15 Amp. Low Beams
- ③ — 15 Amp. Parking and Taillights
- ④ — 15 Amp. Turn Signals, Backup Lights, Defogger Switch
- ⑤ — 15 Amp. Ignition, Fuel Pump, Gauges
- ⑥ — 15 Amp. Horn, Hazard Flashers, Clock, Courtesy Light, Stop Lights, Windshield Wipers, Washers
- ⑦ — 25 Amp. Rear Wiper, Washer, Heater Fan, Lighter, Radio
- ⑧ — 25 Amp. Lighting Switch

TOYOTA

FUSE BLOCK

Celica and Celica Supra — Main fuse block is located on left side of instrument panel behind cover. Inline fuses protect Courtesy Lights and Clock (5 Amp.), A/C Compressor Clutch (15 Amp.), Ammeter (5 Amp.), and Power Windows (30 Amp.). Inline fuses are located behind left kick panel (Celica Courtesy Lights), near battery (Celica Ammeter), and behind right kick panel (all others). Fuses in main panel protect the following circuits:

- ① — 15 Amp. Front Parking Lights, Front & Rear Side Marker Lights, Tail, License, Glove Box & Instrument Lights.
- ② — 15 Amp. Stop Lights, Hazard Warning Lights
- ③ — 15 Amp. Lighter
- ④ — 20 Amp. Defogger
- ⑤ — 15 Amp. Instrument Warning Lights, Gauges, Heater Relay, Defogger Switch
- ⑥ — 15 Amp. Turn Signal Lights, Windshield Wiper/Washer
- ⑦ — 15 Amp. Engine, Fuel Injection, Main Relay
- ⑧ — 15 Amp. Radio, Tape Player

Corolla — Main fuse block is located on left side of instrument panel. Other fuses are located near the battery in separate holders. These include Horn (10 Amp.), Ammeter (5 Amp.), Discharge Warning Light (5 Amp.). A separate fuse protects the Clock and Interior Lights (5 Amp.) and is located behind the main fuse block. Models with rear window defogger have 2 10 Amp. fuses located behind the left kick panel. Circuits protected through main fuse block include:

- ① — 15 Amp. Stop Lights, Emergency Flasher
- ② — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Tail Lights, License Light
- ③ — 15 Amp. Cigar Lighter
- ④ — 15 Amp. Radio, Stereo Tape Player

- ⑤ — 15 Amp. Heater
- ⑥ — 15 Amp. Turn Signals, Windshield Wiper & Washer
- ⑦ — 15 Amp. Voltage Regulator, Fuel Cut Solenoid, Emission Control, Choke Coil, Electric Fan
- ⑧ — 15 Amp. Defogger, Back Up Lights, Warning Lights, Gauges

Corona — Fuses are located in 2 separate fuse blocks, one near battery in engine compartment, and one on left side of dashboard. Circuits protected are:

Engine Compartment

- ① — 15 Amp. Right Headlights
- ② — 15 Amp. Left Headlights
- ③ — 20 Amp. Wipers, Washers (Front and Rear)
- ④ — 10 Amp. Engine Voltage Regulator
- ⑤ — 10 Amp. Horns, Hazard Flashers

Dashboard

- ① — 10 Amp. Stop Lights
- ② — 5 Amp. Panel Lights
- ③ — 5 Amp. Right Marker and Taillights
- ④ — 5 Amp. Left Marker and Taillights
- ⑤ — 15 Amp. Lighter, Clock, Antenna, Light Reminder
- ⑥ — 10 Amp. Turn Signals
- ⑦ — 10 Amp. Gauges, Warning Lights, Backup Lights
- ⑧ — 20 Amp. Defogger
- ⑨ — 5 Amp. Radio
- ⑩ — 5 Amp. Clock, Courtesy Lights
- ⑪ — 20 Amp. Heater Fan, A/C Compressor Clutch
- ⑫ — 10 Amp. Engine and Main Relays

Cressida — Fuse panel is behind cover on left side of instrument panel. Circuits protected by inline fuses are Lighter and Antenna (15 Amp.), Backup Lights, Gauges, Overdrive, Warning Lights (15 Amp.), Clock, Courtesy Lights (5 Amp.) and Air Conditioner (10 Amp.). Fuses in block are numbered from left to right and protect the following circuits: