

SAAB (Cont.)

900 Models — Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- | | |
|----------------------------|---|
| ① — 8 Amp. Right High Beam | ⑩ — 5 Amp. Stop Lights |
| ② — 8 Amp. Left High Beam | ⑪ — 16 Amp. A/C Fan |
| ③ — 8 Amp. Right Low Beam | ⑫ — 5 Amp. Right Parking and Taillights |
| ④ — 8 Amp. Left Low Beam | ⑬ — 5 Amp. Left Parking and Taillights |
| ⑤ — 16 Amp. Engine Fan | ⑭ — 8 Amp. Horn |
| ⑥ — 16 Amp. Defogger | ⑮ — Blank |
| ⑦ — 5 Amp. Interior Lights | ⑯ — 16 Amp. Heated Driver's Seat |
| ⑧ — 8 Amp. Fuel Pump | ⑰ — 25 Amp. Heater Fan |
| ⑨ — 8 Amp. Hazard Flashers | ⑱ — 8 Amp. Spare |
| | ⑲ — 8 Amp. Warning Lights |
| | ⑳ — 8 Amp. Turn Signals |
| | ㉑ — 8 Amp. Wipers |
| | ㉒ — 8 Amp. Cornering Lights |

SUBARU

FUSE BLOCK

The fuse block is located underneath dashboard on left side. The heater is protected by a 15 Amp. inline fuse. All other circuits are fuses through the block. Protected circuits are:

- | | |
|------------------------|---|
| ① — 15 Amp. High Beams | ③ — 15 Amp. Parking and Taillights |
| ② — 15 Amp. Low Beams | ④ — 15 Amp. Turn Signals, Backup Lights, Defogger Switch |
| | ⑤ — 15 Amp. Ignition, Fuel Pump, Gauges |
| | ⑥ — 15 Amp. Horn, Hazard Flashers, Clock, Courtesy Light, Stop Lights, Windshield Wipers, Washers |
| | ⑦ — 25 Amp. Rear Wiper, Washer, Heater Fan, Lighter, Radio |
| | ⑧ — 25 Amp. Lighting Switch |

TOYOTA

FUSE BLOCK

Celica and Celica Supra — Main fuse block is located on left side of instrument panel behind cover. Inline fuses protect Courtesy Lights and Clock (5 Amp.), A/C Compressor Clutch (15 Amp.), Ammeter (5 Amp.), and Power Windows (30 Amp.). Inline fuses are located behind left kick panel (Celica Courtesy Lights), near battery (Celica Ammeter), and behind right kick panel (all others). Fuses in main panel protect the following circuits:

- | |
|--|
| ① — 15 Amp. Front Parking Lights, Front & Rear Side Marker Lights, Tail, License, Glove Box & Instrument Lights. |
| ② — 15 Amp. Stop Lights, Hazard Warning Lights |
| ③ — 15 Amp. Lighter |
| ④ — 20 Amp. Defogger |
| ⑤ — 15 Amp. Instrument Warning Lights, Gauges, Heater Relay, Defogger Switch |
| ⑥ — 15 Amp. Turn Signal Lights, Windshield Wiper/Washer |
| ⑦ — 15 Amp. Engine, Fuel Injection, Main Relay |
| ⑧ — 15 Amp. Radio, Tape Player |

Corolla — Main fuse block is located on left side of instrument panel. Other fuses are located near the battery in separate holders. These include Horn (10 Amp.), Ammeter (5 Amp.), Discharge Warning Light (5 Amp.). A separate fuse protects the Clock and Interior Lights (5 Amp.) and is located behind the main fuse block. Models with rear window defogger have 2 10 Amp. fuses located behind the left kick panel. Circuits protected through main fuse block include:

- | |
|---|
| ① — 15 Amp. Stop Lights, Emergency Flasher |
| ② — 15 Amp. Parking, Side Marker, Instrument Panel, Ashtray, Tail Lights, License Light |
| ③ — 15 Amp. Cigar Lighter |
| ④ — 15 Amp. Radio, Stereo Tape Player |

- | |
|--|
| ⑤ — 15 Amp. Heater |
| ⑥ — 15 Amp. Turn Signals, Windshield Wiper & Washer |
| ⑦ — 15 Amp. Voltage Regulator, Fuel Cut Solenoid, Emission Control, Choke Coil, Electric Fan |
| ⑧ — 15 Amp. Defogger, Back Up Lights, Warning Lights, Gauges |

Corona — Fuses are located in 2 separate fuse blocks, one near battery in engine compartment, and one on left side of dashboard. Circuits protected are:

Engine Compartment

- | |
|--|
| ① — 15 Amp. Right Headlights |
| ② — 15 Amp. Left Headlights |
| ③ — 20 Amp. Wipers, Washers (Front and Rear) |
| ④ — 10 Amp. Engine Voltage Regulator |
| ⑤ — 10 Amp. Horns, Hazard Flashers |

Dashboard

- | |
|---|
| ① — 10 Amp. Stop Lights |
| ② — 5 Amp. Panel Lights |
| ③ — 5 Amp. Right Marker and Taillights |
| ④ — 5 Amp. Left Marker and Taillights |
| ⑤ — 15 Amp. Lighter, Clock, Antenna, Light Reminder |
| ⑥ — 10 Amp. Turn Signals |
| ⑦ — 10 Amp. Gauges, Warning Lights, Backup Lights |
| ⑧ — 20 Amp. Defogger |
| ⑨ — 5 Amp. Radio |
| ⑩ — 5 Amp. Clock, Courtesy Lights |
| ⑪ — 20 Amp. Heater Fan, A/C Compressor Clutch |
| ⑫ — 10 Amp. Engine and Main Relays |

Cressida — Fuse panel is behind cover on left side of instrument panel. Circuits protected by inline fuses are Lighter and Antenna (15 Amp.), Backup Lights, Gauges, Overdrive, Warning Lights (15 Amp.), Clock, Courtesy Lights (5 Amp.) and Air Conditioner (10 Amp.). Fuses in block are numbered from left to right and protect the following circuits:

TOYOTA (Cont.)

- ① - 20 Amp. Defogger
- ② - 15 Amp. Taillights, Marker Lights, Gauge and Panel Lights
- ③ - 15 Amp. Stop Lights, Hazard Flashers, Key Buzzer
- ④ - 5 Amp. Radio, Clock
- ⑤ - 15 Amp. Turn Signals, Wipers, Washers
- ⑥ - 15 Amp. Engine Controls
- ⑦ - 15 Amp. Left Headlight
- ⑧ - 15 Amp. Right Headlight

Pickup - Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① - 10 Amp. Right Headlight
- ② - 10 Amp. Left Headlight
- ③ - 15 Amp. Horn, Hazard Flashers
- ④ - 10 Amp. Turn Signals
- ⑤ - 10 Amp. Gauges, Heater Relay, Backup Lights
- ⑥ - 15 Amp. Engine Controls, Fuel Pump
- ⑦ - 15 Amp. Wipers, Washers
- ⑧ - 10 Amp. Lighter
- ⑨ - 10 Amp. Stop Lights
- ⑩ - 15 Amp. Taillights, Dashboard Lights, Marker Lights
- ⑪ - 15 Amp. Heater, A/C
- ⑫ - 5 Amp. Radio, Tape Player
- ⑬ - 5 Amp. Courtesy Light, Clock

Land Cruiser - Main fuse block is located under left side of instrument panel. Two 5 Amp. Ammeter fuses are located near battery, the 15 Amp. A/C fuse is near heater fan motor, and the 5 Amp. Engine Fan fuse is behind instrument panel. Fuses and circuits in the main block are:

- ① - 15 Amp. Taillights, Panel and Marker Lights
- ② - 15 Amp. Horn, Stop Lights, Hazard Flashers, Engine Fan
- ③ - 15 Amp. Headlights
- ④ - 5 Amp. Radio
- ⑤ - 15 Amp. Lighter
- ⑥ - 20 Amp. Heater Fan, Gauges, Backup Lights, Buzzers
- ⑦ - 20 Amp. Turn Signals, Wipers, Washers, Tailgate Relay
- ⑧ - 15 Amp. Engine Controls

FUSIBLE LINKS

All Models - A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUZE BLOCK

Spitfire - Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains 3 fuses and 2 spares. Circuits protected are as follows:

- ① - 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② - 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ - 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights

TR7 - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① - 35 Amp. Air Conditioner.
- ② - 35 Amp. Cigar Lighter, Horn, Clock, Hazard Warning System, Courtesy Light.
- ③ - 35 Amp. Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals, Air Conditioner Control System.
- ④ - 35 Amp. Interior Lights, Parking & Side Marker Lights, Tail Lights.

VOLKSWAGEN

FUZE BLOCK

Type 1 (Beetle) - Fuse block is located under instrument panel near the center of vehicle and contains 12 fuses. Additional in-line fuses are located and protect circuits as follows: An 8 Amp. fuse located in engine compartment above coil, protects the Back-Up Lights. An 8 Amp. fuse located under the rear seat, left side, protects the Rear Window Defogger. A 16 Amp. fuse located in front luggage compartment near heater protects the auxiliary heater. Fuse block circuits protected are, from left to right:

- ① - 8 Amp. Left Tail Light.
- ② - 8 Amp. Right Tail Light, Parking & Side Marker Lights, License Plate Light.
- ③ - 8 Amp. Left Low Beam.
- ④ - 8 Amp. Right Low Beam.
- ⑤ - 8 Amp. Left High Beam, High Beam Warning Light.
- ⑥ - 8 Amp. Right High Beam.
- ⑦ - 8 Amp. Not Used.

- ⑧ - 8 Amp. Emergency Flasher.
- ⑨ - 16 Amp. Interior Light.
- ⑩ - 16 Amp. Windshield Wiper, Fresh Air Fan, Rear Window Defogger.
- ⑪ - 8 Amp. Safety Belt Warning System, Stop Lights, Brake Warning Light, Horn.
- ⑫ - 8 Amp. Turn Signals, Gauges, Warning Lights, Emission System (EGR).

Type 2 (Transporter) - Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Two additional in-line fuses are used as follows: An 8 Amp. fuse, located in engine compartment near ignition coil on manual transmission models, protects the Back-Up Lights. A 16 Amp. fuse, located in engine compartment near blower motor protects the Warm Air Blower. Fuses in block protect the following circuits, left to right:

- ① - 8 Amp. Left Tail Light, Left Rear Marker Light.
- ② - 8 Amp. Right Tail Light, Parking Lights, License Plate Light, Right Rear Side Marker Light, Front Side Marker Lights.