

TOYOTA (Cont.)

- ① - 20 Amp. Defogger
- ② - 15 Amp. Taillights, Marker Lights, Gauge and Panel Lights
- ③ - 15 Amp. Stop Lights, Hazard Flashers, Key Buzzer
- ④ - 5 Amp. Radio, Clock
- ⑤ - 15 Amp. Turn Signals, Wipers, Washers
- ⑥ - 15 Amp. Engine Controls
- ⑦ - 15 Amp. Left Headlight
- ⑧ - 15 Amp. Right Headlight

Pickup - Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① - 10 Amp. Right Headlight
- ② - 10 Amp. Left Headlight
- ③ - 15 Amp. Horn, Hazard Flashers
- ④ - 10 Amp. Turn Signals
- ⑤ - 10 Amp. Gauges, Heater Relay, Backup Lights
- ⑥ - 15 Amp. Engine Controls, Fuel Pump
- ⑦ - 15 Amp. Wipers, Washers
- ⑧ - 10 Amp. Lighter
- ⑨ - 10 Amp. Stop Lights
- ⑩ - 15 Amp. Taillights, Dashboard Lights, Marker Lights
- ⑪ - 15 Amp. Heater, A/C
- ⑫ - 5 Amp. Radio, Tape Player
- ⑬ - 5 Amp. Courtesy Light, Clock

Land Cruiser - Main fuse block is located under left side of instrument panel. Two 5 Amp. Ammeter fuses are located near battery, the 15 Amp. A/C fuse is near heater fan motor, and the 5 Amp. Engine Fan fuse is behind instrument panel. Fuses and circuits in the main block are:

- ① - 15 Amp. Taillights, Panel and Marker Lights
- ② - 15 Amp. Horn, Stop Lights, Hazard Flashers, Engine Fan
- ③ - 15 Amp. Headlights
- ④ - 5 Amp. Radio
- ⑤ - 15 Amp. Lighter
- ⑥ - 20 Amp. Heater Fan, Gauges, Backup Lights, Buzzers
- ⑦ - 20 Amp. Turn Signals, Wipers, Washers, Tailgate Relay
- ⑧ - 15 Amp. Engine Controls

FUSIBLE LINKS

All Models - A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUZE BLOCK

Spitfire - Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains 3 fuses and 2 spares. Circuits protected are as follows:

- ① - 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② - 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ - 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights

TR7 - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glovebox. Block contains four 35 Amp. fuses. Circuits protected are as follows:

- ① - 35 Amp. Air Conditioner.
- ② - 35 Amp. Cigar Lighter, Horn, Clock, Hazard Warning System, Courtesy Light.
- ③ - 35 Amp. Back-Up Lights, Heater, Windshield Wiper/Washer, Stop Lights, Turn Signals, Air Conditioner Control System.
- ④ - 35 Amp. Interior Lights, Parking & Side Marker Lights, Tail Lights.

VOLKSWAGEN

FUZE BLOCK

Type 1 (Beetle) - Fuse block is located under instrument panel near the center of vehicle and contains 12 fuses. Additional in-line fuses are located and protect circuits as follows: An 8 Amp. fuse located in engine compartment above coil, protects the Back-Up Lights. An 8 Amp. fuse located under the rear seat, left side, protects the Rear Window Defogger. A 16 Amp. fuse located in front luggage compartment near heater protects the auxiliary heater. Fuse block circuits protected are, from left to right:

- ① - 8 Amp. Left Tail Light.
- ② - 8 Amp. Right Tail Light, Parking & Side Marker Lights, License Plate Light.
- ③ - 8 Amp. Left Low Beam.
- ④ - 8 Amp. Right Low Beam.
- ⑤ - 8 Amp. Left High Beam, High Beam Warning Light.
- ⑥ - 8 Amp. Right High Beam.
- ⑦ - 8 Amp. Not Used.

- ⑧ - 8 Amp. Emergency Flasher.
- ⑨ - 16 Amp. Interior Light.
- ⑩ - 16 Amp. Windshield Wiper, Fresh Air Fan, Rear Window Defogger.
- ⑪ - 8 Amp. Safety Belt Warning System, Stop Lights, Brake Warning Light, Horn.
- ⑫ - 8 Amp. Turn Signals, Gauges, Warning Lights, Emission System (EGR).

Type 2 (Transporter) - Fuse block is located under instrument panel on right side of steering column. Fuse block contains 12 fuses. Two additional in-line fuses are used as follows: An 8 Amp. fuse, located in engine compartment near ignition coil on manual transmission models, protects the Back-Up Lights. A 16 Amp. fuse, located in engine compartment near blower motor protects the Warm Air Blower. Fuses in block protect the following circuits, left to right:

- ① - 8 Amp. Left Tail Light, Left Rear Marker Light.
- ② - 8 Amp. Right Tail Light, Parking Lights, License Plate Light, Right Rear Side Marker Light, Front Side Marker Lights.

VOLKSWAGEN (Cont.)

- ③ - 8 Amp. Left Low Beam.
- ④ - 8 Amp. Right Low Beam.
- ⑤ - 8 Amp. Left High Beam, High Beam Indicator.
- ⑥ - 8 Amp. Right High Beam.
- ⑦ - 8 Amp. Accessories.
- ⑧ - 8 Amp. Emergency Flasher, Interior Lights.
- ⑨ - 16 Amp. Accessories.
- ⑩ - 16 Amp. Windshield Wipers, Rear Window Defogger
- ⑪ - 8 Amp. Horn, Stop Lights, Brake Warning Light.
- ⑫ - 8 Amp. Turn Signals Warning Lights, Back-Up Lights.

Rabbit & Scirocco - Fuse block is located under instrument panel on left side of vehicle and contains 15 fuses in one centralized unit. Two additional in-line fuses are used as follows: An 8 Amp. fuse located above fuse block, protects Rear Window Wiper. A 16 Amp. fuse located above fuse block, protects Electric Fuel Pump. Circuits protected by fuses in block are:

- ① - 8 Amp. Left Headlight Low Beam.
- ② - 8 Amp. Right Headlight Low Beam.
- ③ - 8 Amp. Left Headlight High Beam and Indicator.
- ④ - 8 Amp. Right Headlight High Beam.
- ⑤ - 16 Amp. Rear Window Defogger.
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ - 8 Amp. Interior Lights, Cigar Lighter.
- ⑧ - 8 Amp. Turn Signal System.
- ⑨ - 8 Amp. Back Up Lights, Shift Console Light, Horn

- ⑩ - 16 Amp. Fresh Air Fan.
- ⑪ - 8 Amp. Windshield Wiper & Washer
- ⑫ - 8 Amp. Luggage Compartment & License Plate Lights.
- ⑬ - 8 Amp. Right Parking, Tail & Side Marker Lights.
- ⑭ - 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ - 25 Amp. Radiator Fan

Dasher - Fuse block is located on the left side behind the dashboard bin and contains 15 fuses. One additional fuse is located above fuse No. 7. A 16 Amp. fuse protects the Fuel Pump Relay. An additional fuse above the relay panel protects the rear wiper on wagon models (8 Amp.). Circuits protected by fuses in the block are, from left to right:

- ① - 8 Amp. Left Low Beam.
- ② - 8 Amp. Right Low Beam.
- ③ - 8 Amp. Left High Beam & Warning Light.
- ④ - 8 Amp. Right High Beam.
- ⑤ - 16 Amp. Rear Window Defogger.
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher.
- ⑦ - 8 Amp. Cigar Lighter, Clock, Radio, Interior Light.
- ⑧ - 8 Amp. Turn Signals
- ⑨ - 8 Amp. Horn, Backup Lights, Shift Console Light
- ⑩ - 16 Amp. Fresh Air Fan
- ⑪ - 8 Amp. Windshield Wipers, Washers, Rear Washer
- ⑫ - 8 Amp. License Plate Light.
- ⑬ - 8 Amp. Right Tail, Parking & Side Marker Lights.
- ⑭ - 8 Amp. Left Tail, Parking & Side Marker Lights.
- ⑮ - 25 Amp. Radiator Fan

VOLVO

FUSE BLOCK

240 and 260 Series - Fuse block is located in left kick panel behind cover. Fuses are numbered from top to bottom and space is provided for spare fuses at bottom of block. Circuits protected are:

- ① - 8 Amp. Lighter, Rear Wiper, Mirrors, Antenna
- ② - 16 Amp. Horn, Wipers, Washers
- ③ - 16 Amp. Heater Fan
- ④ - 8 Amp. Warning Buzzers
- ⑤ - 8 Amp. Fuel Pump (Feed Pump)
- ⑥ - 8 Amp. Brake Lights, Courtesy Light Relay
- ⑦ - 16 Amp. Main Fuel Pump
- ⑧ - 8 Amp. Courtesy Lights
- ⑨ - 8 Amp. Hazard Flashers
- ⑩ - 16 Amp. Power Windows
- ⑪ - 16 Amp. Overdrive, Defogger
- ⑫ - 8 Amp. Backup Lights, Power Window Relay, Heated Driver's Seat, A/C
- ⑬ - 8 Amp. Gauges, Turn Signals, Belt Warning, Fuel Injection Relay
- ⑭ - Spare
- ⑮ - 8 Amp. Left Parking and Marker Lights, License Light
- ⑯ - 8 Amp. Right Parking and Marker Lights, Headlight Buzzer, Instrument Panel Lights