

## AUDI

## FUSE BLOCK

**4000** — Fuse block is located at left side of dashboard behind storage bin. It contains 15 fuses arranged horizontally. Circuits protected are as follows:

- ① — 8 Amp. Low Beam Left
- ② — 8 Amp. Low Beam Right
- ③ — 8 Amp. High Beam Left
- ④ — 8 Amp. High Beam Right
- ⑤ — 16 Amp. Rear Window Defogger
- ⑥ — 8 Amp. Stop lights, Turn Signals
- ⑦ — 8 Amp. Cigar Lighter, Radio, Glove Box Light
- ⑧ — 8 Amp. Instrument Panel Lights
- ⑨ — 8 Amp. Back-Up Lights, Horn
- ⑩ — 25 Amp. Fresh Air Fan
- ⑪ — 8 Amp. Windshield Wiper Washer
- ⑫ — 8 Amp. License Plate Light
- ⑬ — 8 Amp. Tail, Parking & Side Marker Lights (Right)
- ⑭ — 8 Amp. Tail, Parking & Side Marker Lights (Left)
- ⑮ — 25 Amp. Radiator Fan

**5000 Models** — Fuse block is located in engine compartment left rear corner. Fuses are numbered from 1 to 17, with 17 closest to the front of the car and 1 nearest the rear. Circuits protected are:

- ① — 25 Amp. A/C, Heater Fan, Tachometer
- ② — Not Used
- ③ — 8 Amp. High Beam Headlight, Left
- ④ — 8 Amp. High Beam Headlight, Right
- ⑤ — 16 Amp. Fuel Pump
- ⑥ — 8 Amp. Right Marker, Tail Lights
- ⑦ — 8 Amp. Left Marker Lights, Engine Comp. Light
- ⑧ — 8 Amp. Instrument Panel, Glove Compartment, License Plate Lights
- ⑨ — 16 Amp. Horn, Instruments, Power Windows, Sunroof
- ⑩ — 25 Amp. Radiator Fan
- ⑪ — 16 Amp. Brake Lights
- ⑫ — 16 Amp. Lighter, Radio, Antenna, Clock, Dome Light
- ⑬ — 8 Amp. Low Beam Headlight, Right
- ⑭ — 8 Amp. Low Beam Headlight, Left
- ⑮ — 16 Amp. Back-up Lights, Wipers
- ⑯ — 25 Amp. Rear Window Defogger
- ⑰ — Flashers

## BMW

## FUSE BLOCK

**320i** — Fuse block is located at left front corner of engine compartment. Fuses are arranged in 6 rows of 3, with first row toward battery. Number 1 fuse is next to front relay. Protected circuits are:

- ① — 8 Amp. Right Fog Light
- ② — 8 Amp. Left Fog Light
- ③ — 16 Amp. Fuel Pump
- ④ — 8 Amp. Right Low Beam
- ⑤ — 8 Amp. Left Low Beam
- ⑥ — 8 Amp. Dash Lights, Right Park and Taillights, Hood Light
- ⑦ — 16 Amp. High Beam
- ⑧ — 16 Amp. High Beam
- ⑨ — 8 Amp. Left Park and Taillights
- ⑩ — 16 Amp. Defogger
- ⑪ — 25 Amp. Heater Fan, A/C Fan
- ⑫ — 8 Amp. Brake Lights, Radio, Tachometer
- ⑬ — 25 Amp. Auxiliary Fan
- ⑭ — 16 Amp. Back-up Lights, Gauges, Warning Lights
- ⑮ — 16 Amp. Horn, Wipers, Washer, Power Mirror
- ⑯ — 16 Amp. Lighter
- ⑰ — 8 Amp. Turn Signals, Hazard Flashers, Clock, Buzzers
- ⑱ — Spare

**528i, 633CSi and 733i** — All models have fuse block at left front corner of engine compartment. Fuses are located in 3

rows with 6 in first row, 8 in second row, and 2 or 3 in third row. Fuses are numbered from center of car toward left side, and protect the following circuits:

- ① — 8 Amp. (528i), 16 Amp. (633CSi and 733i) Fuel Pump, Emission Controls
- ② — 8 Amp. Right Low Beam
- ③ — 8 Amp. Left Low Beam
- ④ — 16 Amp. Lighter
- ⑤ — 8 Amp. Clock, Interior Lights, Trunk Light, Warning Buzzer, Locking System, Hazard Lights, Glove Box Light (528i Only), Turn Signals (733i Only)
- ⑥ — 8 Amp. Warning Lights, Instruments, Back-Up Lights, Transmission Indicator Light, Power Windows, Cruise Control (733i Only)
- ⑦ — 8 Amp. Right High Beam
- ⑧ — 8 Amp. Left High Beam
- ⑨ — 8 Amp. Right Parking and Marker Lights, Instrument Panel and Console Lights
- ⑩ — 8 Amp. Left Parking and Marker Lights
- ⑪ — 16 Amp. Wipers, Washers, Power Mirrors, Turn Signals (528i)
- ⑫ — 8 Amp. Radio, Brake Lights, Clock (Exc. 528i). (733i Only) Safety Check Panel, Speedometer and Cruise Control
- ⑬ — 16 Amp. Defogger, Sun Roof
- ⑭ — 25 Amp. A/C, Heater Fan, Auxiliary Fan Relay
- ⑮ — 8 Amp. Right Fog Light
- ⑯ — 8 Amp. Left Fog Light
- ⑰ — 25 Amp. (2 on 633CSi and 733i) Auxiliary Fan

## CHRYSLER CORP. IMPORTS

### FUSE BLOCK

**Arrow** — Fuse block is located on left kick panel. Fuse circuits and ratings are listed on cover. Fuses are numbered from front to rear, top row first, then bottom. Circuits protected are as follows:

- ① — 10 Amp. Right High Beam
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Taillights, Marker Lights, License
- ④ — 5 Amp. Parking Lights
- ⑤ — 15 Amp. Defogger
- ⑥ — 10 Amp. Back-up Lights
- ⑦ — 10 Amp. Voltage Regulator, Turn Signals
- ⑧ — 10 Amp. Right Low Beam
- ⑨ — 10 Amp. Left Low Beam
- ⑩ — 15 Amp. Radio, Horn, Lighter
- ⑪ — 15 Amp. Wiper, Washer
- ⑫ — 15 Amp. Heater, Air Conditioner
- ⑬ — 15 Amp. Hazard Flashers, Stop Lights
- ⑭ — 5 Amp. Dome, Buzzer, Indicators

**Arrow Pickup, Dodge D50 Pickup** — Fuse block is located beneath instrument panel on left side. Fuses are numbered with first fuse at bottom right side of block and last fuse on top left. Circuits protected are:

- ① — 15 Amp. High Beams
- ② — 15 Amp. Low Beams
- ③ — 15 Amp. Heater, Windshield Washer
- ④ — 15 Amp. Wipers, Radio, Lighter
- ⑤ — 15 Amp. Taillights, Parking Lights
- ⑥ — 15 Amp. Stop Lights, Dome
- ⑦ — 15 Amp. Hazard Flashers
- ⑧ — 15 Amp. Turn Signal, Backup Lights

**Challenger, Sapporo** — Fuse block is underneath dash on driver's side. Fuses are arranged in one row with first fuse to right side. A check lamp system is provided. With ignition "ON" headlight switch at first position, check light should come on for each circuit as knob is moved along top of fuse panel. If light is not lit, fuse is blown. Be sure to return knob to rest position to avoid draining battery. Circuits protected are:

- ① — 15 Amp. Stop Lights, Dome
- ② — 15 Amp. Hazard Flashers, Courtesy Lights
- ③ — 20 Amp. Defogger
- ④ — 15 Amp. Taillights, Instrument Lights
- ⑤ — 15 Amp. Heater, A/C, Horn
- ⑥ — 15 Amp. Wiper, Washers
- ⑦ — 15 Amp. Lighter, Radio
- ⑧ — 10 Amp. Turn Signals, Dash Warning Lights
- ⑨ — 10 Amp. Backup Lights
- ⑩ — 10 Amp. Voltage Regulator

**Champ, Colt Hatchback** — Fuse block is located beneath instrument panel on left side. Fuses are numbered from right to left, and protect the following circuits:

- ① — 15 Amp. Backup Lights, Gauges, Defogger
- ② — 15 Amp. Wipers, Washers
- ③ — 15 Amp. Turn Signals, Indicators
- ④ — 15 Amp. Lighter, Radio
- ⑤ — 15 Amp. Heater
- ⑥ — 15 Amp. Hazard Flashers, Dome Light
- ⑦ — 15 Amp. Stop Lights
- ⑧ — 15 Amp. Taillights, Parking Lights
- ⑨ — 15 Amp. Low Beams
- ⑩ — 15 Amp. High Beams

**Colt Station Wagon** — Fuse block is underneath dash on driver's side. Fuses are arranged in order with first fuse to right side. A check lamp system is provided. With headlights and ignition "ON", check light should come on for each circuit as knob is moved across top of panel. If light is not lit, fuse is blown. Be sure to return check knob to rest position to avoid draining battery. Fuses protect circuits as listed:

- ① — 15 Amp. Stop, Dome, Seat Belt Warning
- ② — 15 Amp. Hazard Flashers
- ③ — 15 Amp. Heater, A/C, Horn
- ④ — 15 A. Wipers, Washers
- ⑤ — 15 Amp. Radio, Lighter
- ⑥ — 15 Amp. Taillights, Meter
- ⑦ — 15 Amp. Defogger
- ⑧ — 15 Amp. Turn Signals, Gauges
- ⑨ — 10 Amp. Backup Lights
- ⑩ — 10 Amp. Voltage Regulator

## COURIER

### FUSE BLOCK

Fuse block is located in engine compartment on left side near windshield. Fuses are numbered with first fuse in back row toward outside, and last fuse in front row toward engine. Fuses and circuits protected are:

- ① — 15 Amp. Horn, Stop Lights, Hazard Warning Flasher, Interior Light, Cigar Lighter
- ② — 15 Amp. Hood & Glove Box Light, Electric Rear Window Defroster

- ③ — Blank
- ④ — 15 Amp. Headlights (High Beam)
- ⑤ — 15 Amp. Headlights (Low Beam)
- ⑥ — 10 Amp. Tail, License, Front Parking, Front Side Marker, Instrument Lights
- ⑦ — 10 Amp. Windshield Wipers/Washers
- ⑧ — 15 Amp. Heater/Defroster Blower Motor, Radio
- ⑨ — 10 Amp. Front & Rear Turn Signal Lights, Fasten Seat Belt, Oil Pressure & Brake Warning Lights, Fuel Gauge, Temperature Gauge, Back-Up Lights
- ⑩ — 15 Amp. Engine