

DATSUN

FUSE BLOCK

200SX — Fuse block is located under dash at left side. It contains 13 fuses which protect the following circuits:

- ① — 20 Amp. Headlights
- ② — 20 Amp. Heater, Air Conditioning
- ③ — 20 Amp. Rear Window Defogger
- ④ — 15 Amp. Stop Lights
- ⑤ — 15 Amp. Clearance, Tail Lights
- ⑥ — 15 Amp. Wiper/Washer
- ⑦ — 15 Amp. Coil Injector
- ⑧ — 10 Amp. Hazard Lights
- ⑨ — 10 Amp. Horn
- ⑩ — 10 Amp. Cigar Lighter, Clock
- ⑪ — 10 Amp. Dome, Step Light
- ⑫ — 10 Amp. Engine Control
- ⑬ — 10 Amp. Turn Signal, Meter

210 — Fuse block is located on left kick panel under hood release handle. A single inline fuse of 20 Amp. capacity protects the air conditioner circuit, while 8 fuses in the block protect the following circuits:

- ① — 10 Amp. Wipers, Washers
- ② — 15 Amp. Horn, Lighter
- ③ — 15 Amp. Stop Lights, Courtesy Lights
- ④ — 15 Amp. Taillights
- ⑤ — 15 Amp. Heater, Radio
- ⑥ — 10 Amp. Engine
- ⑦ — 10 Amp. Flashers, Meter
- ⑧ — 20 Amp. Defogger

280ZX — Fuse block is located in right kick panel and contains 12 fuses, which protect the following circuits:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 20 Amp. Stop Lights, Horn
- ④ — 15 Amp. Marker Lights, Taillights
- ⑤ — 10 Amp. Courtesy Lights
- ⑥ — 20 Amp. Hazard Flashers
- ⑦ — 20 Amp. Air Conditioner
- ⑧ — 10 Amp. Radio
- ⑨ — 15 Amp. Wipers, Washers
- ⑩ — 10 Amp. Turn Signals
- ⑪ — 10 Amp. Gauges
- ⑫ — 20 Amp. Defogger

310 — Fuse block is mounted on left kick panel below hood release handle. Circuits protected are:

- ① — 10 Amp. Defogger
- ② — 10 Amp. Voltage Regulator, Fuel Cut-Off
- ③ — 10 Amp. Turn Signals, Backup Light, Gauge Lights
- ④ — 10 Amp. Radiator Fan Motor
- ⑤ — 10 Amp. Heater, A/C, Radio

- ⑥ — 10 Amp. A/C Fan Motor
- ⑦ — 10 Amp. Right Taillight, Dash Light
- ⑧ — 10 Amp. Left Taillight, License Plate Light
- ⑨ — 10 Amp. Stop Lights, Clock
- ⑩ — 10 Amp. Hazard Flashers, Courtesy Lights
- ⑪ — 10 Amp. Wipers, Washers
- ⑫ — 10 Amp. Horn
- ⑬ — 10 Amp. Lighter

510 — Fuse block is located under instrument panel near hood release handle. A separate 20 Amp. inline fuse protects the air conditioner circuit. Circuits protected through the fuse block include:

- ① — 15 Amp. Horn, Lighter
- ② — 15 Amp. Stop Lights, Courtesy Lights
- ③ — 15 Amp. Taillights
- ④ — 15 Amp. Heater, Radio
- ⑤ — 10 Amp. Wipers, Washers
- ⑥ — 10 Amp. Engine Controls
- ⑦ — 10 Amp. Flashers, Meter
- ⑧ — 20 Amp. Defogger

810 — Fuse block is located behind cover in right kick panel. A single 20 Amp. inline fuse protects air conditioner, while the following circuits are protected through fuse block:

- ① — 20 Amp. Stop Lights, Horn
- ② — 10 Amp. Courtesy Lights
- ③ — 10 Amp. Taillights, Side Marker Lights
- ④ — 15 Amp. Heater, Radio
- ⑤ — 10 Amp. Wipers, Washers
- ⑥ — 10 Amp. Right Headlight
- ⑦ — 10 Amp. Left Headlight
- ⑧ — 10 Amp. Flashers, Meter
- ⑨ — 20 Amp. Defogger

Pickup — Fuse block is beneath headlight switch, under left side of dash. Two inline fuses (each 15 Amp.) protect the air conditioner, lighter and clock. Fuses in the fuse block protect the following circuits:

- ① — 20 Amp. Headlights
- ② — 10 Amp. Tail, License, Marker, Gauges & Interior Lights
- ③ — 15 Amp. Hazard & Stop Lights
- ④ — 10 Amp. Horn, Clock
- ⑤ — 15 Amp. Radio, Cigar Lighter
- ⑥ — 15 Amp. Wipers, Washer, Heater, Air Conditioning
- ⑦ — 20 Amp. High Powered Heater
- ⑧ — 15 Amp. Gauges, Hazard, Turn Signals
- ⑨ — 10 Amp. Engine Control

FUSIBLE LINK

All Models — Fusible link is located in wire between battery and alternator near the battery. Its purpose is to protect the alternator and related circuits.

FIAT

FUSE BLOCK

Brava — Fuse block is positioned in box underneath glove compartment. Fuses are numbered from right to left (1-12 in bottom row, 13 and 14 in top row) and protect the following circuits:

- ① — 8 Amp. Left Front and Right Rear Tail and Marker Lights, Instrument Panel Illumination
- ② — 8 Amp. Left Rear and Right Front Tail and Marker Lights, License Plate Lights
- ③ — 16 Amp. Optional Accessory Circuit
- ④ — 8 Amp. Wipers, Washers

FIAT (Cont.)

- ⑤ - 8 Amp. Stop and Backup Lights, Gauges, Heater Fan, A/C Relay, Defogger Relay, Warning Buzzers
- ⑥ - 16 Amp. A/C Condenser Motor
- ⑦ - 16 Amp. A/C Compressor, Fast Idle Electrovalve
- ⑧ - 16 Amp. Defogger, Hazard Flashers
- ⑨ - 8 Amp. Clock, Courtesy Lights, Lighter, Antenna
- ⑩ - 16 Amp. Horns, Engine Fan Motor
- ⑪ - 8 Amp. Left Low Beam
- ⑫ - 8 Amp. Right Low Beam
- ⑬ - 8 Amp. Left High Beam, High Beam Indicator
- ⑭ - 8 Amp. Right High Beam

Spider 2000 - Fuse block is placed under dash on left side of steering column. One fuse (8 Amp.) is located in separate inline holder and powers Lighter. Other fuses in block are numbered from right to left and protect the following circuits:

- ① - 8 Amp. Dashboard Indicators, Seat Belt Timer & Relay, Stop & Back-up Lights, Gauges, Tachometer, Turn Signals
- ② - 8 Amp. Wiper/Washer, Heater Fan Switch, Lambda Sensor
- ③ - 8 Amp. Left High Beam
- ④ - 8 Amp. Right High Beam
- ⑤ - 8 Amp. Left Low Beam
- ⑥ - 8 Amp. Right Low Beam
- ⑦ - 8 Amp. Left Side Marker, Tail & License Lights
- ⑧ - 8 Amp. Right Side Marker, Tail & License Lights, Dashboard Lights, Lights On Indicator
- ⑨ - 8 Amp. Courtesy & Hazard Lights, Clock, Seat Belt Chimes, Power Antenna, High-Low Headlight Switch
- ⑩ - 16 Amp. Horns, Engine Fan
- ⑪ - 16 Amp. Optional Left Power Window
- ⑫ - 16 Amp. Optional Right Power Window

Strada - Fuse block is under dashboard on left side. All fuses are in the fuse block and are numbered right to left, protecting these circuits:

- ① - 8 Amp. Heater Fan, Warning Buzzers, Switch Illumination
- ② - 16 Amp. Engine Fan, Horn & Relay Winding
- ③ - 8 Amp. Left Headlight Low Beam
- ④ - 8 Amp. Right Headlight Low Beam

- ⑤ - 8 Amp. Left Headlight High Beam & High Beam Indicator
- ⑥ - 8 Amp. Right Headlight High Beam
- ⑦ - 8 Amp. Windshield Wiper/Washer, Rear Window Wiper
- ⑧ - 8 Amp. Stop Light, Back-Up Lights, GULP Valve, Heater Fan, Defogger Relay, Turn Signals, Gauges, Tachometer, Dashboard Indicators
- ⑨ - 8 Amp. Front Right & Left Rear Parking, Tail & Marker Lights
- ⑩ - 8 Amp. Instrument Lights, License Light, Cigar Lighter & Clock Lights, Front Left & Right Rear Parking, Tail & Marker Lights
- ⑪ - 8 Amp. Clock, Front & Rear Courtesy Lights, Cigar Lighter & Warning Buzzers
- ⑫ - 16 Amp. Hazard Lights, Rear Window Defogger

X1/9 - Fuse block is located in swing-down panel below glove compartment. One inline (8 Amp.) fuse protects Lighter, Clock, Courtesy Lights, and Buzzers. All other fuses are in block, numbered from left to right:

- ① - 8 Amp. Turn Signals, Stop Lights, Heater Fan, Defogger Relay, Switch Indicator Lights
- ② - 8 Amp. Gauges, Dashboard Indicators, Clock Light, Wiper/Washer, Delay Circuit, Back-Up Lights
- ③ - 8 Amp. Left High Beam, High Beam Indicator
- ④ - 8 Amp. Right High Beam
- ⑤ - 8 Amp. Left Low Beam
- ⑥ - 8 Amp. Right Low Beam
- ⑦ - 8 Amp. Front Left & Right Rear Marker Lights, Front Left Parking Light, Right Rear Tail Light, License Light, Cigar Lighter, Spot Light
- ⑧ - 8 Amp. Right Front Parking Light, Left Rear Tail Light, Clock Dimming, Right Front & Left Rear Marker Lights
- ⑨ - 16 Amp. Right Headlight Motor
- ⑩ - 16 Amp. Left Headlight Motor
- ⑪ - 16 Amp. Rear Defogger, Hazard Lights
- ⑫ - 16 Amp. Horn & Relay, Engine Fan
- ⑬ - 16 Amp. Spare Fuse
- ⑭ - 3 Amp. Spare Fuse
- ⑮ - 3 Amp. Headlight Closing Control Switch
- ⑯ - 3 Amp. Headlight Raising Control Switch

FIESTA

FUSE BLOCK

Fuse block is located under left side of instrument panel. Additional fuses are located inline to radio (2 Amp.), under cover of Defogger Relay (16 Amp.) and Cooling Fan Relay (16 Amp.). Fuses are numbered from left to right and protect the following circuits:

- ① - 16 Amp. Courtesy Lights, Horn, Flashers, Lighter, Stop & Turn Signal Lights

- ② - 8 Amp. Back-Up Lights, Heater Motor, Windshield Washer, Gauges, Warning Lights & Buzzer
- ③ - 16 Amp. Wipers, Rear Wiper Washer
- ④ - 16 Amp. Rear Window Defogger
- ⑤ - 8 Amp. Engine Fan, Air Conditioning
- ⑥ - 8 Amp. Right Side Parking, Marker & Tail Lights, License Lights
- ⑦ - 8 Amp. Left Side Parking, Marker & Tail Lights, Instrument Cluster Lights
- ⑧ - 8 Amp. High Beam Indicator Light
- ⑨ - 8 Amp. Low Beam Headlights