

# Fuses & Circuit Breakers

## HONDA

### FUSE BLOCK

**Accord** — Fuse block is located in a swing-down panel to left of steering column. Fuses are arranged in 2 rows. Moving from right to left, short row first, protected circuits are:

- ① — 10 Amp. Right High Beam
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Right Low Beam
- ④ — 10 Amp. Left Low Beam
- ⑤ — 10 Amp. Optional A/C
- ⑥ — 15 Amp. Cooling Fan
- ⑦ — 15 Amp. Wipers, Washer
- ⑧ — 10 Amp. Regulator, Fuel Pump
- ⑨ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge
- ⑩ — 20 Amp. Heater
- ⑪ — 15 Amp. Radio, Defogger
- ⑫ — 15 Amp. Tail Lights, Gauge Light, License Light
- ⑬ — 10 Amp. Courtesy Light, Clock, Lighter, Horn
- ⑭ — 15 Amp. Hazard Flashers, Stop Lights

**Civic** — Fuse block is located in front of the right door hinge pillar. Block contains 13 fuses. Circuits protected are, from right to left:

- ① — 10 Amp. Right Low Beam Headlight
- ② — 10 Amp. Left Low Beam Headlight
- ③ — 10 Amp. Right Headlight High Beam, High Beam Indicator
- ④ — 10 Amp. Left Headlight High Beam
- ⑤ — 15 Amp. Tail, Side Marker, License, Gauge, Heater Control, Ignition Switch & Dashboard Control Lights
- ⑥ — 10 Amp. Courtesy Light, Trunk Light, Cigar Lighter, Clock, Warning Buzzers
- ⑦ — 15 Amp. Stop Lights, Horn, Hazard Flashers

- ⑧ — 15 Amp. Rear Defogger, Radio
- ⑨ — 15 Amp. Blower Motor & Resistor
- ⑩ — 15 Amp. Cooling Fan & Thermostat
- ⑪ — 10 Amp. Turn Signal Relay, Switch & Lights, Hazard Switch, Back-Up Lights, Gauges, Warning Indicators, Clock
- ⑫ — 10 Amp. Voltage Regulator, Carburetor Solenoids, Fuel Pump Cut-Off Relay & Pump
- ⑬ — 15 Amp. Wiper/Washer Switch, Wiper/Washer Motors

**Prelude** — Fuse block is located in swing-down panel to left of steering column. Fuses are arranged in 2 rows. Moving from right to left, short row first, protected circuits are:

- ① — 10 Amp. Right High Beam, High Beam Indicator
- ② — 10 Amp. Left High Beam
- ③ — 10 Amp. Right Low Beam
- ④ — 10 Amp. Left Low Beam
- ⑤ — 15 Amp. Heater Fan
- ⑥ — 15 Amp. Defogger, Radio
- ⑦ — Blank for Accessories
- ⑧ — 15 Amp. Wipers, Washers
- ⑨ — 10 Amp. Fuel Pump, Engine Controls
- ⑩ — 10 Amp. Backup Lights, Gauges, Warning Lights, Turn Signals, Buzzers, Sunroof Relay
- ⑪ — 15 Amp. Engine Fan
- ⑫ — 15 Amp. Tail, License, Side Marker, Gauge, Glove Box & Switch Lights
- ⑬ — 10 Amp. Courtesy Lights, Cigar Lighter, Clock, Trunk Light, Door Buzzer
- ⑭ — 15 Amp. Horn, Stop Lights, Hazard Lights

### IN-LINE FUSES

One or two main fuses are installed near the battery to protect entire electrical system. A spare fuse is provided inside fuse block cover.

## JAGUAR

### FUSE BLOCK

**XJ6 Models** — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- ① — 20 Amp. Fog Lights
- ② — 15 Amp. Hazard Warning System, Electronic Control Unit

- ③ — 35 Amp. Courtesy Lights, Cigar Lighter, Clock, Trunk Light, Power Antenna
- ④ — 15 Amp. Back-Up Lights, Gauges, Warning Indicators
- ⑤ — 35 Amp. Rear Window Defogger
- ⑥ — 20 Amp. Windshield Wipers
- ⑦ — Not Used
- ⑧ — 15 Amp. Instrument Panel Lights
- ⑨ — 10 Amp. Rear Fog Lights
- ⑩ — 15 Amp. Turn Signals
- ⑪ — 35 Amp. Engine Fan, Horn Relay, Windshield Wipers, Stop Lights, Mileage Counter
- ⑫ — 2 Amp. Cruise Control

## LUV

### FUSE BLOCK

Fuse block is located in engine compartment on left inner valance panel. Fuse block contains 6 fuses and 4 spares. Circuits protected by fuses are as follows:

- ① — 15 Amp. Tail Lights, Instrument Lights

- ② — 15 Amp. Horn, Stop Lights
- ③ — 15 Amp. Dome Light, Air Conditioning
- ④ — 15 Amp. Heater, Back-Up Lights, Turn Signals
- ⑤ — 15 Amp. Fuel Pump, Ignition Coil, Voltage Regulator
- ⑥ — 15 Amp. Radio, Windshield Wiper/Washer, Cigar Lighter

## MAZDA

### FUSE BLOCK

**626** – Fuse block is located beneath dashboard on left side of steering column. Fuse capacities and circuits protected are marked on fuse block cover.

**GLC** – The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① – 15 Amp. Horn, Stop & Hazard Lights
- ② – 15 Amp. Interior Light, Cigar Lighter, Clock, Reminder Buzzer, Liftgate Release
- ③ – 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Lights
- ④ – Not Used
- ⑤ – Not Used
- ⑥ – 10 Amp. Rear Window Defogger, Radio
- ⑦ – 10 Amp. Wipers, Washers
- ⑧ – 15 Amp. Rear Wiper, Washer
- ⑨ – 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Lights, Tachometer
- ⑩ – 10 Amp. Heat Hazard Warning Light, Emission Devices, Regulator

**Pickup** – Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① – 15 Amp. Horn, Stop Lights, Interior Light, Cigar Lighter, Hazard Flashers

- ② – 10 Amp. Front Parking Lights, Side Lights, License Light, Tail Lights, Instrument Panel Lights
- ③ – 10 Amp. Back Up Lights, Warning Lights, Fuel Gauge, Water Temperature Gauge, Turn Signals
- ④ – 15 Amp. Choke Switch, Voltage Regulator, Fuel Pump, Fuel Cut
- ⑤ – 15 Amp. Heater, Radio
- ⑥ – 10 Amp. Windshield Wipers & Washer

**RX-7** – Fuse Panel is located beneath instrument panel on left side near kick panel. Starting from top row, right side and moving to left, circuits protected are:

- ① – 15 Amp. Hazard Flashers
- ② – 15 Amp. Dash Lights, Tail Lights, Marker Lights, License Light
- ③ – 20 Amp. Courtesy Light, Cigar Lighter, Liftgate Release, Buzzer
- ④ – 15 Amp. Horn, Stop Lights
- ⑤ – 15 Amp. Rear Window Defogger
- ⑥ – 15 Amp. Wiper/Washer
- ⑦ – 20 Amp. Heater, Radio
- ⑧ – 15 Amp. Gauges, Indicator Lights, Back-Up Lights,
- ⑨ – 15 Amp. Kickdown, Choke Relay
- ⑩ – 15 Amp. Ignition, Emission Controls, Fuel Pump

### IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

## MERCEDES-BENZ

### FUSE BLOCK

**All (Exc. 450 SL & SLC)** – Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

**450 SL & SLC** – Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

### IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

## MGB

### FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light
- ② – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light
- ③ – 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights
- ④ – 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter

### IN-LINE FUSES

**Auxiliary Equipment** – A 35 Amp. in-line fuse located below fuse block protects Windshield Wiper/Washer, Heater Blower Motor and Radio.

**Fan Thermostat** – A 35 Amp. in-line fuse protects the fan thermostat circuit.

**Hazard Warning** – A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

**Radio** – A separate additional in-line fuse protects Radio.