

## MAZDA

### FUSE BLOCK

**626** – Fuse block is located beneath dashboard on left side of steering column. Fuse capacities and circuits protected are marked on fuse block cover.

**GLC** – The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows:

- ① – 15 Amp. Horn, Stop & Hazard Lights
- ② – 15 Amp. Interior Light, Cigar Lighter, Clock, Reminder Buzzer, Liftgate Release
- ③ – 15 Amp. Tail & License Lights, Parking & Side Marker Lights, Instrument Lights
- ④ – Not Used
- ⑤ – Not Used
- ⑥ – 10 Amp. Rear Window Defogger, Radio
- ⑦ – 10 Amp. Wipers, Washers
- ⑧ – 15 Amp. Rear Wiper, Washer
- ⑨ – 10 Amp. Back-Up Lights, Kickdown Switch, Warning Lights, Gauges, Seat Belt Warning Light, Turn Signal Lights, Tachometer
- ⑩ – 10 Amp. Heat Hazard Warning Light, Emission Devices, Regulator

**Pickup** – Fuse block is located in left rear corner of engine compartment and contains six fuses. Circuits protected by fuses in block are as follows:

- ① – 15 Amp. Horn, Stop Lights, Interior Light, Cigar Lighter, Hazard Flashers

- ② – 10 Amp. Front Parking Lights, Side Lights, License Light, Tail Lights, Instrument Panel Lights
- ③ – 10 Amp. Back Up Lights, Warning Lights, Fuel Gauge, Water Temperature Gauge, Turn Signals
- ④ – 15 Amp. Choke Switch, Voltage Regulator, Fuel Pump, Fuel Cut
- ⑤ – 15 Amp. Heater, Radio
- ⑥ – 10 Amp. Windshield Wipers & Washer

**RX-7** – Fuse Panel is located beneath instrument panel on left side near kick panel. Starting from top row, right side and moving to left, circuits protected are:

- ① – 15 Amp. Hazard Flashers
- ② – 15 Amp. Dash Lights, Tail Lights, Marker Lights, License Light
- ③ – 20 Amp. Courtesy Light, Cigar Lighter, Liftgate Release, Buzzer
- ④ – 15 Amp. Horn, Stop Lights
- ⑤ – 15 Amp. Rear Window Defogger
- ⑥ – 15 Amp. Wiper/Washer
- ⑦ – 20 Amp. Heater, Radio
- ⑧ – 15 Amp. Gauges, Indicator Lights, Back-Up Lights,
- ⑨ – 15 Amp. Kickdown, Choke Relay
- ⑩ – 15 Amp. Ignition, Emission Controls, Fuel Pump

### IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

## MERCEDES-BENZ

### FUSE BLOCK

**All (Exc. 450 SL & SLC)** – Main fuse block is located under hood on left inner fender panel. Fuse capacities and circuits protected are marked on fuse block cover.

**450 SL & SLC** – Main fuse block is located on right side kick panel. Fuse capacities and circuits protected are marked on fuse block cover.

### IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

## MGB

### FUSE BLOCK

Fuse block is located on right hand side of engine compartment. Fuse block contains four 35 Amp. fuses and two spares. Circuits protected are, from top to bottom:

- ① – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light
- ② – 35 Amp. One Parking Light, One Tail Light, One License Plate Light, One Front & Rear Side Marker Light
- ③ – 35 Amp. Turn Signal Indicator, Stop Lights, Back-Up Lights, Seat Belt & Brake Warning Lights
- ④ – 35 Amp. Horn, Interior & Luggage Compartment Lights, Headlight Flasher, Cigar Lighter

### IN-LINE FUSES

**Auxiliary Equipment** – A 35 Amp. in-line fuse located below fuse block protects Windshield Wiper/Washer, Heater Blower Motor and Radio.

**Fan Thermostat** – A 35 Amp. in-line fuse protects the fan thermostat circuit.

**Hazard Warning** – A 35 Amp. in-line fuse located behind Hazard Warning Switch protects Warning Lights.

**Radio** – A separate additional in-line fuse protects Radio.

# Fuses & Circuit Breakers

## PEUGEOT

### FUSE BLOCK

**504** — Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- ① — 15 Amp. Parking, Marker, License & Dashboard Lights
- ② — 10 Amp. Clock, Courtesy Lights, Trunk Light, Horn, Cigar Lighter, Hazard Flashers, Ignition Buzzer
- ③ — 10 Amp. Back-Up, Stop & Low Fuel Lights, Preheat Relay, Pre-Heat Indicator Light, Temperature Indicator, Engine Fan, Tailgate Wipers, Seat Belt Buzzer & Light, Fuel Cut-Off
- ④ — 15 Amp. Rear Window Defogger, Windshield Wiper Motor & Relay, Washer Pump
- ⑤ — 10 Amp. Warning Indicators, Turn Signals, Gauges, Heater Blower Motor, Radio

**505** — Fuse block is located on top of left front inner fender. Fuses are arranged in two rows with seven fuses in each row. Circuits protected are, from left to right, top row first:

- ① — 16 Amp. Fuel Pumps, Auxiliary Air Device, Control Pressure Regulator, Electronic Box Relay, Exhaust Overheat Warning
- ② — 16 Amp. Accessories, Air Conditioning, Temperature Gauge, Warning Indicators, Windshield/Washer, Turn Signals
- ③ — 10 Amp. Left High Beam Headlight & High Beam Indicator

- ④ — 5 Amp. Spare Fuse
- ⑤ — 10 Amp. Right Low Beam Headlight
- ⑥ — 16 Amp. Power Windows & Sunroof
- ⑦ — 16 Amp. Rear Window Defogger
- ⑧ — 16 Amp. Heater Blower
- ⑨ — 10 Amp. Stop Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- ⑩ — 10 Amp. Parking Lights & Indicator, Instrument Panel Lights, License Lights
- ⑪ — 10 Amp. Right High Beam Headlight
- ⑫ — 10 Amp. Left Low Beam Headlight
- ⑬ — 15 Amp. Not Used
- ⑭ — 10 Amp. Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- ⑮ — 16 Amp. Horns, Hazard Warning Lights

**604** — Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and numbered from left to right, top row first. Protected circuits are:

- ① — 10 Amp. Lighter, Horns, Flashers, Courtesy Light
- ② — 10 Amp. Stop and Backup Lights, Gauges, Indicator Lights, Starter Switch
- ③ — 16 Amp. Defogger, Indicator Lights, Accessories
- ④ — 16 Amp. A/C Fan, Wipers, Washers, Sunroof
- ⑤ — 10 Amp. Parking and Marker Lights, Dash Lights
- ⑥ — 16 Amp. Heater Fan and A/C Compressor Relays
- ⑦ — 16 Amp. Power Windows
- ⑧ — 16 Amp. Rear Window Lockout

## PORSCHE

### FUSE BLOCK

**924** — Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- ① — 8 Amp. Left Headlight (Low Beam)
- ② — 8 Amp. Right Headlight (Low Beam)
- ③ — 8 Amp. Left Headlight (High Beam)
- ④ — 8 Amp. Right Headlight (High Beam)
- ⑤ — Not Used
- ⑥ — 8 Amp. Interior Lights, Retractable Headlights, Brake Warning
- ⑦ — 8 Amp. Emergency Flashers, Clock
- ⑧ — 8 Amp. Turn Signal Indicators
- ⑨ — 8 Amp. Backup Lights, Rear Wiper, Mirrors
- ⑩ — 16 Amp. Fresh Air Blower
- ⑪ — 8 Amp. Windshield Wipers
- ⑫ — 8 Amp. License Plate & Luggage Compartment Lights
- ⑬ — 8 Amp. Side Marker Light (Right)
- ⑭ — 8 Amp. Side Marker Light (Left)
- ⑮ — 16 Amp. Fog Lights
- ⑯ — 8 Amp. Horn
- ⑰ — 16 Amp. Fuel Pump
- ⑱ — 16 Amp. Engine Fan, Antenna
- ⑲ — 25 Amp. Defogger
- ⑳ — 16 Amp. A/C Condenser Fan
- ㉑ — 25 Amp. A/C Compressor, Fresh Air Fan
- ㉒ — Blank
- ㉓ — 25 Amp. Power Windows
- ㉔ — Blank

**911SC** — Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window Defogger and Wiper Return (25 Amp.). Main Fuses, numbered from front of car to rear, protect the following circuits:

- ① — 16 Amp. Fog Lamps
- ② — 5 Amp. License Plate Light
- ③ — 5 Amp. Right Front and Rear Parking Lights
- ④ — 5 Amp. Left Front & Rear Parking Lights
- ⑤ — 8 Amp. Right Headlight Low Beam
- ⑥ — 8 Amp. Left Headlight Low Beam
- ⑦ — 8 Amp. Right Headlight High Beam
- ⑧ — 8 Amp. Left Headlight High Beam, High Beam Indicator
- ⑨ — 5 Amp. Right Front Flasher Light
- ⑩ — 5 Amp. Left Front Flasher Light
- ⑪ — 16 Amp. Flasher Relay, Stop and Backup Lights, Speed Control
- ⑫ — 25 Amp. Defogger Indicator and Relay, Fresh Air Blower
- ⑬ — 25 Amp. Windshield Wiper, Washer
- ⑭ — 25 Amp. Sunroof, Mirrors, Rear Wiper
- ⑮ — 16 Amp. Cigar Lighter, Blower Switch Control Light
- ⑯ — 25 Amp. Fuel Pump
- ⑰ — 16 Amp. Emergency Flasher
- ⑱ — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock
- ⑲ — 16 Amp. Headlight Washer
- ㉑ — 25 Amp. Blower for Air Conditioner
- ㉒ — 25 Amp. Power Windows