

## PEUGEOT

## FUSE BLOCK

**504** — Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- ① — 15 Amp. Parking, Marker, License & Dashboard Lights
- ② — 10 Amp. Clock, Courtesy Lights, Trunk Light, Horn, Cigar Lighter, Hazard Flashers, Ignition Buzzer
- ③ — 10 Amp. Back-Up, Stop & Low Fuel Lights, Preheat Relay, Pre-Heat Indicator Light, Temperature Indicator, Engine Fan, Tailgate Wipers, Seat Belt Buzzer & Light, Fuel Cut-Off
- ④ — 15 Amp. Rear Window Defogger, Windshield Wiper Motor & Relay, Washer Pump
- ⑤ — 10 Amp. Warning Indicators, Turn Signals, Gauges, Heater Blower Motor, Radio

**505** — Fuse block is located on top of left front inner fender. Fuses are arranged in two rows with seven fuses in each row. Circuits protected are, from left to right, top row first:

- ① — 16 Amp. Fuel Pumps, Auxiliary Air Device, Control Pressure Regulator, Electronic Box Relay, Exhaust Overheat Warning
- ② — 16 Amp. Accessories, Air Conditioning, Temperature Gauge, Warning Indicators, Windshield/Washer, Turn Signals
- ③ — 10 Amp. Left High Beam Headlight & High Beam Indicator

- ④ — 5 Amp. Spare Fuse
- ⑤ — 10 Amp. Right Low Beam Headlight
- ⑥ — 16 Amp. Power Windows & Sunroof
- ⑦ — 16 Amp. Rear Window Defogger
- ⑧ — 16 Amp. Heater Blower
- ⑨ — 10 Amp. Stop Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- ⑩ — 10 Amp. Parking Lights & Indicator, Instrument Panel Lights, License Lights
- ⑪ — 10 Amp. Right High Beam Headlight
- ⑫ — 10 Amp. Left Low Beam Headlight
- ⑬ — 15 Amp. Not Used
- ⑭ — 10 Amp. Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- ⑮ — 16 Amp. Horns, Hazard Warning Lights

**604** — Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and numbered from left to right, top row first. Protected circuits are:

- ① — 10 Amp. Lighter, Horns, Flashers, Courtesy Light
- ② — 10 Amp. Stop and Backup Lights, Gauges, Indicator Lights, Starter Switch
- ③ — 16 Amp. Defogger, Indicator Lights, Accessories
- ④ — 16 Amp. A/C Fan, Wipers, Washers, Sunroof
- ⑤ — 10 Amp. Parking and Marker Lights, Dash Lights
- ⑥ — 16 Amp. Heater Fan and A/C Compressor Relays
- ⑦ — 16 Amp. Power Windows
- ⑧ — 16 Amp. Rear Window Lockout

## PORSCHE

## FUSE BLOCK

**924** — Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- ① — 8 Amp. Left Headlight (Low Beam)
- ② — 8 Amp. Right Headlight (Low Beam)
- ③ — 8 Amp. Left Headlight (High Beam)
- ④ — 8 Amp. Right Headlight (High Beam)
- ⑤ — Not Used
- ⑥ — 8 Amp. Interior Lights, Retractable Headlights, Brake Warning
- ⑦ — 8 Amp. Emergency Flashers, Clock
- ⑧ — 8 Amp. Turn Signal Indicators
- ⑨ — 8 Amp. Backup Lights, Rear Wiper, Mirrors
- ⑩ — 16 Amp. Fresh Air Blower
- ⑪ — 8 Amp. Windshield Wipers
- ⑫ — 8 Amp. License Plate & Luggage Compartment Lights
- ⑬ — 8 Amp. Side Marker Light (Right)
- ⑭ — 8 Amp. Side Marker Light (Left)
- ⑮ — 16 Amp. Fog Lights
- ⑯ — 8 Amp. Horn
- ⑰ — 16 Amp. Fuel Pump
- ⑱ — 16 Amp. Engine Fan, Antenna
- ⑲ — 25 Amp. Defogger
- ⑳ — 16 Amp. A/C Condenser Fan
- ㉑ — 25 Amp. A/C Compressor, Fresh Air Fan
- ㉒ — Blank
- ㉓ — 25 Amp. Power Windows
- ㉔ — Blank


**911SC** — Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window Defogger and Wiper Return (25 Amp.). Main Fuses, numbered from front of car to rear, protect the following circuits:

- ① — 16 Amp. Fog Lamps
- ② — 5 Amp. License Plate Light
- ③ — 5 Amp. Right Front and Rear Parking Lights
- ④ — 5 Amp. Left Front & Rear Parking Lights
- ⑤ — 8 Amp. Right Headlight Low Beam
- ⑥ — 8 Amp. Left Headlight Low Beam
- ⑦ — 8 Amp. Right Headlight High Beam
- ⑧ — 8 Amp. Left Headlight High Beam, High Beam Indicator
- ⑨ — 5 Amp. Right Front Flasher Light
- ⑩ — 5 Amp. Left Front Flasher Light
- ⑪ — 16 Amp. Flasher Relay, Stop and Backup Lights, Speed Control
- ⑫ — 25 Amp. Defogger Indicator and Relay, Fresh Air Blower
- ⑬ — 25 Amp. Windshield Wiper, Washer
- ⑭ — 25 Amp. Sunroof, Mirrors, Rear Wiper
- ⑮ — 16 Amp. Cigar Lighter, Blower Switch Control Light
- ⑯ — 25 Amp. Fuel Pump
- ⑰ — 16 Amp. Emergency Flasher
- ⑱ — 5 Amp. Interior, Glove Compartment, and Luggage Compartment Lighting, Clock
- ⑲ — 16 Amp. Headlight Washer
- ㉑ — 25 Amp. Blower for Air Conditioner
- ㉒ — 25 Amp. Power Windows

## PORSCHE (Cont.)

**928** — Fuse block is located in the passenger foot well and contains 34 fuses and 22 relays. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp. Fog Lights
- 2 — Not Connected
- 3 — 8 Amp. License Light, Engine Compartment Light
- 4 — 8 Amp. Switch Illumination Light
- 5 — 16 Amp. Cigar Lighter
- 6 — 16 Amp. Windshield Wipers
- 7 — Not Used
- 8 — 16 Amp. Sliding Roof
- 9 — 8 Amp. Back Up Lights, Outside Mirror
- 10 — 8 Amp. Brake Lights, Automatic Speed Control
- 11 — 8 Amp. Instrument Panel Lights
- 12 — 8 Amp. Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp. Power Seats
- 15 — 16 Amp. Power Antenna, Horn, Rear Wiper
- 16 — 25 Amp. Electric Radiator Fan
- 17 — 25 Amp. Heater, Air Conditioning Blower
- 18 — 25 Amp. Rear Window Defogger
- 19 — 16 Amp. Headlight Motor
- 20 — 16 Amp. Headlight Washer
- 21 — 25 Amp. Power Windows
- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

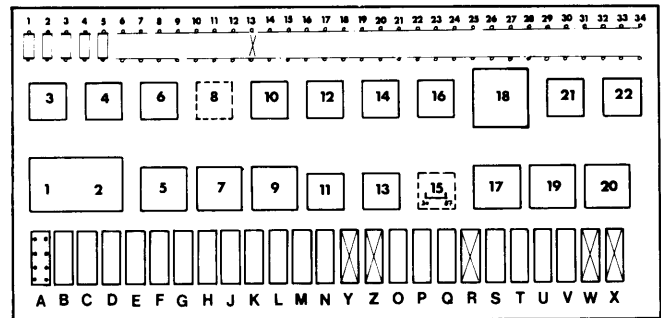

**Fig. 1 Porsche 928 Fuse and Relay Block**

Relay circuits are located below the fuses on the block.

- ①-② — Rear Defogger
- ③ — Not Used
- ④ — Not Used
- ⑤ — Hazard Flasher Unit
- ⑥ — Window Controls
- ⑦ — Headlight Washer Pump
- ⑧ — Not Used
- ⑨ — Not Used
- ⑩ — Horns
- ⑪ — Not Used
- ⑫ — Fog Lights
- ⑬ — Intermittent Wiper Speed Control
- ⑭ — Starter Relay Bridge
- ⑮ — Washer Pump
- ⑯ — Not Used
- ⑰ — Fuel Pump
- ⑱ — Extra Cooling Fan for Air Conditioning
- ⑲ - ⑳ — Retractable Headlight Relay
- ㉑ — Fresh Air Fan
- ㉒ — Defroster

## RENAULT

### FUSE BLOCK

**LeCar** — Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- ① — 5 Amp. Left Side Parking Lights, Dash Lights

- ② — 5 Amp. Lighter, Right Parking Lights
- ③ — 8 Amp. Wipers, Washers
- ④ — 5 Amp. Courtesy Light
- ⑤ — 8 Amp. Heater Fan, Radio
- ⑥ — 5 Amp. Turn Signals
- ⑦ — Blank
- ⑧ — 16 Amp. Backup Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Speed Sensor

## SAAB

### FUSE BLOCK

**99 Models** — Electrical system is protected by 12 fuses. Fuse block is mounted on the right wheel housing in the engine compartment. All parts of the system are fused except the headlights and the ignition system. A label by the fuse box shows which fuses protect which circuits.

**900 Models** — Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- ① — 8 Amp. Right High Beam
- ② — 8 Amp. Left High Beam
- ③ — 8 Amp. Right Low Beam
- ④ — 8 Amp. Left Low Beam
- ⑤ — 16 Amp. Engine Fan
- ⑥ — 16 Amp. Defogger
- ⑦ — 5 Amp. Interior Lights
- ⑧ — 16 Amp. Fuel Pump, Injection Engines
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 5 Amp. Stop Lights
- ⑪ — 16 Amp. A/C Fan
- ⑫ — 5 Amp. Right Parking and Taillights