

SAAB (Cont.)

- ⑬ — 5 Amp. Left Parking and Taillights
- ⑭ — 8 Amp. Horn
- ⑮ — Blank
- ⑯ — 16 Amp. Heated Driver's Seat
- ⑰ — 25 Amp. Heater Fan
- ⑱ — 8 Amp. Spare
- ⑲ — 8 Amp. Warning Lights
- ⑳ — 8 Amp. Turn Signals
- ㉑ — 8 Amp. Wipers
- ㉒ — 8 Amp. Cornering Lights

SUBARU

FUSE BLOCK

The fuse block is located underneath dashboard on left side. The heater is protected by a 15 Amp. inline fuse. All other circuits are fuses through the block. Protected circuits are:

- ① — 25 Amp. Fan Motor
- ② — 15 Amp. Radio, Cigar Lighter
- ③ — 15 Amp. Wipers, Cooling Fan
- ④ — 15 Amp. Low Beam Headlights
- ⑤ — 15 Amp. High Beam Headlights
- ⑥ — 15 Amp. Ignition Coil, Fuel Pump, Warning & Indicator Lights, Gauges
- ⑦ — 15 Amp. Turn Signals, Back-Up Lights, Defogger
- ⑧ — 15 Amp. License, Tail & Illumination Lights
- ⑨ — 15 Amp. Horn, Stop Lights, Hazard Lights, Dome & Trunk Light, Door Ajar Warning
- ⑩ — 25 Amp. Tail & Parking Lights

TOYOTA

FUSE BLOCK

Celica — Main fuse block is located on left side of instrument panel behind cover. In addition, a smaller fuse block is located in engine compartment on left side. Fuses in main block are arranged in three rows. Fuses in engine fuse block are arranged in two rows. Moving from top-to-bottom, and left-to-right, fuses are as follows:

Main Block

- ① — 5 Amp. Courtesy Lights, Trunk Light, Clock
- ② — 15 Amp. Tail, Parking, License, Glove Box, Transmission Selector, Instrument Panel, Heater Panel & Marker Lights, Cigar Lighter
- ③ — 15 Amp. Gauges, Warning Indicators, Back-Up Lights
- ④ — 15 Amp. Turn Signals, Wiper/Washer
- ⑤ — 15 Amp. Alternator, Emission Controls
- ⑥ — 7.5 Amp. Radio & Tape Player
- ⑦ — 15 Amp. Cigar Lighter

Engine Fuse Block

- ① — 15 Amp. Heater, Air Conditioning
- ② — 5 Amp. Discharge Warning Light, Charge Relay, Electric Choke Relay
- ③ — 15 Amp. Horn, Stop Lights, Hazard Flashers
- ④ — 15 Amp. Right Side Headlights
- ⑤ — 15 Amp. Left Side Headlights

Corolla — Main fuse block is located on left side of instrument panel. In addition, two other fuse blocks are used. One is located on left side kick panel and contains five fuses. The other is located in the engine compartment on left side, and contains seven fuses. Left side kick panel fuse block has circuits protected listed on block cover. Other fuse blocks protect the following circuits, starting from top-to-bottom, left-to-right.

Main Fuse Block

- ① — 20 Amp. Wiper/Washer, Rear Wiper/Washer, Wiper Indicator Light
- ② — 5 Amp. Radio & Tape Player

- ③ — Not Used
- ④ — 10 Amp. Gauges, Warning Indicator, Back-Up Lights
- ⑤ — 10 Amp. Cigar Lighter, Clock
- ⑥ — 5 Amp. Turn Signals, Turn Signal Indicators
- ⑦ — 10 Amp. Discharge Warning Light, Main Relay, Choke Relay, Canister Control Valve, Emission Control Computer, Cooling Fan Relay

Engine Fuse Block

- ① — 15 Amp. Left Side Head Lights
- ② — 15 Amp. Right Side Head Lights
- ③ — 10 Amp. Hazard Warning Flashers, Horn
- ④ — 10 Amp. Discharge Warning Light, Charge Light Relay, Choke Relay
- ⑤ — 15 Amp. (2) Heater Relay, Heater Motor, Air Conditioning
- ⑥ — 10 Amp. Voltage Regulator, Charge Relay, Fuel Cut Solenoid, Vacuum Switching Valve

Corona — Fuses are located in 2 separate fuse blocks, one near battery in engine compartment, and one on left side of dashboard. Circuits protected are:

Engine Compartment

- ① — 15 Amp. Right Headlights
- ② — 15 Amp. Left Headlights
- ③ — 20 Amp. Wipers, Washers (Front and Rear)
- ④ — 10 Amp. Engine Voltage Regulator
- ⑤ — 10 Amp. Horns, Hazard Flashers

Dashboard

- ① — 10 Amp. Stop Lights
- ② — 5 Amp. Panel Lights
- ③ — 5 Amp. Right Marker and Taillights
- ④ — 5 Amp. Left Marker and Taillights
- ⑤ — 15 Amp. Lighter, Clock, Antenna, Light Reminder
- ⑥ — 10 Amp. Turn Signals
- ⑦ — 10 Amp. Gauges, Warning Lights, Backup Lights
- ⑧ — 20 Amp. Defogger
- ⑨ — 5 Amp. Radio
- ⑩ — 5 Amp. Clock, Courtesy Lights
- ⑪ — 20 Amp. Heater Fan, A/C Compressor Clutch
- ⑫ — 10 Amp. Engine and Main Relays

TOYOTA (Cont.)

Cressida — Fuse panel is behind cover on left side of instrument panel. Circuits protected by inline fuses are Lighter and Antenna (15 Amp.), Backup Lights, Gauges, Overdrive, Warning Lights (15 Amp.), Clock, Courtesy Lights (5 Amp.) and Air Conditioner (10 Amp.). Fuses in block are numbered from left to right and protect the following circuits:

- ① — 30 Amp. Rear Window Defogger
- ② — 15 Amp. Tail, Marker, Parking, Glove Box & Instrument Panel Lights. Gauges
- ③ — 15 Amp. Stop Lights, Hazard Flashers, Key Buzzer
- ④ — 5 Amp. Radio, Tape Player, Clock
- ⑤ — 15 Amp. Turn Signals, Wipers, Washers
- ⑥ — 15 Amp. Engine Controls
- ⑦ — 15 Amp. Left Headlight
- ⑧ — 15 Amp. Right Headlight

Pickup — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 15 Amp. Horn, Hazard Flashers
- ④ — 10 Amp. Turn Signals
- ⑤ — 10 Amp. Gauges, Heater Relay, Backup Lights
- ⑥ — 15 Amp. Engine Controls, Fuel Pump
- ⑦ — 15 Amp. Wipers, Washers
- ⑧ — 10 Amp. Lighter
- ⑨ — 10 Amp. Stop Lights
- ⑩ — 15 Amp. Taillights, Dashboard Lights, Marker Lights
- ⑪ — 15 Amp. Heater, A/C
- ⑫ — 5 Amp. Radio, Tape Player
- ⑬ — 5 Amp. Courtesy Light, Clock

Land Cruiser — Main fuse block is located under left side of instrument panel. Two 5 Amp. Ammeter fuses are located near battery, the 15 Amp. A/C fuse is near heater fan motor, and the 5 Amp. Engine Fan fuse is behind instrument panel. Fuses and circuits in the main block are:

- ① — 15 Amp. Tail, Parking, Marker, License, Dome & Instrument Panel Lights.
- ② — 15 Amp. Horn, Stop Lights, Hazard Flashers, Engine Fan
- ③ — 15 Amp. Headlights
- ④ — 5 Amp. Radio
- ⑤ — 15 Amp. Lighter
- ⑥ — 20 Amp. Heater Fan, Gauges, Backup Lights, Buzzers
- ⑦ — 20 Amp. Turn Signals, Wipers, Washers, Tailgate Relay
- ⑧ — 15 Amp. Engine Controls

Supra — Main fuse block is located on left side of instrument panel. An additional fuse block is located on right side of engine compartment. The rear window defogger is protected

by a circuit breaker located in right side kick panel. Fuses in block are arranged in three rows. Starting from left-to-right, top-to-bottom, circuits protected are as follows:

Main Fuse Block

- ① — 5 Amp. Interior Lights, Luggage Compartment Light & Clock
- ② — 15 Amp. Tail Lights Relay, Tail Lights, Parking Lights, License Lights, Glove Box Light, Lighter, Heater Control Light, Transmission Indicator Light, Map Light, Instrument Panel Lights, Marker Lights
- ③ — 30 Amp. Power Windows
- ④ — 15 Amp. Gauges, Warning Indicators, Cruise Control, Defogger Switch, Illuminated Entry Relay, Overdrive Solenoid, Heater Relay, Back-Up Lights
- ⑤ — 15 Amp. Turn Signals, Wipers, Washer
- ⑥ — 15 Amp. Alternator, Discharge Warning Light Relay, Electronic Fuel Injection Relay, Emission Control System
- ⑦ — 7.5 Amp. Radio & Tape Player
- ⑧ — 15 Amp. Cigar Lighter

Engine Fuse Block

- ① — 15 Amp. Stop Lights, Horn, Flashers
- ② — 15 Amp. Heater, Air Conditioning
- ③ — 15 Amp. Right Side High & Low Headlights
- ④ — 15 Amp. Left Side High & Low Headlights

Tercel — Main fuse block is located at left side of instrument panel. In addition, a fuse block is located on left side of engine compartment, and circuits protected and fuse amperage are shown on fuse block cover. Circuits protected in main fuse block are as follows, from left-to-right, top-to-bottom.

- ① — 5 Amp. Radio
- ② — 10 Amp. Cigar Lighter
- ③ — 30 Amp. Rear Window Defogger
- ④ — 10 Amp. Turn Signals, Back-Up Lights, Gauges, Warning Indicators, Heater & Defogger Relays
- ⑤ — 5 Amp. Ignition Relay, Fuel Cut Solenoid
- ⑥ — 10 Amp. Stop Lights
- ⑦ — 20 Amp. Heater, Air Conditioning
- ⑧ — 15 Amp. Tail, License & Instrument Panel Lights
- ⑨ — 5 Amp. Dome Light, Trunk Light, Clock
- ⑩ — 10 Amp. Right Side Headlight
- ⑪ — 10 Amp. Left Side Headlight
- ⑫ — 5 Amp. Discharge Warning Light
- ⑬ — 15 Amp. Hazard Flasher, Horn
- ⑭ — 20 Amp. Wiper/Washer, Rear Wiper/Washer
- ⑮ — 20 Amp. Alternator Regulator, Engine Cooling Fan

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains 3 fuses and 2 spares. Circuits protected are as follows:

- ① — 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② — 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ — 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights