

TOYOTA (Cont.)

Cressida — Fuse panel is behind cover on left side of instrument panel. Circuits protected by inline fuses are Lighter and Antenna (15 Amp.), Backup Lights, Gauges, Overdrive, Warning Lights (15 Amp.), Clock, Courtesy Lights (5 Amp.) and Air Conditioner (10 Amp.). Fuses in block are numbered from left to right and protect the following circuits:

- ① — 30 Amp. Rear Window Defogger
- ② — 15 Amp. Tail, Marker, Parking, Glove Box & Instrument Panel Lights. Gauges
- ③ — 15 Amp. Stop Lights, Hazard Flashers, Key Buzzer
- ④ — 5 Amp. Radio, Tape Player, Clock
- ⑤ — 15 Amp. Turn Signals, Wipers, Washers
- ⑥ — 15 Amp. Engine Controls
- ⑦ — 15 Amp. Left Headlight
- ⑧ — 15 Amp. Right Headlight

Pickup — Fuse block is located on left side of drivers compartment under instrument panel. Circuits protected are:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 15 Amp. Horn, Hazard Flashers
- ④ — 10 Amp. Turn Signals
- ⑤ — 10 Amp. Gauges, Heater Relay, Backup Lights
- ⑥ — 15 Amp. Engine Controls, Fuel Pump
- ⑦ — 15 Amp. Wipers, Washers
- ⑧ — 10 Amp. Lighter
- ⑨ — 10 Amp. Stop Lights
- ⑩ — 15 Amp. Taillights, Dashboard Lights, Marker Lights
- ⑪ — 15 Amp. Heater, A/C
- ⑫ — 5 Amp. Radio, Tape Player
- ⑬ — 5 Amp. Courtesy Light, Clock

Land Cruiser — Main fuse block is located under left side of instrument panel. Two 5 Amp. Ammeter fuses are located near battery, the 15 Amp. A/C fuse is near heater fan motor, and the 5 Amp. Engine Fan fuse is behind instrument panel. Fuses and circuits in the main block are:

- ① — 15 Amp. Tail, Parking, Marker, License, Dome & Instrument Panel Lights.
- ② — 15 Amp. Horn, Stop Lights, Hazard Flashers, Engine Fan
- ③ — 15 Amp. Headlights
- ④ — 5 Amp. Radio
- ⑤ — 15 Amp. Lighter
- ⑥ — 20 Amp. Heater Fan, Gauges, Backup Lights, Buzzers
- ⑦ — 20 Amp. Turn Signals, Wipers, Washers, Tailgate Relay
- ⑧ — 15 Amp. Engine Controls

Supra — Main fuse block is located on left side of instrument panel. An additional fuse block is located on right side of engine compartment. The rear window defogger is protected

by a circuit breaker located in right side kick panel. Fuses in block are arranged in three rows. Starting from left-to-right, top-to-bottom, circuits protected are as follows:

Main Fuse Block

- ① — 5 Amp. Interior Lights, Luggage Compartment Light & Clock
- ② — 15 Amp. Tail Lights Relay, Tail Lights, Parking Lights, License Lights, Glove Box Light, Lighter, Heater Control Light, Transmission Indicator Light, Map Light, Instrument Panel Lights, Marker Lights
- ③ — 30 Amp. Power Windows
- ④ — 15 Amp. Gauges, Warning Indicators, Cruise Control, Defogger Switch, Illuminated Entry Relay, Overdrive Solenoid, Heater Relay, Back-Up Lights
- ⑤ — 15 Amp. Turn Signals, Wipers, Washer
- ⑥ — 15 Amp. Alternator, Discharge Warning Light Relay, Electronic Fuel Injection Relay, Emission Control System
- ⑦ — 7.5 Amp. Radio & Tape Player
- ⑧ — 15 Amp. Cigar Lighter

Engine Fuse Block

- ① — 15 Amp. Stop Lights, Horn, Flashers
- ② — 15 Amp. Heater, Air Conditioning
- ③ — 15 Amp. Right Side High & Low Headlights
- ④ — 15 Amp. Left Side High & Low Headlights

Tercel — Main fuse block is located at left side of instrument panel. In addition, a fuse block is located on left side of engine compartment, and circuits protected and fuse amperage are shown on fuse block cover. Circuits protected in main fuse block are as follows, from left-to-right, top-to-bottom.

- ① — 5 Amp. Radio
- ② — 10 Amp. Cigar Lighter
- ③ — 30 Amp. Rear Window Defogger
- ④ — 10 Amp. Turn Signals, Back-Up Lights, Gauges, Warning Indicators, Heater & Defogger Relays
- ⑤ — 5 Amp. Ignition Relay, Fuel Cut Solenoid
- ⑥ — 10 Amp. Stop Lights
- ⑦ — 20 Amp. Heater, Air Conditioning
- ⑧ — 15 Amp. Tail, License & Instrument Panel Lights
- ⑨ — 5 Amp. Dome Light, Trunk Light, Clock
- ⑩ — 10 Amp. Right Side Headlight
- ⑪ — 10 Amp. Left Side Headlight
- ⑫ — 5 Amp. Discharge Warning Light
- ⑬ — 15 Amp. Hazard Flasher, Horn
- ⑭ — 20 Amp. Wiper/Washer, Rear Wiper/Washer
- ⑮ — 20 Amp. Alternator Regulator, Engine Cooling Fan

FUSIBLE LINKS

All Models — A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

Spitfire — Fuse block is mounted on left hand side of firewall in engine compartment, adjacent to clutch master cylinder. Block contains 3 fuses and 2 spares. Circuits protected are as follows:

- ① — 35 Amp. Windshield Wipers, Gauges, Stop & Reverse Lights, Turn Signals, Seat Belt Warning Light
- ② — 10 Amp. Side Marker Lights, Front Parking Lights, Tail Lights, License Light, Instrument Panel Lights
- ③ — 35 Amp. Headlight Flasher, Courtesy Light, Horn, Key & Hazard Warning Lights

TRIUMPH (Cont.)

TR7 & TR8 — Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glove box. Fuses are arranged in two rows of six. Circuits protected, from top left to right are as follows:

- ① — 25 Amp. Left Headlight Low Beam
- ② — 25 Amp. Back-Up Lights, Wiper Motor
- ③ — 25 Amp. Left Headlight High Beam
- ④ — 35 Amp. Air Conditioning Clutch Relay, Blower Fan
- ⑤ — 25 Amp. Right Headlight High Beam

- ⑥ — 25 Amp. Right Headlight Low Beam
- ⑦ — 35 Amp. Air Conditioning Fan Relay
- ⑧ — 15 Amp. Rear Window Defogger
- ⑨ — 50 Amp. Horn, Cigar Lighter, Hazard Warning, Courtesy Lights, Fog Lights, Power Antenna
- ⑩ — 15 Amp. Front Right Parking & Marker Lights, Instrument Panel Dimmer
- ⑪ — 15 Amp. Front Left Parking & Marker Lights
- ⑫ — 35 Amp. Air Conditioning Fan Relay

VOLKSWAGEN

FUSE BLOCK

All Models Except Vanagon — Fuse block is located under dashboard on left side and contains 15 fuses in one centralized unit. In addition, fuses are located above the fuse block to protect the following circuits: Rear Window Wipers (8 Amp. Rabbit & Scirocco), Electric Fuel Pump (16 Amp. All Models), Air Conditioning (25 Amp. All Models), Radio (5 Amp. Rabbit & Pickup). Circuits protected by fuses in block are as follows:

- ① — 8 Amp. Left Headlight Low Beam
- ② — 8 Amp. Right Headlight Low Beam
- ③ — 8 Amp. Left Headlight High Beam and Indicator
- ④ — 8 Amp. Right Headlight High Beam
- ⑤ — 16 Amp. Rear Window Defogger (Not Used on Pickup)
- ⑥ — 8 Amp. Stop Lights, Hazard Warning Flasher
- ⑦ — 8 Amp. Interior Lights, Clock, Cigar Lighter
- ⑧ — 8 Amp. Turn Signal System
- ⑨ — 8 Amp. Back-Up Lights, Horn, Transmission Shift Indicator (Dasher), Choke (Rabbit)
- ⑩ — 16 Amp. Fresh Air Fan
- ⑪ — 8 Amp. Windshield Wiper & Washer
- ⑫ — 8 Amp. Luggage Compartment & License Plate Lights

- ⑬ — 8 Amp. Right Parking, Tail & Side Marker Lights
- ⑭ — 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ — 25 Amp. Radiator Fan

Vanagon — Fuse block is located under dashboard on left side of steering column. Fuse block contains 12 circuits. In addition, a 16 Amp fuse is located at right side of fuse panel to protect blower fan. Circuits protected in main fuse block are as follows:

- ① — 8 Amp. Left Tail, Parking & Marker Lights
- ② — 8 Amp. Right Tail, Parking, Marker & License Lights
- ③ — 8 Amp. Low Beam Headlight Left
- ④ — 8 Amp. Low Beam Headlight Right
- ⑤ — 8 Amp. Left High Beam Headlight & Indicator
- ⑥ — 8 Amp. Right High Beam Headlight
- ⑦ — 8 Amp. Accessories
- ⑧ — 8 Amp. Cigar Lighter, Stop Lights, Interior Lights
- ⑨ — 16 Amp. Hazard Warning Lights
- ⑩ — 16 Amp. Windshield Wiper/Washer, Rear Window Defogger
- ⑪ — 8 Amp. Turn Signals
- ⑫ — 8 Amp. Horn, Back-Up Lights

VOLVO

FUSE BLOCK

All Models — Fuse block is located in left kick panel behind cover. Fuses are numbered from top to bottom and space is provided for spare fuses at bottom of block. Circuits protected are as follows:

- ① — 8 Amp. Lighter, Rear Wipers, Mirrors, Radio, Cruise Control
- ② — 16 Amp. Horn, Wipers, Washers
- ③ — 16 Amp. Heater Fan
- ④ — 8 Amp. Warning Buzzers
- ⑤ — 8 Amp. Fuel Pump (Feed Pump)
- ⑥ — 8 Amp. Brake Lights, Courtesy Light Relay

- ⑦ — 16 Amp. Main Fuel Pump
- ⑧ — 8 Amp. Courtesy Lights, Power Antenna, Locking System
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 16 Amp. Power Windows, Heated Driver Seat
- ⑪ — 16 Amp. Overdrive, Defogger
- ⑫ — 8 Amp. Backup Lights, Power Window Relay, Heated Driver's Seat, A/C
- ⑬ — 8 Amp. Gauges, Turn Signals, Belt Warning, Fuel Injection Relay
- ⑭ — Spare
- ⑮ — 8 Amp. Left Parking and Marker Lights, License Light
- ⑯ — 8 Amp. Right Parking and Marker Lights, Headlight Buzzer, Instrument Panel Lights