

TRIUMPH (Cont.)

TR7 & TR8 — Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glove box. Fuses are arranged in two rows of six. Circuits protected, from top left to right are as follows:

- ① — 25 Amp. Left Headlight Low Beam
- ② — 25 Amp. Back-Up Lights, Wiper Motor
- ③ — 25 Amp. Left Headlight High Beam
- ④ — 35 Amp. Air Conditioning Clutch Relay, Blower Fan
- ⑤ — 25 Amp. Right Headlight High Beam

- ⑥ — 25 Amp. Right Headlight Low Beam
- ⑦ — 35 Amp. Air Conditioning Fan Relay
- ⑧ — 15 Amp. Rear Window Defogger
- ⑨ — 50 Amp. Horn, Cigar Lighter, Hazard Warning, Courtesy Lights, Fog Lights, Power Antenna
- ⑩ — 15 Amp. Front Right Parking & Marker Lights, Instrument Panel Dimmer
- ⑪ — 15 Amp. Front Left Parking & Marker Lights
- ⑫ — 35 Amp. Air Conditioning Fan Relay

VOLKSWAGEN

FUSE BLOCK

All Models Except Vanagon — Fuse block is located under dashboard on left side and contains 15 fuses in one centralized unit. In addition, fuses are located above the fuse block to protect the following circuits: Rear Window Wipers (8 Amp. Rabbit & Scirocco), Electric Fuel Pump (16 Amp. All Models), Air Conditioning (25 Amp. All Models), Radio (5 Amp. Rabbit & Pickup). Circuits protected by fuses in block are as follows:

- ① — 8 Amp. Left Headlight Low Beam
- ② — 8 Amp. Right Headlight Low Beam
- ③ — 8 Amp. Left Headlight High Beam and Indicator
- ④ — 8 Amp. Right Headlight High Beam
- ⑤ — 16 Amp. Rear Window Defogger (Not Used on Pickup)
- ⑥ — 8 Amp. Stop Lights, Hazard Warning Flasher
- ⑦ — 8 Amp. Interior Lights, Clock, Cigar Lighter
- ⑧ — 8 Amp. Turn Signal System
- ⑨ — 8 Amp. Back-Up Lights, Horn, Transmission Shift Indicator (Dasher), Choke (Rabbit)
- ⑩ — 16 Amp. Fresh Air Fan
- ⑪ — 8 Amp. Windshield Wiper & Washer
- ⑫ — 8 Amp. Luggage Compartment & License Plate Lights

- ⑬ — 8 Amp. Right Parking, Tail & Side Marker Lights
- ⑭ — 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ — 25 Amp. Radiator Fan

Vanagon — Fuse block is located under dashboard on left side of steering column. Fuse block contains 12 circuits. In addition, a 16 Amp fuse is located at right side of fuse panel to protect blower fan. Circuits protected in main fuse block are as follows:

- ① — 8 Amp. Left Tail, Parking & Marker Lights
- ② — 8 Amp. Right Tail, Parking, Marker & License Lights
- ③ — 8 Amp. Low Beam Headlight Left
- ④ — 8 Amp. Low Beam Headlight Right
- ⑤ — 8 Amp. Left High Beam Headlight & Indicator
- ⑥ — 8 Amp. Right High Beam Headlight
- ⑦ — 8 Amp. Accessories
- ⑧ — 8 Amp. Cigar Lighter, Stop Lights, Interior Lights
- ⑨ — 16 Amp. Hazard Warning Lights
- ⑩ — 16 Amp. Windshield Wiper/Washer, Rear Window Defogger
- ⑪ — 8 Amp. Turn Signals
- ⑫ — 8 Amp. Horn, Back-Up Lights

VOLVO

FUSE BLOCK

All Models — Fuse block is located in left kick panel behind cover. Fuses are numbered from top to bottom and space is provided for spare fuses at bottom of block. Circuits protected are as follows:

- ① — 8 Amp. Lighter, Rear Wipers, Mirrors, Radio, Cruise Control
- ② — 16 Amp. Horn, Wipers, Washers
- ③ — 16 Amp. Heater Fan
- ④ — 8 Amp. Warning Buzzers
- ⑤ — 8 Amp. Fuel Pump (Feed Pump)
- ⑥ — 8 Amp. Brake Lights, Courtesy Light Relay

- ⑦ — 16 Amp. Main Fuel Pump
- ⑧ — 8 Amp. Courtesy Lights, Power Antenna, Locking System
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 16 Amp. Power Windows, Heated Driver Seat
- ⑪ — 16 Amp. Overdrive, Defogger
- ⑫ — 8 Amp. Backup Lights, Power Window Relay, Heated Driver's Seat, A/C
- ⑬ — 8 Amp. Gauges, Turn Signals, Belt Warning, Fuel Injection Relay
- ⑭ — Spare
- ⑮ — 8 Amp. Left Parking and Marker Lights, License Light
- ⑯ — 8 Amp. Right Parking and Marker Lights, Headlight Buzzer, Instrument Panel Lights