

MAZDA (Cont.)

- ⑦ — 10 Amp. Gauges, Back-up Lights, Buzzers, Kickdown Solenoid
- ⑧ — 15 Amp. Regulator, Emissions

GLC Hatchback — Fuse block is located at the left side of steering column. Fuses are arranged in 2 rows, with 1 fuse to the side of the first row. An inline 15 Amp. fuse is used for the A/C system. Fuses and the circuits protected are:

- ① — 20 Amp. Cooling Fan, A/C
- Next Row
- ② — 15 Amp. Clock, Tail, Panel & Marker Lights
 - ③ — 15 Amp. Heater, A/C
 - ④ — 15 Amp. Rear Defogger
 - ⑤ — 15 Amp. Front Wiper/Washer
 - ⑥ — 10 Amp. Radio, Rear Wiper/Washer

Next Row

- ⑦ — 10 Amp. Regulator, Emission Control
- ⑧ — 10 Amp. Gauges
- ⑨ — 15 Amp. Lighter, Clock
- ⑩ — 15 Amp. Stop Lights, Horn
- ⑪ — 10 Amp. Turn Signals, Flashers, Courtesy Lights, Buzzers

RX7 — Fuse block is located to left side of steering column. Fuses protect, from top to bottom and left to right, the following circuits:

- ① — 10 Amp. Fuel Pump
- Next Row
- ② — 20 Amp. Heater Fan, Glove Box Light
 - ③ — 15 Amp. Rear Defogger

- ④ — 20 Amp. Radio, Antenna
- ⑤ — 10 Amp. Front Washer, Rear Wiper Washer
- ⑥ — 10 Amp. Front Wiper
- ⑦ — 30 Amp. Power Windows
- ⑧ — 10 Amp. Cruise Control

Next Row

- ⑨ — 20 Amp. Gas Filler Door, Rear Hatch Release
- ⑩ — 15 Amp. Stop Lights, Horn
- ⑪ — 15 Amp. Courtesy Lights, Chime, Lighter
- ⑫ — 10 Amp. Mirrors, A/C, Turn Signals, Flashers
- ⑬ — 10 Amp. Panel Lights, Headlight Motors
- ⑭ — 10 Amp. Gauges, Back-up Lights, Clock, Timer Unit
- ⑮ — 15 Amp. Kickdown Solenoid, Emissions

B2000 — Fuse block is located in left rear corner of engine compartment and contains 2 rows of fuses. Protected circuits include:

- ① — 15 Amp. Lighter, Clock, Courtesy Light, Stop Lights
 - ② — 10 Amp. Tail Lights, Marker Lights, Panel Lights
 - ③ — 10 Amp. Back-up Lights, Turn Signals, Flashers, Gauges
 - ④ — 15 Amp. Alternator, Emissions
- Next Row
- ⑤ — 15 Amp. Radio, Heater
 - ⑥ — 10 Amp. Wiper/Washer

IN-LINE FUSES

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ**FUSE BLOCK**

380SL & SLC — Main fuse block is located on right kick panel. Fuse capacities and the circuits protected are listed on fuse block cover.

All Other Models — Fuse block is located at left rear corner of engine compartment. Fuse capacities and circuits protected

are listed on the fuse block cover.

IN-LINE FUSES

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

PEUGEOT**FUSE BLOCK**

504 — Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- ① — 15 Amp. Parking, Marker, License & Dashboard Lights
- ② — 10 Amp. Clock, Courtesy Lights, Trunk Light, Horn, Cigar Lighter, Hazard Flashers, Ignition Buzzer
- ③ — 10 Amp. Back-Up, Stop & Low Fuel Lights, Preheat Relay, Pre-Heat Indicator Light, Temperature Indicator, Engine Fan, Tailgate Wipers, Seat Belt Buzzer & Light, Fuel Cut-Off
- ④ — 15 Amp. Rear Window Defogger, Windshield Wiper Motor & Relay, Washer Pump

- ⑤ — 10 Amp. Warning Indicators, Turn Signals, Gauges, Heater Blower Motor, Radio

505 — Fuse block is located on top of left front fenderwell. Fuses are arranged in 2 rows, and numbered from front to back, starting with row closest to engine.

- ① — 16 Amp. Fuel Pumps, Emissions
- ② — 16 Amp. Gauges, A/C, Accessories, Turn Signals, Wiper/Washer
- ③ — 10 Amp. Left High Beam Headlight & High Beam Indicator
- ④ — 5 Amp. Spare Fuse
- ⑤ — 10 Amp. Right Low Beam Headlight
- ⑥ — 16 Amp. Power Windows & Sunroof
- ⑦ — 16 Amp. Rear Window Defogger
- ⑧ — 16 Amp. Heater Blower

PEUGEOT (Cont.)

- ② - 10 Amp. Stop Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- ⑩ - 10 Amp. Parking Lights & Indicator, Instrument Panel Lights, License Lights
- ⑪ - 10 Amp. Right High Beam Headlight
- ⑫ - 10 Amp. Left Low Beam Headlight
- ⑬ - 15 Amp. Not Used
- ⑭ - 10 Amp. Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- ⑮ - 16 Amp. Horns, Hazard Warning Lights

604 - Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and numbered from left to right, top row first. Protected circuits are:

- ① - 10 Amp. Lighter, Horns, Flashers, Courtesy Light
- ② - 10 Amp. Stop and Backup Lights, Gauges, Indicator Lights, Starter Switch
- ③ - 16 Amp. Defogger, Indicator Lights, Accessories
- ④ - 16 Amp. A/C Fan, Wipers, Washers, Sunroof
- ⑤ - 10 Amp. Parking and Marker Lights, Dash Lights
- ⑥ - 16 Amp. Heater Fan and A/C Compressor Relays
- ⑦ - 16 Amp. Power Windows
- ⑧ - 16 Amp. Rear Window Lockout

PORSCHE

FUSE BLOCK

924 - Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- ① - 8 Amp. Left Headlight (Low Beam)
- ② - 8 Amp. Right Headlight (Low Beam)
- ③ - 8 Amp. Left Headlight (High Beam)
- ④ - 8 Amp. Right Headlight (High Beam)
- ⑤ - Not Used
- ⑥ - 8 Amp. Courtesy Lights, Headlight Motors
- ⑦ - 8 Amp. Flashers, Lighter, Clock
- ⑧ - 8 Amp. Turn Signal Indicators
- ⑨ - 8 Amp. Backup Lights, Rear Wiper, Mirrors
- ⑩ - 16 Amp. Fresh Air Blower
- ⑪ - 8 Amp. Windshield Wipers
- ⑫ - 8 Amp. License Plate & Luggage Compartment Lights
- ⑬ - 8 Amp. Side Marker Light (Right)
- ⑭ - 8 Amp. Side Marker Light (Left)
- ⑮ - 16 Amp. Fog Lights
- ⑯ - 8 Amp. Horn
- ⑰ - 16 Amp. Fuel Pump
- ⑱ - 16 Amp. Engine Fan, Antenna
- ⑲ - 25 Amp. Defogger
- ⑳ - 16 Amp. A/C Condenser Fan
- ㉑ - 25 Amp. A/C Compressor, Fresh Air Fan
- ㉒ - Blank
- ㉓ - 25 Amp. Power Windows
- ㉔ - Blank

Relays are numbered from right to left, top row first:

- ① - Cooling Fan
- ② - Fuel Pump
- ③ - A/C
- ④ - Headlight Washer
- ⑤ - Not Used
- ⑥ - Rear Defogger
- ⑦ - Not Used
- ⑧ - Not Used
- ⑨ - Horn
- ⑩ - Wipers
- ⑪ - Turn Signals
- ⑫ - Not Used

911SC - Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window

Defogger and Wiper Return (25 Amp.). Main Fuses, numbered from front of car to rear, protect the following circuits:

- ① - 25 Amp. Fog Lamps
- ② - 5 Amp. License Plate Lights
- ③ - 5 Amp. Right Front and Rear Parking Lights
- ④ - 5 Amp. Left Front & Rear Parking Lights
- ⑤ - 8 Amp. Right Headlight Low Beam
- ⑥ - 8 Amp. Left Headlight Low Beam
- ⑦ - 8 Amp. Right Headlight High Beam
- ⑧ - 8 Amp. Left Headlight High Beam, High Beam Indicator
- ⑨ - 5 Amp. Right Front Turn Signal
- ⑩ - 5 Amp. Left Front Turn Signal
- ⑪ - 16 Amp. Turn Signal Relay, Stop Lights, Back-up Lights
- ⑫ - 25 Amp. Defogger, Fresh Air Blower
- ⑬ - 25 Amp. Front Wiper/Washer, Lighter
- ⑭ - 25 Amp. Sunroof, Mirrors, Rear Wiper/Washer
- ⑮ - 8 Amp. Brake Lights, Cruise Control
- ⑯ - 25 Amp. Fuel Pump
- ⑰ - 16 Amp. Hazard Flasher
- ⑱ - 5 Amp. Courtesy Lights, Clock, Trunk Light
- ⑲ - 25 Amp. Headlight Washer
- ⑳ - 25 Amp. A/C Blower Motor
- ㉑ - 25 Amp. Power Windows

928 - Fuse block is located in passenger footwell. It contains 34 fuses and 22 relays. Two 400mA inline fuses are located above the fuse panel and protects the security system. Circuits protected by fuses are as follows, from left to right:

- ① - 16 Amp. Fog Lights
- ② - Not Connected
- ③ - 8 Amp. License Light, Engine Compartment Light
- ④ - 8 Amp. Switch Illumination Light
- ⑤ - 16 Amp. Cigar Lighter
- ⑥ - 16 Amp. Windshield Wipers
- ⑦ - Not Used
- ⑧ - 16 Amp. Sunroof
- ⑨ - 8 Amp. Back-up Lights, Mirror, Rear Wiper, A/C
- ⑩ - 8 Amp. Brake Lights, Automatic Speed Control
- ⑪ - 8 Amp. Instrument Panel Lights
- ⑫ - 8 Amp. Instrument Warning Lights
- ⑬ - Not Connected
- ⑭ - 25 Amp. Power Seats
- ⑮ - 16 Amp. Power Antenna, Horn, Rear Wiper
- ⑯ - 25 Amp. Electric Radiator Fan
- ⑰ - 25 Amp. Heater, Air Conditioning Blower
- ⑱ - 15 Amp. Rear Window Defogger
- ⑲ - 16 Amp. Headlight Motor
- ⑳ - 16 Amp. Headlight Washer
- ㉑ - 25 Amp. Power Windows