

PEUGEOT (Cont.)

- ② - 10 Amp. Stop Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- ⑩ - 10 Amp. Parking Lights & Indicator, Instrument Panel Lights, License Lights
- ⑪ - 10 Amp. Right High Beam Headlight
- ⑫ - 10 Amp. Left Low Beam Headlight
- ⑬ - 15 Amp. Not Used
- ⑭ - 10 Amp. Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- ⑮ - 16 Amp. Horns, Hazard Warning Lights

604 - Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and numbered from left to right, top row first. Protected circuits are:

- ① - 10 Amp. Lighter, Horns, Flashers, Courtesy Light
- ② - 10 Amp. Stop and Backup Lights, Gauges, Indicator Lights, Starter Switch
- ③ - 16 Amp. Defogger, Indicator Lights, Accessories
- ④ - 16 Amp. A/C Fan, Wipers, Washers, Sunroof
- ⑤ - 10 Amp. Parking and Marker Lights, Dash Lights
- ⑥ - 16 Amp. Heater Fan and A/C Compressor Relays
- ⑦ - 16 Amp. Power Windows
- ⑧ - 16 Amp. Rear Window Lockout

PORSCHE

FUSE BLOCK

924 - Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- ① - 8 Amp. Left Headlight (Low Beam)
- ② - 8 Amp. Right Headlight (Low Beam)
- ③ - 8 Amp. Left Headlight (High Beam)
- ④ - 8 Amp. Right Headlight (High Beam)
- ⑤ - Not Used
- ⑥ - 8 Amp. Courtesy Lights, Headlight Motors
- ⑦ - 8 Amp. Flashers, Lighter, Clock
- ⑧ - 8 Amp. Turn Signal Indicators
- ⑨ - 8 Amp. Backup Lights, Rear Wiper, Mirrors
- ⑩ - 16 Amp. Fresh Air Blower
- ⑪ - 8 Amp. Windshield Wipers
- ⑫ - 8 Amp. License Plate & Luggage Compartment Lights
- ⑬ - 8 Amp. Side Marker Light (Right)
- ⑭ - 8 Amp. Side Marker Light (Left)
- ⑮ - 16 Amp. Fog Lights
- ⑯ - 8 Amp. Horn
- ⑰ - 16 Amp. Fuel Pump
- ⑱ - 16 Amp. Engine Fan, Antenna
- ⑲ - 25 Amp. Defogger
- ⑳ - 16 Amp. A/C Condenser Fan
- ㉑ - 25 Amp. A/C Compressor, Fresh Air Fan
- ㉒ - Blank
- ㉓ - 25 Amp. Power Windows
- ㉔ - Blank

Relays are numbered from right to left, top row first:

- ① - Cooling Fan
- ② - Fuel Pump
- ③ - A/C
- ④ - Headlight Washer
- ⑤ - Not Used
- ⑥ - Rear Defogger
- ⑦ - Not Used
- ⑧ - Not Used
- ⑨ - Horn
- ⑩ - Wipers
- ⑪ - Turn Signals
- ⑫ - Not Used

911SC - Main fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 Amp.), Heater Fan (25 Amp.) and Rear Window

Defogger and Wiper Return (25 Amp.). Main Fuses, numbered from front of car to rear, protect the following circuits:

- ① - 25 Amp. Fog Lamps
- ② - 5 Amp. License Plate Lights
- ③ - 5 Amp. Right Front and Rear Parking Lights
- ④ - 5 Amp. Left Front & Rear Parking Lights
- ⑤ - 8 Amp. Right Headlight Low Beam
- ⑥ - 8 Amp. Left Headlight Low Beam
- ⑦ - 8 Amp. Right Headlight High Beam
- ⑧ - 8 Amp. Left Headlight High Beam, High Beam Indicator
- ⑨ - 5 Amp. Right Front Turn Signal
- ⑩ - 5 Amp. Left Front Turn Signal
- ⑪ - 16 Amp. Turn Signal Relay, Stop Lights, Back-up Lights
- ⑫ - 25 Amp. Defogger, Fresh Air Blower
- ⑬ - 25 Amp. Front Wiper/Washer, Lighter
- ⑭ - 25 Amp. Sunroof, Mirrors, Rear Wiper/Washer
- ⑮ - 8 Amp. Brake Lights, Cruise Control
- ⑯ - 25 Amp. Fuel Pump
- ⑰ - 16 Amp. Hazard Flasher
- ⑱ - 5 Amp. Courtesy Lights, Clock, Trunk Light
- ⑲ - 25 Amp. Headlight Washer
- ⑳ - 25 Amp. A/C Blower Motor
- ㉑ - 25 Amp. Power Windows

928 - Fuse block is located in passenger footwell. It contains 34 fuses and 22 relays. Two 400mA inline fuses are located above the fuse panel and protects the security system. Circuits protected by fuses are as follows, from left to right:

- ① - 16 Amp. Fog Lights
- ② - Not Connected
- ③ - 8 Amp. License Light, Engine Compartment Light
- ④ - 8 Amp. Switch Illumination Light
- ⑤ - 16 Amp. Cigar Lighter
- ⑥ - 16 Amp. Windshield Wipers
- ⑦ - Not Used
- ⑧ - 16 Amp. Sunroof
- ⑨ - 8 Amp. Back-up Lights, Mirror, Rear Wiper, A/C
- ⑩ - 8 Amp. Brake Lights, Automatic Speed Control
- ⑪ - 8 Amp. Instrument Panel Lights
- ⑫ - 8 Amp. Instrument Warning Lights
- ⑬ - Not Connected
- ⑭ - 25 Amp. Power Seats
- ⑮ - 16 Amp. Power Antenna, Horn, Rear Wiper
- ⑯ - 25 Amp. Electric Radiator Fan
- ⑰ - 25 Amp. Heater, Air Conditioning Blower
- ⑱ - 15 Amp. Rear Window Defogger
- ⑲ - 16 Amp. Headlight Motor
- ⑳ - 16 Amp. Headlight Washer
- ㉑ - 25 Amp. Power Windows

PORSCHÉ (Cont.)

- 22 — 16 Amp. Fuel Pump
- 23 — 8 Amp. Interior Lights, Clock
- 24 — 8 Amp. High Beam Headlights Left
- 25 — 8 Amp. High Beam Headlights Right
- 26 — 8 Amp. Low Beam Headlights Left
- 27 — 8 Amp. Low Beam Headlights Right
- 28 — 8 Amp. Left Side Markers
- 29 — 8 Amp. Right Side Markers
- 30 — 8 Amp. Front Left Turn Signal
- 31 — 8 Amp. Rear Left Turn Signal
- 32 — 8 Amp. Front Right Turn Signal
- 33 — 8 Amp. Rear Right Turn Signal
- 34 — Not Connected

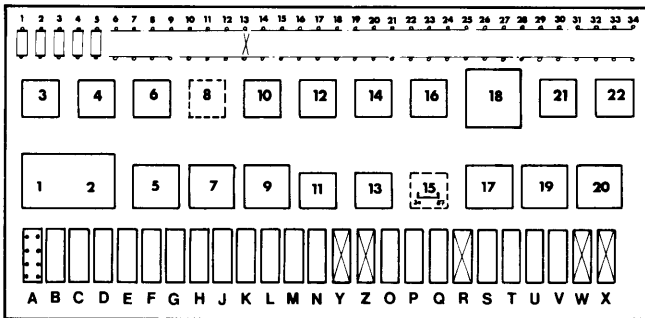


Fig. 1 Porsche 928 Fuse and Relay Block

Relay circuits are below the fuses in the main electrical panel. Other relays include the seat return relay (below seat), the rear wiper relay (at left rear corner behind tool kit tray) and the seat belt relay (behind radio).

- 1-2 — Rear Defogger
- 3 — Not Used
- 4 — Not Used
- 5 — Hazard Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Used
- 9 — Not Used
- 10 — Horns
- 11 — Not Used
- 12 — Fog Lights
- 13 — Intermittent Wiper Speed Control
- 14 — Starter Relay Bridge
- 15 — Washer Pump
- 16 — EFI Control Unit
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for Air Conditioning
- 19-20 — Retractable Headlight Relay
- 21 — Fresh Air Fan
- 22 — Defroster

RENAULT

FUSE BLOCK

LeCar — Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- 1 — 5 Amp. Left Side Parking Lights, Dash Lights
- 2 — 5 Amp. Right Parking Lights
- 3 — 8 Amp. Wiper/Washer
- 4 — 5 Amp. Courtesy Lights, Lighter
- 5 — 8 Amp. Heater Fan, Radio
- 6 — 5 Amp. Turn Signals
- 7 — Blank
- 8 — 16 Amp. Backup Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Speed Sensor

18i — Fuse panel is located to left of steering column under edge of dashboard. Fuses are numbered from right to left,

with even-numbered fuses in top row, and odd-numbered fuses in bottom row. The circuits protected are:

- 1 — 8 Amp. Turn Signals, Flashers
- 2 — 5 Amp. Wiper Park Circuit
- 3 — Not Used
- 4 — Not Used
- 5 — Not Used
- 6 — 8 Amp. Lighter, Courtesy Lights
- 7 — Not Used
- 8 — 16 Amp. Wiper/Washer
- 9 — Not Used
- 10 — 8 Amp. Left Marker Lights, Panel Lights
- 11 — 10 Amp. Left Power Window
- 12 — 5 Amp. Right Marker Lights, Switch Lights
- 13 — 10 Amp. Right Power Window
- 14 — 5 Amp. Gauges
- 15 — 1.5 Amp. Back-up Lights, Intermittent Wiper Relay
- 16 — 1.5 Amp. Auto. Trans.
- 17 — 16 Amp. Heater & A/C Fan
- 18 — 16 Amp. Rear Defogger

SAAB

FUSE BLOCK

900 Models — Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- 1 — 8 Amp. Right High Beam
- 2 — 8 Amp. Left High Beam
- 3 — 8 Amp. Right Low Beam

- 4 — 8 Amp. Left Low Beam
- 5 — 16 Amp. Engine Fan
- 6 — 16 Amp. Defogger
- 7 — 8 Amp. Courtesy Lights
- 8 — 16 Amp. Fuel Pump
- 9 — 8 Amp. Hazard Flashers
- 10 — 5 Amp. Stop Lights
- 11 — 16 Amp. A/C Fan
- 12 — 5 Amp. Right Parking and Taillights