

SAAB (Cont.)

- | | |
|--|------------------------------|
| ⑬ — 5 Amp. Left Parking and Taillights | ⑲ — 8 Amp. A/C |
| ⑭ — 25 Amp. Horn | ⑳ — 8 Amp. Warning Lights |
| ⑮ — 8 Amp. Mirrors | ㉑ — 8 Amp. Turn Signals |
| ⑯ — 16 Amp. Heated Driver's Seat | ㉒ — 8 Amp. Wiper/Washer |
| ⑰ — 25 Amp. Heater Fan | ㉓ — 16 Amp. Cornering Lights |

SUBARU

FUSE BLOCK

All Models — The fuse block is located underneath dashboard on left side. Inline fuses protect the Choke (10 Amp. White), Power Windows (25 Amp. Black), Fuel Pump and Regulator (5 Amp. White), Emissions Computer (5 Amp. Pink) and Rear Defogger (15 Amp. Black). All other circuits are fused through the block. Fuses are numbered from top (toward front of vehicle) to bottom, left row first. Protected circuits are:

- ① — 25 Amp. Heater Fan Motor

- ② — 15 Amp. Radio, Lighter, Rear Wiper/Washer
 ③ — 15 Amp. Front Wiper/Washer, Engine Fan
 ④ — 15 Amp. Headlight Low Beams
 ⑤ — 15 Amp. Headlight High Beams

Next Row

- ⑥ — 15 Amp. Coil, Fuel Pump, Gauges, Warning Lights
 ⑦ — 15 Amp. Turn Signals, Back-up Lights
 ⑧ — 15 Amp. Marker Lights, Tail Lights
 ⑨ — 15 Amp. Horn, Stop Lights, Flashers, Courtesy Lights
 ⑩ — 25 Amp. Headlight Switch

TOYOTA

FUSE BLOCK

Celica — Main fuse block is located on left side of instrument panel behind cover. In addition, a smaller fuse block is located in engine compartment on left side. Fuses in main block are arranged in three rows. Fuses in engine fuse block are arranged in two rows. Moving from top-to-bottom, and left-to-right, fuses are as follows:

Main Block

- ① — 5 Amp. Courtesy Lights, Trunk Light, Clock
 ② — 15 Amp. Tail, Parking, License, Glove Box, Transmission Selector, Instrument Panel, Heater Panel & Marker Lights, Cigar Lighter
 ③ — Not Used
 ④ — 15 Amp. Gauges, Back-up Lights, Warning Lights
 ⑤ — 15 Amp. Turn Signals, Front Wiper/Washer
 ⑥ — 15 Amp. Alternator Regulator, Emission Controls
 ⑦ — 7.5 Amp. Radio, Tape Player
 ⑧ — 15 Amp. Lighter
 ⑨ — Not Used

Engine Fuse Block

- ⑩ — 15 Amp. Heater, A/C
 ⑪ — Not Used
 ⑫ — 15 Amp. Horn, Flashers, Stop Lights
 ⑬ — 15 Amp. Right Headlights
 ⑭ — 15 Amp. Left Headlights

Corolla — Three fuse blocks are used. One is in the engine compartment on left side. The others are under the left side of dashboard and on the left kick panel. Starting from top to bottom and from left to right, protected circuits are:

Kick Panel Block

- ① & ② — 15 Amp. Rear Defogger

Next Row

- ③ — 10 Amp. Marker & Panel Lights, Tail Lights
 ④ — 5 Amp. Courtesy Lights

Next Row

- ⑤ — 10 Amp. Stop Light

Main Fuse Block

- ① — 20 Amp. Wiper/Washer (Front & Rear)
 ② — 5 Amp. Radio

Next Row

- ③ — Not Used
 ④ — 10 Amp. Gauges, Back-up Lights, Warning Lights
 ⑤ — 10 Amp. Lighter, Clock
 ⑥ — 7.5 Amp. Turn Signals
 ⑦ — 10 Amp. Main Relay, Choke Relay, Emission Controls, Cooling Fan

Engine Fuse Block

- ① — 15 Amp. Left Side Headlights
 ② — 15 Amp. Right Side Headlights
 ③ — 10 Amp. Hazard Warning Flashers, Horn
 ④ — 10 Amp. Discharge Warning Light, Charge Light Relay, Choke Relay
 ⑤ & ⑥ — 15 Amp. Heater, A/C
 ⑦ — Voltage Regulator, Charge Relay

Corona — Fuse block is next to steering column at left side of instrument panel. A second fuse block is located in engine compartment. Fuses and protected circuits are:

Main Fuse Block

- ① — 7.5 Amp. Radio
 ② — 15 Amp. Stop Lights, Cruise Control
 ③ — 5 Amp. Courtesy Lights
 ④ — 10 Amp. Left Tail Lights, Left Marker Lights
 ⑤ — 10 Amp. Right Tail Lights, Right Marker Lights, Panel Lights
 ⑥ — 15 Amp. Cruise Control Emission Computer, Main & Ignition Relays
 ⑦ — 10 Amp. Turn Signals
 ⑧ — 10 Amp. Gauges, Warning Lights, Overdrive Relay, Back-up Lights

Engine Fuse Block

- ① — 10 Amp. A/C
 ② — 20 Amp. Wiper/Washer
 ③ — 10 Amp. Alternator, Choke Heater
 ④ — 15 Amp. Horn, Hazard Flashers
 ⑤ — 15 Amp. Right Headlight
 ⑥ — 15 Amp. Left Headlight

The heater fan, rear defogger and sun roof are protected by circuit breakers.

TOYOTA (Cont.)

Cressida — The main fuse block is in the instrument panel. A second block is located in the engine compartment. Fuses are numbered from left to right, top row first. They protect the following circuits:

Main Fuse Block

- ① — 7.5 Amp. Turn Signals
- ② — 15 Amp. Cruise Control, Rear Wiper/Washer, Overdrive
- ③ — 7.5 Amp. Gauges, Heater, A/C, Back-up Lights
- ④ — 5 Amp. Courtesy Lights, Radio, Clock
- ⑤ — 7.5 Amp. Fuel Inj., Ignition, Charging Light

Next Row

- ⑥ — 7.5 Amp. Radio, Clock
- ⑦ — 15 Amp. Lighter, Antenna

Engine Fuse Panel

- ① — 7.5 Amp. Charging Relay
- ② — 15 Amp. Voltage Regulator
- ③ — 15 Amp. Horn, Flashers
- ④ — 15 Amp. Panel & Marker Lights, Tail Lights, Clock
- ⑤ — 15 Amp. Right Headlight
- ⑥ — 15 Amp. Left Headlight
- ⑦ — 15 Amp. Fuel Injection
- ⑧ — 20 Amp. Front Wiper/Washer
- ⑨ — 15 Amp. Cruise Control, Stop Lights

The rear defogger circuit breaker is on the main panel. It is reset by inserting a pin into the small hole on top. The power windows, door locks and sun roof are protected by one large circuit breaker. Press the button to reset this breaker.

Pickup — Fuse block is located on left side of instrument panel. Fuses are numbered, starting from top to bottom of each row, moving from right to left. Circuits protected are:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 15 Amp. Horn, Hazard Flashers
- ④ — 10 Amp. Turn Signals
- ⑤ — 10 Amp. Gauges, Heater Relay, Backup Lights
- ⑥ — 15 Amp. Engine Controls, Fuel Pump
- ⑦ — 15 Amp. Wipers, Washers
- ⑧ — 10 Amp. Lighter
- ⑨ — 10 Amp. Stop Lights
- ⑩ — 15 Amp. Tail Lights, Dashboard Lights, Marker Lights
- ⑪ — 15 Amp. Heater, A/C
- ⑫ — 5 Amp. Radio, Tape Player
- ⑬ — 5 Amp. Courtesy Light, Clock

Land Cruiser (FJ40) — Main fuse block is under the left side of instrument panel. The Ammeter fuses are near the battery, a 15 Amp. A/C fuse is near heater fan motor, and the 5 Amp. Engine Fan fuse is behind instrument panel. Fuses in the main block protect:

- ① — 15 Amp. Tail, Parking, Marker, License, Dome & Instrument Panel Lights.
- ② — 15 Amp. Horn, Stop Lights, Hazard Flashers, Engine Fan
- ③ — 15 Amp. Headlights
- ④ — 5 Amp. Radio
- ⑤ — 15 Amp. Lighter
- ⑥ — 15 Amp. Engine Controls
- ⑦ — 20 Amp. Heater Fan, Gauges, Buzzers
- ⑧ — 20 Amp. Turn Signals, Wiper/Washer

Land Cruiser (FJ60 Station Wagon) — Main fuse block is located at left side of instrument panel. The circuits protected are:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — 15 Amp. Lighter, Antenna
- ④ — 5 Amp. Radio
- ⑤ — 15 Amp. Parking, Marker & Panel Lights, Tail Lights
- ⑥ — 10 Amp. Brake Lights
- ⑦ — 10 Amp. Horn, Flashers
- ⑧ — 10 Amp. Engine Controls, Regulator
- ⑨ — 10 Amp. Turn Signals
- ⑩ — 15 Amp. Wiper/Washer, Back-up Lights, Winch Switch
- ⑪ — 10 Amp. A/C
- ⑫ — 20 Amp. Rear Defogger
- ⑬ — 5 Amp. Gauges, Buzzer, Heater Relay
- ⑭ — 5 Amp. Regulator
- ⑮ — 5 Amp. Courtesy Light, Engine Fan

Starlet — Fuse block is located at left side of instrument panel. Fuses are arranged in 5 rows of 3. Starting at top left row and going down, then across, fuses protect:

- ① — 10 Amp. Right Headlight
- ② — 10 Amp. Left Headlight
- ③ — Marker, Parking & Panel Lights, Tail Lights

Next Row

- ④ — 10 Amp. Lighter
- ⑤ — 5 Amp. Radio
- ⑥ — 15 Amp. Flashers, Horn, Brake Lights

Next Row

- ⑦ — 15 Amp. Turn Signals, Back-up Lights, Gauges
- ⑧ — 20 Amp. Heater, A/C
- ⑨ — 5 Amp. Courtesy Lights, Clock
- ⑩ — 10 Amp. Emission Controls, Regulator, Main Relay
- ⑪ — 15 Amp. Wiper/Washer (Front & Rear)
- ⑫ — 15 Amp. Rear Defogger
- ⑬ — 5 Amp. Voltage Regulator
- ⑭ — 10 Amp. A/C
- ⑮ — Spare

Supra — Main fuse block is located on left side of instrument panel. An additional fuse block is located on right side of engine compartment. The rear window defogger is protected by a circuit breaker located in right side kick panel. Fuses in block are arranged in three rows. Starting from left-to-right, top-to-bottom, circuits protected are as follows:

Main Fuse Block

- ① — 5 Amp. Interior Lights, Luggage Compartment Light & Clock
- ② — 15 Amp. Tail Lights Relay, Tail Lights, Parking Lights, License Lights, Glove Box Light, Lighter, Heater Control Light, Transmission Indicator Light, Map Light, Instrument Panel Lights, Marker Lights
- ③ — 30 Amp. Power Windows
- ④ — 15 Amp. Gauges, Warning Indicators, Cruise Control, Defogger Switch, Illuminated Entry Relay, Overdrive Solenoid, Heater Relay, Back-Up Lights
- ⑤ — 15 Amp. Turn Signals, Wipers, Washer
- ⑥ — 15 Amp. Alternator, Discharge Warning Light Relay, Electronic Fuel Injection Relay, Emission Control System
- ⑦ — 7.5 Amp. Radio & Tape Player
- ⑧ — 15 Amp. Lighter
- ⑨ — Not Used

TOYOTA (Cont.)

Engine Fuse Block

- ① - 15 Amp. Stop Lights, Horn, Flashers
- ② - 15 Amp. Heater, Air Conditioning
- ③ - 15 Amp. Right Side High & Low Headlights
- ④ - 15 Amp. Left Side High & Low Headlights

Tercel - Main fuse block is located at left side of dashboard. A second panel is located in the engine compartment. Fuses in main block are numbered starting with the vertical fuse at left, then from top to bottom. Engine compartment fuses are also numbered starting with forward fuse closest to engine.

Main Fuse Block

- ① - 5 Amp. Radio
- ② - 10 Amp. Lighter, Clock
- ③ - Not Used (Inline Circuit Breaker for Defogger)
- ④ - 10 Amp. Turn Signals, Back-up Lights, Gauges
- ⑤ - 5 Amp. Engine Controls, Computer

Next Row

- ⑥ - 10 Amp. Brake Lights
- ⑦ - 20 Amp. Heater Relay, Heater Blower, A/C
- ⑧ - 15 Amp. Marker, Panel & License Lights, Tail Lights
- ⑨ - 5 Amp. Courtesy Lights, Clock

Engine Compartment Block

- ① - 10 Amp. Right Headlight
- ② - 10 Amp. Left Headlight
- ③ - 5 Amp. Charge Light, Choke Heater

Next Row

- ④ - 15 Amp. Horn, Flashers
- ⑤ - 20 Amp. Wiper/Washer (Front & Rear)
- ⑥ - 10 Amp. Voltage Regulator

FUSIBLE LINKS

All Models - A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

TRIUMPH

FUSE BLOCK

TR7 & TR8 - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glove box. Fuses are arranged in two rows of six. Circuits protected, from top left to right are as follows:

- ① - 25 Amp. Left Headlight Low Beam
- ② - 25 Amp. Back-Up Lights, Wiper Motor
- ③ - 25 Amp. Left Headlight High Beam
- ④ - 35 Amp. Air Conditioning Clutch Relay, Blower Fan

- ⑤ - 25 Amp. Right Headlight High Beam
- ⑥ - 25 Amp. Right Headlight Low Beam
- ⑦ - 35 Amp. Air Conditioning Fan Relay
- ⑧ - 15 Amp. Rear Window Defogger
- ⑨ - 50 Amp. Horn, Cigar Lighter, Hazard Warning, Courtesy Lights, Fog Lights, Power Antenna
- ⑩ - 15 Amp. Front Right Parking & Marker Lights, Instrument Panel Dimmer
- ⑪ - 15 Amp. Front Left Parking & Marker Lights
- ⑫ - 35 Amp. Air Conditioning Fan Relay

VOLKSWAGEN

FUSE BLOCK

Dasher, Jetta, Rabbit, Convertible & Scirocco - Fuse block is located under dashboard on left side. Additional inline fuses above the block protect Rear Wipers (8 Amp.), Fuel Pump (16 Amp.), and A/C (25 Amp.). Circuits protected are as follows:

- ① - 8 Amp. Left Headlight Low Beam
- ② - 8 Amp. Right Headlight Low Beam
- ③ - 8 Amp. Left Headlight High Beam and Indicator
- ④ - 8 Amp. Right Headlight High Beam
- ⑤ - 16 Amp. Rear Window Defogger (Not Used on Pickup)
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher
- ⑦ - 8 Amp. Interior Lights, Clock, Cigar Lighter
- ⑧ - 8 Amp. Turn Signal System
- ⑨ - 8 Amp. Back-Up Lights, Horn, Transmission Shift Indicator (Dasher), Choke
- ⑩ - 16 Amp. Fresh Air Fan
- ⑪ - 8 Amp. Windshield Wiper & Washer
- ⑫ - 8 Amp. Luggage Compartment & License Plate Lights
- ⑬ - 8 Amp. Right Parking, Tail & Side Marker Lights
- ⑭ - 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ - 25 Amp. Radiator Fan

Rabbit & Rabbit Pickup - Fuse block is located at left side of instrument panel under a cover. The fuses are numbered. Starting at top right corner coming toward front, then from right to left, circuits are:

- ① - 30 Amp. Radiator Fan
- ② - 15 Amp. Parking Lights
- ③ - 20 Amp. Horn
- ④ - Not Used
- ⑤ - 4 Amp. Panel Lights
- ⑥ - 30 Amp. Fuel Pump
- ⑦ - Not Used

Next Row

- ⑧ - Not Used
- ⑨ - 10 Amp. Rear Wiper/Washer
- ⑩ - 15 Amp. Turn Signals
- ⑪ - 5 Amp. Radio
- ⑫ - 10 Amp. Back-up Lights
- ⑬ - Not Used
- ⑭ - Not Used

Next Row

- ⑮ - Not Used
- ⑯ - Not Used
- ⑰ - Not Used
- ⑱ - Not Used
- ⑲ - 25 Amp. Heater
- ⑳ - 25 Amp. Rear Defogger
- ㉑ - 20 Amp. Front Wiper/Washer
- ㉒ - Not Used
- ㉓ - Not Used
- ㉔ - 15 Amp. Stop Lights, Flashers