

## TOYOTA (Cont.)

### Engine Fuse Block

- ① - 15 Amp. Stop Lights, Horn, Flashers
- ② - 15 Amp. Heater, Air Conditioning
- ③ - 15 Amp. Right Side High & Low Headlights
- ④ - 15 Amp. Left Side High & Low Headlights

**Tercel** - Main fuse block is located at left side of dashboard. A second panel is located in the engine compartment. Fuses in main block are numbered starting with the vertical fuse at left, then from top to bottom. Engine compartment fuses are also numbered starting with forward fuse closest to engine.

### Main Fuse Block

- ① - 5 Amp. Radio
- ② - 10 Amp. Lighter, Clock
- ③ - Not Used (Inline Circuit Breaker for Defogger)
- ④ - 10 Amp. Turn Signals, Back-up Lights, Gauges
- ⑤ - 5 Amp. Engine Controls, Computer

### Next Row

- ⑥ - 10 Amp. Brake Lights
- ⑦ - 20 Amp. Heater Relay, Heater Blower, A/C
- ⑧ - 15 Amp. Marker, Panel & License Lights, Tail Lights
- ⑨ - 5 Amp. Courtesy Lights, Clock

### Engine Compartment Block

- ① - 10 Amp. Right Headlight
- ② - 10 Amp. Left Headlight
- ③ - 5 Amp. Charge Light, Choke Heater

### Next Row

- ④ - 15 Amp. Horn, Flashers
- ⑤ - 20 Amp. Wiper/Washer (Front & Rear)
- ⑥ - 10 Amp. Voltage Regulator

### FUSIBLE LINKS

**All Models** - A fusible link is located in main battery feed wire near the battery. Protects all circuits except for starter motor.

## TRIUMPH

### FUSE BLOCK

**TR7 & TR8** - Fuse block is located on a relay plate and is accessible after removal of cover panel at front of glove box. Fuses are arranged in two rows of six. Circuits protected, from top left to right are as follows:

- ① - 25 Amp. Left Headlight Low Beam
- ② - 25 Amp. Back-Up Lights, Wiper Motor
- ③ - 25 Amp. Left Headlight High Beam
- ④ - 35 Amp. Air Conditioning Clutch Relay, Blower Fan

- ⑤ - 25 Amp. Right Headlight High Beam
- ⑥ - 25 Amp. Right Headlight Low Beam
- ⑦ - 35 Amp. Air Conditioning Fan Relay
- ⑧ - 15 Amp. Rear Window Defogger
- ⑨ - 50 Amp. Horn, Cigar Lighter, Hazard Warning, Courtesy Lights, Fog Lights, Power Antenna
- ⑩ - 15 Amp. Front Right Parking & Marker Lights, Instrument Panel Dimmer
- ⑪ - 15 Amp. Front Left Parking & Marker Lights
- ⑫ - 35 Amp. Air Conditioning Fan Relay

## VOLKSWAGEN

### FUSE BLOCK

**Dasher, Jetta, Rabbit, Convertible & Scirocco** - Fuse block is located under dashboard on left side. Additional inline fuses above the block protect Rear Wipers (8 Amp.), Fuel Pump (16 Amp.), and A/C (25 Amp.). Circuits protected are as follows:

- ① - 8 Amp. Left Headlight Low Beam
- ② - 8 Amp. Right Headlight Low Beam
- ③ - 8 Amp. Left Headlight High Beam and Indicator
- ④ - 8 Amp. Right Headlight High Beam
- ⑤ - 16 Amp. Rear Window Defogger (Not Used on Pickup)
- ⑥ - 8 Amp. Stop Lights, Hazard Warning Flasher
- ⑦ - 8 Amp. Interior Lights, Clock, Cigar Lighter
- ⑧ - 8 Amp. Turn Signal System
- ⑨ - 8 Amp. Back-Up Lights, Horn, Transmission Shift Indicator (Dasher), Choke
- ⑩ - 16 Amp. Fresh Air Fan
- ⑪ - 8 Amp. Windshield Wiper & Washer
- ⑫ - 8 Amp. Luggage Compartment & License Plate Lights
- ⑬ - 8 Amp. Right Parking, Tail & Side Marker Lights
- ⑭ - 8 Amp. Left Parking, Tail & Side Marker Lights
- ⑮ - 25 Amp. Radiator Fan

**Rabbit & Rabbit Pickup** - Fuse block is located at left side of instrument panel under a cover. The fuses are numbered. Starting at top right corner coming toward front, then from right to left, circuits are:

- ① - 30 Amp. Radiator Fan
- ② - 15 Amp. Parking Lights
- ③ - 20 Amp. Horn
- ④ - Not Used
- ⑤ - 4 Amp. Panel Lights
- ⑥ - 30 Amp. Fuel Pump
- ⑦ - Not Used

### Next Row

- ⑧ - Not Used
- ⑨ - 10 Amp. Rear Wiper/Washer
- ⑩ - 15 Amp. Turn Signals
- ⑪ - 5 Amp. Radio
- ⑫ - 10 Amp. Back-up Lights
- ⑬ - Not Used
- ⑭ - Not Used

### Next Row

- ⑮ - Not Used
- ⑯ - Not Used
- ⑰ - Not Used
- ⑱ - Not Used
- ⑲ - 25 Amp. Heater
- ⑳ - 25 Amp. Rear Defogger
- ㉑ - 20 Amp. Front Wiper/Washer
- ㉒ - Not Used
- ㉓ - Not Used
- ㉔ - 15 Amp. Stop Lights, Flashers

**VOLKSWAGEN (Cont.)**

- ⑳ — 15 Amp. Courtesy Lights
- ㉑ — 10 Amp. Lighter
- ㉒ — 4 Amp. Horn Relay
- ㉓ — Not Used

**Vanagon** — Fuse block is located under dashboard on left side of steering column. Fuse block contains 12 circuits. In addition, a 16 Amp. fuse is located at right side of fuse panel to protect blower fan. Circuits protected in main fuse block are as follows:

- ① — 8 Amp. Left Tail, Parking & Marker Lights
- ② — 8 Amp. Right Tail, Parking, Marker & License Lights
- ③ — 8 Amp. Low Beam Headlight Left
- ④ — 8 Amp. Low Beam Headlight Right
- ⑤ — 8 Amp. Left High Beam Headlight & Indicator

- ⑥ — 8 Amp. Right High Beam Headlight
- ⑦ — 8 Amp. Accessories
- ⑧ — 8 Amp. Cigar Lighter, Stop Lights, Interior Lights
- ⑨ — 16 Amp. Hazard Warning Lights
- ⑩ — 16 Amp. Windshield Wiper/Washer, Rear Window Defogger
- ⑪ — 8 Amp. Turn Signals
- ⑫ — 8 Amp. Horn, Back-Up Lights

**Vanagon Changes**

Vanagon relays are from left to right: Flasher, Blank, Load Reduction, Key Buzzer, Wipers.

**VOLVO****FUSE BLOCK**

**All Models** — Fuse block is located in left kick panel behind cover. Fuses are numbered from top to bottom and space is provided for spare fuses at bottom of block. Circuits protected are as follows:

- ① — 8 Amp. Lighter, Rear Wipers, Mirrors, Radio, Cruise Control
- ② — 16 Amp. Horn, Wipers, Washers
- ③ — 16 Amp. Heater Fan
- ④ — 8 Amp. Warning Buzzers
- ⑤ — 8 Amp. Fuel Pump (Feed Pump)
- ⑥ — 8 Amp. Brake Lights, Courtesy Light Relay

- ⑦ — 16 Amp. Main Fuel Pump
- ⑧ — 8 Amp. Courtesy Lights, Power Antenna, Locking System
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 16 Amp. Power Windows, Heated Driver Seat
- ⑪ — 16 Amp. Overdrive, Defogger
- ⑫ — 8 Amp. Backup Lights, Power Window Relay, Heated Driver's Seat, A/C
- ⑬ — 8 Amp. Gauges, Turn Signals, Belt Warning, Fuel Injection Relay
- ⑭ — Spare
- ⑮ — 8 Amp. Left Parking and Marker Lights, License Light
- ⑯ — 8 Amp. Right Parking and Marker Lights, Headlight Buzzer, Instrument Panel Lights