

VOLKSWAGEN (Cont.)

- ⑳ — 15 Amp. Courtesy Lights
- ㉑ — 10 Amp. Lighter
- ㉒ — 4 Amp. Horn Relay
- ㉓ — Not Used

Vanagon — Fuse block is located under dashboard on left side of steering column. Fuse block contains 12 circuits. In addition, a 16 Amp. fuse is located at right side of fuse panel to protect blower fan. Circuits protected in main fuse block are as follows:

- ① — 8 Amp. Left Tail, Parking & Marker Lights
- ② — 8 Amp. Right Tail, Parking, Marker & License Lights
- ③ — 8 Amp. Low Beam Headlight Left
- ④ — 8 Amp. Low Beam Headlight Right
- ⑤ — 8 Amp. Left High Beam Headlight & Indicator

- ⑥ — 8 Amp. Right High Beam Headlight
- ⑦ — 8 Amp. Accessories
- ⑧ — 8 Amp. Cigar Lighter, Stop Lights, Interior Lights
- ⑨ — 16 Amp. Hazard Warning Lights
- ⑩ — 16 Amp. Windshield Wiper/Washer, Rear Window Defogger
- ⑪ — 8 Amp. Turn Signals
- ⑫ — 8 Amp. Horn, Back-Up Lights

Vanagon Changes

Vanagon relays are from left to right: Flasher, Blank, Load Reduction, Key Buzzer, Wipers.

VOLVO**FUSE BLOCK**

All Models — Fuse block is located in left kick panel behind cover. Fuses are numbered from top to bottom and space is provided for spare fuses at bottom of block. Circuits protected are as follows:

- ① — 8 Amp. Lighter, Rear Wipers, Mirrors, Radio, Cruise Control
- ② — 16 Amp. Horn, Wipers, Washers
- ③ — 16 Amp. Heater Fan
- ④ — 8 Amp. Warning Buzzers
- ⑤ — 8 Amp. Fuel Pump (Feed Pump)
- ⑥ — 8 Amp. Brake Lights, Courtesy Light Relay

- ⑦ — 16 Amp. Main Fuel Pump
- ⑧ — 8 Amp. Courtesy Lights, Power Antenna, Locking System
- ⑨ — 8 Amp. Hazard Flashers
- ⑩ — 16 Amp. Power Windows, Heated Driver Seat
- ⑪ — 16 Amp. Overdrive, Defogger
- ⑫ — 8 Amp. Backup Lights, Power Window Relay, Heated Driver's Seat, A/C
- ⑬ — 8 Amp. Gauges, Turn Signals, Belt Warning, Fuel Injection Relay
- ⑭ — Spare
- ⑮ — 8 Amp. Left Parking and Marker Lights, License Light
- ⑯ — 8 Amp. Right Parking and Marker Lights, Headlight Buzzer, Instrument Panel Lights