

AUDI

4000

Fuse Block

Fuse block is located at left side of dashboard behind storage bin. It contains 15 fuses arranged horizontally. Circuits protected are as follows:

- 1 — 8 Amp Left Headlight (Low Beam)
- 2 — 8 Amp Right Headlight (Low Beam)
- 3 — 8 Amp Left Headlight (High Beam)
- 4 — 8 Amp Right Headlight (High Beam)
- 5 — 25 Amp Defogger
- 6 — 8 Amp Brake Lights, Hazard Flashers
- 7 — 8 Amp Cigar Lighter, Audio, Panel Lights
- 8 — 8 Amp Turn Signals
- 9 — 8 Amp Back-Up Lights, Horn
- 10 — 25 Amp Fresh Air Fan, Glove Box Light
- 11 — 8 Amp Wiper/Washer
- 12 — 8 Amp License Light
- 13 — 8 Amp Tail, Parking & Side Marker Lights (Right)
- 14 — 8 Amp Tail, Parking & Side Marker Lights (Left)
- 15 — 25 Amp Radiator Fan

In-Line Fuses

The following fuses are located behind the fuse panel in in-line holders:

- 1 — 25 Amp A/C
- 2 — 16 Amp Heated Seats
- 3 — 25 Amp Power Windows
- 4 — 25 Amp Power Windows
- 5 — 8 Amp Heated Outside Mirrors
- 6 — 8 Amp Central Locking System
- 7 — 16 Amp Fuel Pump

5000

Fuse Block

Fuse block is located in engine compartment left rear corner. Fuses are numbered from 1 to 17, with 17 closest to the front of the car and 1 nearest the rear. Circuits protected are:

- 1 — 25 Amp A/C-Heater Fan, Tachometer
- 2 — Not Used
- 3 — 8 Amp Left Headlight (High Beam)
- 4 — 8 Amp Right Headlight (High Beam)
- 5 — 16 Amp Fuel Pump
- 6 — 8 Amp Right Marker, Right Tail Light
- 7 — 8 Amp Left Marker, Left Tail Light, Engine Compartment Light
- 8 — 8 Amp Instrument Panel, Glove Compartment & License Plate Lights

- 9 — 16 Amp Gauges, Power Windows, Cruise Control, Sunroof, Audio
- 10 — 25 Amp Engine Fan
- 11 — 16 Amp Brake Lights
- 12 — 16 Amp Cigar Lighter, Audio, Antenna, Clock, Mirrors
- 13 — 8 Amp Right Low Beam
- 14 — 8 Amp Left Low Beam
- 15 — 16 Amp Back-Up Lights, Wiper/Washer
- 16 — 25 Amp Defogger
- 17 — 8 Amp Flashers, Turn Signals

The following fuses are in addition to numbered fuses.

- 18 — 25 Amp Power Windows
- 19 — 16 Amp Rear Cigar Lighters
- 20 — 8 Amp Central Locking System

QUATTRO

Fuse Block

Fuse block is located at left side of dashboard behind storage bin. It contains 15 fuses arranged horizontally. Circuits protected are as follows:

- 1 — 8 Amp Left Headlight (Low Beam)
- 2 — 8 Amp Right Headlight (Low Beam)
- 3 — 8 Amp Left Headlight (High Beam)
- 4 — 8 Amp Right Headlight (High Beam)
- 5 — 25 Amp Defogger
- 6 — 8 Amp Brake Lights, Hazard Flashers
- 7 — 8 Amp Cigar Lighter, Panel Lights
- 8 — 8 Amp Turn Signals
- 9 — 8 Amp Back-Up Lights
- 10 — 25 Amp Fresh Air Fan, Glove Box Light
- 11 — 8 Amp Wiper/Washer
- 12 — 8 Amp License Plate Light
- 13 — 8 Amp Tail, Parking & Side Marker Lights (Right)
- 14 — 8 Amp Tail, Parking & Side Marker Lights (Left)
- 15 — 25 Amp Radiator Fan

In-Line Fuses

The following fuses are located behind the fuse panel in in-line holders:

- 1 — 25 Amp Power Windows
- 2 — 25 Amp A/C
- 3 — 16 Amp Fuel Pump
- 4 — 16 Amp Heated Seats
- 5 — 8 Amp Central Locking System
- 6 — 8 Heated Outside Mirror

BMW

320i

Fuse Block

Fuse block is located at left front corner of engine compartment. Fuses are arranged in 6 rows of 3, with first row toward battery. Number 1 fuse is next to front relay. Protected circuits are:

- 1 — 8 Amp Right Fog Light
- 2 — Amp Left Fog Light
- 3 — 16 Amp Fuel Pump

- 4 — 8 Amp Right Headlight (Low Beam)
- 5 — 8 Amp Left Headlight (Low Beam)
- 6 — 8 Amp Dash, Tail, Hood & Right Park Lights
- 7 — 16 Amp Headlight (High Beam)
- 8 — 16 Amp Headlight (High Beam)
- 9 — 8 Amp Left Park & Tail Lights
- 10 — 16 Amp Defogger
- 11 — 25 Amp Heater Fan, A/C Fan
- 12 — 8 Amp Brake Lights, Audio, Tachometer
- 13 — 25 Amp Auxiliary Fan

Fuses & Circuit Breakers

BMW (Cont.)

- 14 — 16 Amp Back-Up Lights, Gauges, Warning Lights
- 15 — 16 Amp Horn, Wiper/Washer, Power Mirror
- 16 — 16 Amp Cigar Lighter
- 17 — 8 Amp Turn Signals, Clock, Buzzers, Flashers
- 18 — Not Used

528e, 633CSi & 733i

Fuse Block

All models have fuse block at left front corner of engine compartment. Fuses are located in 3 rows with 6 in first row, 8 in second row, and 2 or 3 in third row. Fuses are numbered from center of car toward left side, and protect the following circuits:

- 1 — 8 Amp (528e), 16 Amp (633CSi & 733i) Fuel Pump, Automatic Choke
- 2 — 8 Amp Right Headlight (Low Beam)
- 3 — 8 Amp Left Headlight (Low Beam)
- 4 — 16 Amp Cigar Lighter, Power Antenna, Heating Adjustment, Seat Heating, Programmable Seat Adjustment, Parking Lights, Heating
- 5 — 8 Amp Hazard Warning System, Interior Light, Luggage Light, Reading Light, Clock, Central

Locking System, Computer, Theft Warning System, Service Indicator, Door Lock Heating, Check Control

- 6 — 8 Amp Warning Lights, Tachometer, Mirror, On-Board Computer, Central Warning Light, Fuel Consumption, Service Indicator, Check Control, Window Regulator, Vehicle Light Adjustment, Reversing, Cruise Control, Back-Up Light
- 7 — 8 Amp Right High Beam
- 8 — 8 Amp Left High Beam
- 9 — 8 Amp Right Parking & Tail Lights, Engine Compartment Light, Rear Fog Light, Instrument Panel & License Plate Lights
- 10 — 8 Amp Left Parking & Tail Lights
- 11 — 16 Amp Turn Signals, Windshield Wiper/Washer, Horn Relay, Headlight, Headlight Cleaner System
- 12 — 8 Amp Audio, Brake Lights
- 13 — 16 Amp Defogger, Sun Roof
- 14 — 25 Amp A/C-Heater Fan
- 15 — 8 Amp Right Fog Light
- 16 — 8 Amp Left Fog Light
- 17 — 25 Amp Auxiliary Fan

CHRYSLER CORP. IMPORTS

ARROW & RAM-50 PICKUPS

Fuse Block

Fuse block is located beneath instrument panel on left side. Fuses are numbered with first fuse at bottom right and last fuse at top left of block. Protected circuits are as follows:

- 1 — 15 Amp Headlights (High Beam)
- 2 — 15 Amp Headlights (Low Beams)
- 3 — 15 Amp Heater, Washer
- 4 — 15 Amp Wipers, Audio, Cigar Lighter

Next Row:

- 5 — 15 Amp Tail Lights, Panel & Parking Lights
- 6 — 15 Amp Brake Lights, Courtesy Lights
- 7 — 15 Amp Flashers
- 8 — 15 Amp Turn Signals, Back-Up Lights, Gauges

CHALLENGER & SAPPORO

Fuse Block

Main fuse block is on left kick panel. Two 5 amp fuses are at battery and headlight fuses are in-line nearby. The fuse block fuses are numbered from front of vehicle toward rear and protect the following circuits:

- 1 — 10 Amp Clock, Dome Light
- 2 — 10 Amp Flashers
- 3 — 15 Amp Brake Lights

- 4 — 20 Amp Defogger
- 5 — 20 Amp Heater
- 6 — 10 Amp Tail Lights, Parking Lights
- 7 — 15 Amp Wiper/Washer
- 8 — 15 Amp Audio, Cigar Lighter, Horn
- 9 — 10 Amp Turn Signals, Gauges
- 10 — 10 Amp Back-Up Lights, Voltage Regulator, Remote Control Mirror
- 11 — 1.4 Watt Check Light

CHAMP & COLT

Fuse Block

Fuse block is located beneath instrument panel on left side. Fuses are numbered from left to right and protect these circuits:

- 1 — 15 Amp Headlights (High Beam) & High Beam Indicator
- 2 — 15 Amp Headlights (Low Beam)
- 3 — 15 Amp Tail Lights, Parking Light
- 4 — 15 Amp Brake Lights
- 5 — 15 Amp Flashers, Dome Light
- 6 — 15 Amp Heater
- 7 — 15 Amp Cigar Lighter, Audio
- 8 — 15 Amp Turn Signals, Indicator, Gauges
- 9 — 15 Amp Wiper/Washer
- 10 — 15 Amp Back-Up Lights, Defogger

COURIER

PICKUP

Fuse Block

Fuse block is located in engine compartment on left side near windshield. Fuses are numbered with first

fuse toward engine in front row, and last fuse toward fender in back row. Fuses and circuits protected are:

- 1 — 15 Amp Engine