

FIAT (Cont.)

- | | |
|--|---|
| 1 — 8 Amp Turn Signals, Brake Lights, Heater Fan, Defogger Relay, Switch Indicator Lights | 9 — 16 Amp Right Headlight Motor |
| 2 — 8 Amp Gauges, Dashboard Indicators, Clock Light, Wiper/Washer, Delay Circuit, Back-Up Lights | 10 — 16 Amp Left Headlight Motor |
| 3 — 8 Amp Left Headlight (High Beam), High Beam Indicator | 11 — 16 Amp Defogger, Hazard Lights |
| 4 — 8 Amp Right Headlight (High Beam) | 12 — 16 Amp Horn & Relay, Engine Fan |
| 5 — 8 Amp Left Headlight (Low Beam) | 13 — 16 Amp Spare Fuse |
| 6 — 8 Amp Right Headlight (Low Beam) | 14 — 3 Amp Spare Fuse |
| 7 — 8 Amp Front Left & Right Rear Marker Lights, Front Left Parking Light, Right Rear Tail Light, License Light, Cigar Lighter, Spot Light | 15 — 3 Amp Headlight Closing Control Switch |
| 8 — 8 Amp Right Front Parking Light, Left Rear Tail Light, Clock Dimming, Right Front & Left Rear Marker Lights | 16 — 3 Amp Headlight Raising Control Switch |

In-Line Fuses

- | |
|--|
| 1 — 8 Amp Cigar Lighter, Clock, Courtesy Lights, Buzzers |
| 2 — 16 Amp Fuel Injection, Power Windows |

HONDA

ACCORD

Fuse Block

Fuse block is located in a swing-down panel to left of steering column. Moving from left to right, protected circuits are:

- | | |
|--|--|
| 1 — 10 Amp Right Low Beam | 6 — 20 Amp Defogger |
| 2 — 10 Amp Left Low Beam | 7 — 15 Amp A/C Fan |
| 3 — 10 Amp Right High Beam | 8 — 20 Amp Blower Motor |
| 4 — 10 Amp Left High Beam | 9 — 10 Amp Turn Signals, Back-Up Lights, Fuel Gauge, Warning Lights and Meters, Tachometer, Clock, Cruise Control |
| 5 — 10 Amp Ignition Switch | 10 — 10 Amp Front and Rear Wiper/Washer |
| 6 — 20 Amp Defogger | 11 — 10 Amp Regulator, Fuel Pump, Solenoid Valves, Speed Sensors, Vacuum Switch, Charge Pilot |
| 7 — 15 Amp A/C Fan | 12 — 15 Amp Tail Lights, Marker Lights, License Lights, Dash Illumination and Dimmer, Glove Box Light, Ash Tray Light, Cigar Lighter Illumination, Gauge Lights, Heater Control Illumination, Clock, License Light |
| 8 — 20 Amp Blower Motor | 13 — 10 Amp Brake Light, Horn, Hazard Light |
| 9 — 10 Amp Turn Signals, Back-Up Lights, Fuel Gauge, Warning Lights and Meters, Tachometer, Clock, Cruise Control | 14 — 15 Amp Interior Light, Tail Gate Light, Cigar Lighter, Clock, Auto Clock, Fuse Maintenance Switch Light, Seat Belt Buzzer |
| 10 — 10 Amp Front and Rear Wiper/Washer | |
| 11 — 10 Amp Regulator, Fuel Pump, Solenoid Valves, Speed Sensors, Vacuum Switch, Charge Pilot | |
| 12 — 15 Amp Tail Lights, Marker Lights, License Lights, Dash Illumination and Dimmer, Glove Box Light, Ash Tray Light, Cigar Lighter Illumination, Gauge Lights, Heater Control Illumination, Clock, License Light | |
| 13 — 10 Amp Brake Light, Horn, Hazard Light | |
| 14 — 15 Amp Interior Light, Tail Gate Light, Cigar Lighter, Clock, Auto Clock, Fuse Maintenance Switch Light, Seat Belt Buzzer | |

CIVIC

Fuse Block

Fuse block is located in panel to left of steering column. Circuits protected, from right to left, are:

- | |
|--|
| 1 — 10 Amp Right Low Beam |
| 2 — 10 Amp Left Low Beam |
| 3 — 10 Amp Right High Beam |
| 4 — 10 Amp Left High Beam |
| 5 — 10 Amp Regulator, Fuel Pump Relay, Solenoid Valves, Speed Sensor, Idle Compensation Unit |

- | |
|--|
| 6 — 15 Amp Washer/Wiper Motors |
| 7 — 15 Amp Brake Lights, Turn Signals, Back-Up Lights, Gauges, Warning Lights |
| 8 — 10 Amp Interior Light, Trunk Light, Cigar Lighter, Clock, Buzzer |
| 9 — 15 Amp Brake Lights, Horn, Hazard Lights |
| 10 — 15 Amp Tail Lights, Marker Lights, Parking Lights, License Lights, Gauge Lights, Ignition Switch Light, Heater Panel Light, A/T Console Light |
| 11 — 15 Amp Defogger |
| 12 — 15 Amp Heater Motor |
| 13 — 15 Amp Cooling Fan Motor |
| 14 — 10 Amp Audio |

Relays

Relays located on the panel are identified from right to left as: Intermittent Wipers, Hazard Flashers, Turn Signals, Fuel Pump Cut-Off. The 2 relays above the panel are the Seat Belt Buzzer and the Brake Warning Light Relay.

PRELUDE

Fuse Block

Fuse block is located in swing-down panel to left of steering column. Fuses are arranged in 2 rows. Moving from right to left, short row first, protected circuits are:

- | |
|---|
| 1 — 15 Amp Cooling Fan, Thermostwitch |
| 2 — 15 Amp Left High Beam |
| 3 — 15 Amp Heater Motor |
| 4 — 10 Amp Left Low Beam Headlight |
| 5 — 10 Amp Right Low Beam Headlight |
| 6 — 10 Amp Left High Beam Headlight |
| 7 — 10 Amp Right High Beam Headlight |
| 8 — 15 Amp Horn Switch, Brake Lights, Hazard Lights & Relay |
| 9 — 10 Amp Interior Light, Cigar Lighter, Clock, Trunk Light, Door Buzzer |
| 10 — 15 Amp Tail Light, License Light, Markers, Glove Box Light, Gauge Lights, Heater Control Light |

Fuses & Circuit Breakers

HONDA (Cont.)

- 11 — 10 Amp Audio
- 12 — 10 Amp Back-Up Lights, Sunroof Relay, Gauge & Warning Lights, Auto Choke Heater, Clock, Turn Signal Relay, Hazard Switch, Turn Signals, Tachometer, Cruise Control Power Relay
- 13 — 10 Amp Regulator, Solenoids, Thermosensor

- 14 — 15 Amp Wiper/Washer System

In-Line Fuses

One or 2 main fuses are installed near the battery to protect entire electrical system. A spare fuse is provided inside fuse block cover.

ISUZU & LUV

ISUZU I-MARK

Fuse Block

Fuse block is located in left kick panel. Fuses are numbered. Circuits protected are as follows:

- 1 — 10 Amp Brake Lights
- 2 — 10 Amp Horn
- 3 — 10 Amp Clock, Hazard Lights
- 4 — 15 Amp Cigar Lighter, Audio
- 5 — 15 Amp Meter
- 6 — 10 Amp Turn Signal, Back-Up Light
- 7 — 10 Amp Wiper/Washer
- 8 — 10 Amp Rear Wiper/Washer
- 9 — 10 Amp A/C
- 10 — 15 Amp Heater

ISUZU P'UP & LUV

Fuse Block

Fuse block is located in engine compartment on left fenderwell. Fuses are numbered and protect the following circuits:

- 1 — 15 Amp Tail Lights, Panel Lights, Marker Lights
- 2 — 20 Amp A/C System, Heater
- 3 — 15 Amp Cigar Lighter, Brake Lights, Horn, Flashers, Dome Light
- 4 — 15 Amp Turn Signals, Gauges, Panel Lights, Back-Up Lights
- 5 — 15 Amp Fuel Pump, Coil, Regulator
- 6 — 15 Amp Wiper/Washer, Audio

JAGUAR

XJ6

Fuse Block

Main fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Auxiliary fuse box is similarly located below glove box. Headlight fuse box is located on left fender in engine compartment. Circuits protected are as follows:

Main Fuse Box

- 1 — 20 Amp Fog Lights
- 2 — 15 Amp Hazard Warning System, Seat Belt Logic Unit
- 3 — 15 Amp Map and Interior Lights, Cigar Lighter, Clock, Power Antenna
- 4 — 15 Amp Back-Up Lights, Gauges, Warning Indicators
- 5 — 35 Amp Defogger
- 6 — 35 Amp Windshield Wipers
- 7 — Not Used
- 8 — 15 Amp Instrument Panel Lights
- 9 — 10 Amp Rear Fog Lights
- 10 — 15 Amp Turn Signals
- 11 — 35 Amp Radiator Fan, Battery Fan, Horn Relay, Wipers, Brake Lights, Service Interval Counter
- 12 — 2 Amp Cruise Control

Auxiliary Fuse Box

- 13 — 15 Amp A/C Relay & Clutch
- 14 & 15 — 3 Amp Front Parking Lights

- 16 — 50 Amp A/C or Heater Motor

- 17 — 3 Amp Door Lock Relay, Mirrors, Door Lights

Headlight Fuse Box

- 1 — 15 Amp Cooling Fan
- 2 — 20 Amp Right Headlight (Low Beam)
- 3 — 35 Amp Right Headlight (High Beam)
- 4 — 20 Amp Left Headlight (Low Beam)
- 5 — 35 Amp Left Headlight (High Beam)

XJS

Fuse block is located behind instrument panel on driver's side. Auxiliary fuse box is located below glove box. Headlight fuse box is located on left fender in engine compartment. Circuits protected are as follows:

Main Fuse Box

- 1 — 20 Amp Fog Lights
- 2 — 15 Amp Hazard Lights, Seat Belt Logic Unit
- 3 — 15 Amp Map & Interior Lights, Cigar Lighter, Power Antenna, Clock
- 4 — 15 Amp Panel Instruments, Reverse Light, Low Coolant Sensor & Warning Light
- 5 — 35 Amp Defogger
- 6 — 35 Amp Wipers
- 7 — Blank
- 8 — 15 Amp Panel Illumination
- 9 — 10 Amp Rear Fog Lights
- 10 — 15 Amp Turn Signals
- 11 — 35 Amp Battery Cooling Fan, Horn Relay, Radiator Auxiliary Fan, Relay Windings, Windshield