

# Fuses & Circuit Breakers

## HONDA (Cont.)

- 11 — 10 Amp Audio
- 12 — 10 Amp Back-Up Lights, Sunroof Relay, Gauge & Warning Lights, Auto Choke Heater, Clock, Turn Signal Relay, Hazard Switch, Turn Signals, Tachometer, Cruise Control Power Relay
- 13 — 10 Amp Regulator, Solenoids, Thermosensor

- 14 — 15 Amp Wiper/Washer System

### In-Line Fuses

One or 2 main fuses are installed near the battery to protect entire electrical system. A spare fuse is provided inside fuse block cover.

## ISUZU & LUV

### ISUZU I-MARK

#### Fuse Block

Fuse block is located in left kick panel. Fuses are numbered. Circuits protected are as follows:

- 1 — 10 Amp Brake Lights
- 2 — 10 Amp Horn
- 3 — 10 Amp Clock, Hazard Lights
- 4 — 15 Amp Cigar Lighter, Audio
- 5 — 15 Amp Meter
- 6 — 10 Amp Turn Signal, Back-Up Light
- 7 — 10 Amp Wiper/Washer
- 8 — 10 Amp Rear Wiper/Washer
- 9 — 10 Amp A/C
- 10 — 15 Amp Heater

### ISUZU P'UP & LUV

#### Fuse Block

Fuse block is located in engine compartment on left fenderwell. Fuses are numbered and protect the following circuits:

- 1 — 15 Amp Tail Lights, Panel Lights, Marker Lights
- 2 — 20 Amp A/C System, Heater
- 3 — 15 Amp Cigar Lighter, Brake Lights, Horn, Flashers, Dome Light
- 4 — 15 Amp Turn Signals, Gauges, Panel Lights, Back-Up Lights
- 5 — 15 Amp Fuel Pump, Coil, Regulator
- 6 — 15 Amp Wiper/Washer, Audio

## JAGUAR

### XJ6

#### Fuse Block

Main fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Auxiliary fuse box is similarly located below glove box. Headlight fuse box is located on left fender in engine compartment. Circuits protected are as follows:

#### Main Fuse Box

- 1 — 20 Amp Fog Lights
- 2 — 15 Amp Hazard Warning System, Seat Belt Logic Unit
- 3 — 15 Amp Map and Interior Lights, Cigar Lighter, Clock, Power Antenna
- 4 — 15 Amp Back-Up Lights, Gauges, Warning Indicators
- 5 — 35 Amp Defogger
- 6 — 35 Amp Windshield Wipers
- 7 — Not Used
- 8 — 15 Amp Instrument Panel Lights
- 9 — 10 Amp Rear Fog Lights
- 10 — 15 Amp Turn Signals
- 11 — 35 Amp Radiator Fan, Battery Fan, Horn Relay, Wipers, Brake Lights, Service Interval Counter
- 12 — 2 Amp Cruise Control

#### Auxiliary Fuse Box

- 13 — 15 Amp A/C Relay & Clutch
- 14 & 15 — 3 Amp Front Parking Lights

- 16 — 50 Amp A/C or Heater Motor

- 17 — 3 Amp Door Lock Relay, Mirrors, Door Lights

#### Headlight Fuse Box

- 1 — 15 Amp Cooling Fan
- 2 — 20 Amp Right Headlight (Low Beam)
- 3 — 35 Amp Right Headlight (High Beam)
- 4 — 20 Amp Left Headlight (Low Beam)
- 5 — 35 Amp Left Headlight (High Beam)

### XJS

Fuse block is located behind instrument panel on driver's side. Auxiliary fuse box is located below glove box. Headlight fuse box is located on left fender in engine compartment. Circuits protected are as follows:

#### Main Fuse Box

- 1 — 20 Amp Fog Lights
- 2 — 15 Amp Hazard Lights, Seat Belt Logic Unit
- 3 — 15 Amp Map & Interior Lights, Cigar Lighter, Power Antenna, Clock
- 4 — 15 Amp Panel Instruments, Reverse Light, Low Coolant Sensor & Warning Light
- 5 — 35 Amp Defogger
- 6 — 35 Amp Wipers
- 7 — Blank
- 8 — 15 Amp Panel Illumination
- 9 — 10 Amp Rear Fog Lights
- 10 — 15 Amp Turn Signals
- 11 — 35 Amp Battery Cooling Fan, Horn Relay, Radiator Auxiliary Fan, Relay Windings, Windshield

## JAGUAR (Cont.)

Washers, Brake Lights, Service Interval Counter  
12 — 2 Amp Cruise Control

### Auxiliary Fuse Box

13 — 15 Amp A/C  
14 — 3 Amp Front Parking Lights  
15 — 10 Amp Front Parking Lights  
16 — 50 Amp A/C & Heater Motors

17 — 3 Amp Door Lock Relay, Door Mirrors, Door Lights

### Headlight Fuse Box

1 — 15 Amp Cooling Fan  
2 — 20 Amp Right Headlight (Low Beam)  
3 — 35 Amp Right Headlight (High Beam)  
4 — 20 Amp Left Headlight (Low Beam)  
5 — 35 Amp Left Headlight (High Beam)

---

## MAZDA

### 626

#### Fuse Block

Fuse block is located beneath instrument panel to left of steering column. Capacities and circuits covered are listed on the fuse block cover. Fuses are arranged in 2 rows. Going from top to bottom, left row to right row, circuit information is as follows:

1 — 10 Amp Audio  
2 — 15 Amp Sunroof  
3 — 10 Amp Back-Up Lights, Gauges, Cruise Control, Kickdown Solenoid  
4 — 10 Amp Emissions, Fuel Pump, Choke Heater  
5 — 15 Amp Rear Window Defogger  
6 — 30 Amp Power Windows

#### Next Row:

7 — 20 Amp A/C  
8 — 15 Amp Headlight Cleaner  
9 — 15 Amp Wiper/Washer  
10 — 15 Amp Horn, Brake Lights  
11 — 15 Amp Clock, Courtesy Lights, Mirrors, Cigar Lighter  
12 — 10 Amp Turn Signals  
13 — 15 Amp Headlights, Tail, Marker & Panel Lights

### GLC WAGON

#### Fuse Block

The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows, counting from top to bottom, short row first:

1 — 10 Amp Defogger, Audio  
2 — 15 Amp Wiper/Washer  
3 — 15 Amp Rear Wiper/Washer, Heater  
4 — Not Used  
5 — Not Used

#### Next Row

6 — Not Used  
7 — Emission Control, Charging System  
8 — 10 Amp Kick Down System, Meters, Warning Lights, Back-Up Lights, Seat Belt Warning  
9 — Not Used

#### Next Row

10 — 15 Amp Brake Lights, Horn  
11 — 15 Amp Back Door Release, Buzzer, Cigar Lighter, Clock  
12 — 15 Amp Illumination Lights, License Light, Tail and Front Parking Lights  
13 — 10 Amp Turn Signals, Hazard Flashers

### GLC HATCHBACK

#### Fuse Block

Fuse block is located at the left side of steering column. Fuses are arranged in 3 rows, with 1 row arranged with fuses vertical and 2 rows with fuses horizontal. An inline 15 Amp fuse is used for the A/C system. Fuses and the circuits protected are:

1 — 20 Amp Cooling Fan, A/C  
2 — Not Used  
3 — Not Used

#### Next Row:

4 — 15 Amp Clock, Tail, Parking, License, Panel, Illumination & Marker Lights  
5 — Not Used  
6 — 15 Amp Heater, A/C  
7 — 15 Amp Defogger  
8 — 15 Amp Front Wiper/Washer  
9 — 10 Amp Audio, Rear Wiper/Washer

#### Next Row:

10 — Not Used  
11 — 10 Amp Regulator, Emission Control  
12 — 10 Amp Gauges, Optional Clock, Brake Lights, Seat Belt Warning, Cooling Fan, Kickdown, Back-Up Lights  
13 — 15 Amp Cigar Lighter, Clock  
14 — 15 Amp Brake Lights, Horn  
15 — 10 Amp Turn Signals, Flashers, Courtesy Lights, Buzzers

### RX7

#### Fuse Block

Fuse block is located to left side of steering column. Fuses protect, from top to bottom and left to right, the following circuits:

1 — 10 Amp Fuel Pump, Power Windows

#### Next Row:

2 — 20 Amp Heater Fan, Glove Box Light  
3 — 15 Amp Defogger  
4 — 20 Amp Audio, Power Antenna  
5 — 10 Amp Rear Wiper/Washer  
6 — 10 Amp Front Wiper/Washer  
7 — 30 Amp Power Windows  
8 — 10 Amp Cruise Control

#### Next Row:

9 — 20 Amp Gas Filler Door, Rear Hatch Release  
10 — 15 Amp Brake Lights, Horn  
11 — 15 Amp Courtesy Lights, Chime, Cigar Lighter, Buzzer