

JAGUAR (Cont.)

- Washers, Brake Lights, Service Interval Counter
12 — 2 Amp Cruise Control

Auxiliary Fuse Box

- 13 — 15 Amp A/C
- 14 — 3 Amp Front Parking Lights
- 15 — 10 Amp Front Parking Lights
- 16 — 50 Amp A/C & Heater Motors

- 17 — 3 Amp Door Lock Relay, Door Mirrors, Door Lights

Headlight Fuse Box

- 1 — 15 Amp Cooling Fan
- 2 — 20 Amp Right Headlight (Low Beam)
- 3 — 35 Amp Right Headlight (High Beam)
- 4 — 20 Amp Left Headlight (Low Beam)
- 5 — 35 Amp Left Headlight (High Beam)

MAZDA

626

Fuse Block

Fuse block is located beneath instrument panel to left of steering column. Capacities and circuits covered are listed on the fuse block cover. Fuses are arranged in 2 rows. Going from top to bottom, left row to right row, circuit information is as follows:

- 1 — 10 Amp Audio
- 2 — 15 Amp Sunroof
- 3 — 10 Amp Back-Up Lights, Gauges, Cruise Control, Kickdown Solenoid
- 4 — 10 Amp Emissions, Fuel Pump, Choke Heater
- 5 — 15 Amp Rear Window Defogger
- 6 — 30 Amp Power Windows

Next Row:

- 7 — 20 Amp A/C
- 8 — 15 Amp Headlight Cleaner
- 9 — 15 Amp Wiper/Washer
- 10 — 15 Amp Horn, Brake Lights
- 11 — 15 Amp Clock, Courtesy Lights, Mirrors, Cigar Lighter
- 12 — 10 Amp Turn Signals
- 13 — 15 Amp Headlights, Tail, Marker & Panel Lights

GLC WAGON

Fuse Block

The fuse block is located under the instrument panel and contains 10 fuses. Circuits protected are as follows, counting from top to bottom, short row first:

- 1 — 10 Amp Defogger, Audio
- 2 — 15 Amp Wiper/Washer
- 3 — 15 Amp Rear Wiper/Washer, Heater
- 4 — Not Used
- 5 — Not Used

Next Row

- 6 — Not Used
- 7 — Emission Control, Charging System
- 8 — 10 Amp Kick Down System, Meters, Warning Lights, Back-Up Lights, Seat Belt Warning
- 9 — Not Used

Next Row

- 10 — 15 Amp Brake Lights, Horn
- 11 — 15 Amp Back Door Release, Buzzer, Cigar Lighter, Clock
- 12 — 15 Amp Illumination Lights, License Light, Tail and Front Parking Lights
- 13 — 10 Amp Turn Signals, Hazard Flashers

GLC HATCHBACK

Fuse Block

Fuse block is located at the left side of steering column. Fuses are arranged in 3 rows, with 1 row arranged with fuses vertical and 2 rows with fuses horizontal. An inline 15 Amp fuse is used for the A/C system. Fuses and the circuits protected are:

- 1 — 20 Amp Cooling Fan, A/C
- 2 — Not Used
- 3 — Not Used

Next Row:

- 4 — 15 Amp Clock, Tail, Parking, License, Panel, Illumination & Marker Lights
- 5 — Not Used
- 6 — 15 Amp Heater, A/C
- 7 — 15 Amp Defogger
- 8 — 15 Amp Front Wiper/Washer
- 9 — 10 Amp Audio, Rear Wiper/Washer

Next Row:

- 10 — Not Used
- 11 — 10 Amp Regulator, Emission Control
- 12 — 10 Amp Gauges, Optional Clock, Brake Lights, Seat Belt Warning, Cooling Fan, Kickdown, Back-Up Lights
- 13 — 15 Amp Cigar Lighter, Clock
- 14 — 15 Amp Brake Lights, Horn
- 15 — 10 Amp Turn Signals, Flashers, Courtesy Lights, Buzzers

RX7

Fuse Block

Fuse block is located to left side of steering column. Fuses protect, from top to bottom and left to right, the following circuits:

- 1 — 10 Amp Fuel Pump, Power Windows

Next Row:

- 2 — 20 Amp Heater Fan, Glove Box Light
- 3 — 15 Amp Defogger
- 4 — 20 Amp Audio, Power Antenna
- 5 — 10 Amp Rear Wiper/Washer
- 6 — 10 Amp Front Wiper/Washer
- 7 — 30 Amp Power Windows
- 8 — 10 Amp Cruise Control

Next Row:

- 9 — 20 Amp Gas Filler Door, Rear Hatch Release
- 10 — 15 Amp Brake Lights, Horn
- 11 — 15 Amp Courtesy Lights, Chime, Cigar Lighter, Buzzer

Fuses & Circuit Breakers

MAZDA (Cont.)

- 12 — 10 Amp Mirrors, A/C, Turn Signals, Flashers, Headlights
- 13 — 10 Amp Panel Lights, Headlight Motors, Headlight Washers
- 14 — 10 Amp Gauges, Back-Up Lights, Clock, Timer Unit
- 15 — 15 Amp Kickdown Solenoid, Emissions

B2000 & B2200

Fuse Block

Fuse block is located in left rear corner of engine compartment and contains 2 rows of fuses. Protected circuits include:

- 1 — 15 Amp Turn Signals, Brake Lights, Horn
- 2 — 10 Amp Headlights

- 3 — 10 Amp Back-Up Lights, Gauges, Clock, Warning System
- 4 — 15 Amp Alternator, Emissions, Solenoids
- 5 — Not Used

Next Row

- 6 — 10 Amp Interior Light, Clock
- 7 — 15 Amp Heater, Audio
- 8 — 10 Amp Wiper/Washer
- 9 — 10 Amp Cigar Lighter
- 10 — Not Used

In-Line Fuses

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ

380SL & 380SLC

Fuse Block

Main fuse block is located on right kick panel. Fuse capacities and the circuits protected are listed on fuse block cover.

ALL OTHER MODELS

Fuse Block

Fuse block is located at left rear corner of engine compartment. Fuse capacities and circuits protected are listed on the fuse block cover.

In-Line Fuses

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

PEUGEOT

504

Fuse Block

Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- 1 — 15 Amp Parking, Marker, License & Dashboard Lights
- 2 — 10 Amp Clock, Courtesy Lights, Trunk Light, Horn, Cigar Lighter, Hazard Flashers, Ignition Buzzer
- 3 — 10 Amp Back-Up, Brake & Low Fuel Lights, Preheat Relay, Preheat Indicator Light, Temperature Indicator, Engine Fan, Tailgate Wipers, Seat Belt Buzzer & Light, Fuel Cut-Off
- 4 — 15 Amp Rear Window Defogger, Windshield Wiper Motor & Relay, Washer Pump
- 5 — 10 Amp Warning Indicators, Turn Signals, Gauges, Heater Blower Motor, Audio

505

Fuse Block

Fuse block is located on top of left front fenderwell. Fuses are arranged in 2 rows, and numbered from front to back, starting with row closest to engine.

- 1 — 16 Amp Fuel Pump, Emissions
- 2 — 16 Amp Gauges, A/C, Accessories, Turn Signals, Wiper/Washer
- 3 — 10 Amp Left Headlight (High Beam) & Indicator
- 4 — 5 Amp Spare Fuse
- 5 — 10 Amp Right Headlight (Low Beam)
- 6 — 16 Amp Power Windows & Sunroof
- 7 — 16 Amp Rear Window Defogger
- 8 — 16 Amp Heater Blower
- 9 — 10 Amp Brake Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- 10 — 10 Amp Parking Lights & Indicator, Instrument Panel Lights, License Lights
- 11 — 10 Amp Right Headlight (High Beam)
- 12 — 10 Amp Left Headlight (Low Beam)
- 13 — 15 Amp (Not Used)
- 14 — 10 Amp Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- 15 — 16 Amp Horns, Hazard Warning Lights

604

Fuse Block

Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and