

Fuses & Circuit Breakers

MAZDA (Cont.)

- 12 — 10 Amp Mirrors, A/C, Turn Signals, Flashers, Headlights
- 13 — 10 Amp Panel Lights, Headlight Motors, Headlight Washers
- 14 — 10 Amp Gauges, Back-Up Lights, Clock, Timer Unit
- 15 — 15 Amp Kickdown Solenoid, Emissions

B2000 & B2200

Fuse Block

Fuse block is located in left rear corner of engine compartment and contains 2 rows of fuses. Protected circuits include:

- 1 — 15 Amp Turn Signals, Brake Lights, Horn
- 2 — 10 Amp Headlights

- 3 — 10 Amp Back-Up Lights, Gauges, Clock, Warning System
- 4 — 15 Amp Alternator, Emissions, Solenoids
- 5 — Not Used

Next Row

- 6 — 10 Amp Interior Light, Clock
- 7 — 15 Amp Heater, Audio
- 8 — 10 Amp Wiper/Washer
- 9 — 10 Amp Cigar Lighter
- 10 — Not Used

In-Line Fuses

A fuse block containing large in-line fuses is installed in engine compartment near battery. Fuse amperage and circuits protected is printed on fuse block cover.

MERCEDES-BENZ

380SL & 380SLC

Fuse Block

Main fuse block is located on right kick panel. Fuse capacities and the circuits protected are listed on fuse block cover.

ALL OTHER MODELS

Fuse Block

Fuse block is located at left rear corner of engine compartment. Fuse capacities and circuits protected are listed on the fuse block cover.

In-Line Fuses

Additional fuses for optional equipment and/or standard extras such as sliding sun roof, heated rear window, radio, automatic antenna, electric windows and air conditioning are located in engine compartment.

PEUGEOT

504

Fuse Block

Fuse block is located behind lower left corner of instrument panel. Fuses are arranged in a single row and numbered from left to right. Circuits protected are:

- 1 — 15 Amp Parking, Marker, License & Dashboard Lights
- 2 — 10 Amp Clock, Courtesy Lights, Trunk Light, Horn, Cigar Lighter, Hazard Flashers, Ignition Buzzer
- 3 — 10 Amp Back-Up, Brake & Low Fuel Lights, Preheat Relay, Preheat Indicator Light, Temperature Indicator, Engine Fan, Tailgate Wipers, Seat Belt Buzzer & Light, Fuel Cut-Off
- 4 — 15 Amp Rear Window Defogger, Windshield Wiper Motor & Relay, Washer Pump
- 5 — 10 Amp Warning Indicators, Turn Signals, Gauges, Heater Blower Motor, Audio

505

Fuse Block

Fuse block is located on top of left front fenderwell. Fuses are arranged in 2 rows, and numbered from front to back, starting with row closest to engine.

- 1 — 16 Amp Fuel Pump, Emissions
- 2 — 16 Amp Gauges, A/C, Accessories, Turn Signals, Wiper/Washer
- 3 — 10 Amp Left Headlight (High Beam) & Indicator
- 4 — 5 Amp Spare Fuse
- 5 — 10 Amp Right Headlight (Low Beam)
- 6 — 16 Amp Power Windows & Sunroof
- 7 — 16 Amp Rear Window Defogger
- 8 — 16 Amp Heater Blower
- 9 — 10 Amp Brake Lights, Back-Up Lights, Engine Fan, Idle Vacuum Switch, Tachometer & Relay, Seat Belt Warning Buzzer
- 10 — 10 Amp Parking Lights & Indicator, Instrument Panel Lights, License Lights
- 11 — 10 Amp Right Headlight (High Beam)
- 12 — 10 Amp Left Headlight (Low Beam)
- 13 — 15 Amp (Not Used)
- 14 — 10 Amp Clock, Cigar Lighter, Courtesy Lights, Trunk Light, Glove Box Light, Key Chime
- 15 — 16 Amp Horns, Hazard Warning Lights

604

Fuse Block

Fuse block is located behind cover on left end of instrument panel. Fuses are arranged in 2 rows and

PEUGEOT (Cont.)

numbered from left to right, top row first. Protected circuits are:

- 1 — 10 Amp Cigar Lighter, Horns, Flashers, Courtesy Light
- 2 — 10 Amp Brake & Back-Up Lights, Gauges, Indicator Lights, Starter Switch

- 3 — 16 Amp Defogger, Indicator Lights, Accessories
- 4 — 16 Amp A/C Fan, Wipers, Washers, Sunroof
- 5 — 10 Amp Parking & Marker Lights, Dash Lights
- 6 — 16 Amp Heater Fan & A/C Compressor Relays
- 7 — 16 Amp Power Windows
- 8 — 16 Amp Rear Window Lockout

PORSCHE

911SC

Fuse Block

Fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 amp), Heater Fan (25 amp) and Rear Window Defogger and Wiper Return (25 amp). Main fuses, numbered from front of vehicle to rear, protect the following circuits:

- 1 — 25 Amp Fog Lights
- 2 — 5 Amp License Plate Lights
- 3 — 5 Amp Right Front & Rear Parking Lights
- 4 — 5 Amp Left Front & Rear Parking Lights
- 5 — 8 Amp Right Headlight (Low Beam)
- 6 — 8 Amp Left Headlight (Low Beam)
- 7 — 8 Amp Right Headlight (High Beam)
- 8 — 8 Amp Left Headlight (High Beam) & Indicator
- 9 — 5 Amp Right Turn Signal
- 10 — 5 Amp Left Turn Signal
- 11 — 16 Amp Turn Signal Relay, Brake Lights, Back-Up Lights
- 12 — 25 Amp Defogger, Fresh Air Blower, Control Light Auto A/C Control
- 13 — 25 Amp Front Wiper/Washer, Cigar Lighter
- 14 — 25 Amp Sunroof, Mirrors, Rear Wiper/Washer
- 15 — 8 Amp Brake Lights, Cruise Control
- 16 — 25 Amp Fuel Pump
- 17 — 16 Amp Hazard Flasher
- 18 — 5 Amp Courtesy Lights, Clock, Trunk Light
- 19 — 25 Amp Headlight Washer
- 20 — 25 Amp A/C Blower Motor
- 21 — 25 Amp Power Windows

924

Fuse Block

Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- 1 — 8 Amp Left Headlight (Low Beam)
- 2 — 8 Amp Right Headlight (Low Beam)
- 3 — 8 Amp Left Headlight (High Beam)
- 4 — 8 Amp Right Headlight (High Beam)
- 5 — Not Used
- 6 — 8 Amp Courtesy Lights, Headlight Motors
- 7 — 8 Amp Flashers, Cigar Lighter, Clock
- 8 — 8 Amp Turn Signal Indicators
- 9 — 8 Amp Back-Up Lights, Rear Wiper, Mirrors
- 10 — 16 Amp Fresh Air Blower
- 11 — 8 Amp Windshield Wipers

- 12 — 8 Amp License Plate & Luggage Compartment-Lights
- 13 — 8 Amp Side Marker Light (Right)
- 14 — 8 Amp Side Marker Light (Left)
- 15 — 16 Amp Fog Lights
- 16 — 8 Amp Horn
- 17 — 16 Amp Fuel Pump
- 18 — 16 Amp Engine Fan, Antenna
- 19 — 25 Amp Defogger
- 20 — 16 Amp A/C Condenser Fan
- 21 — 25 Amp A/C Compressor, Fresh Air Fan
- 22 — Blank
- 23 — 25 Amp Power Windows
- 24 — Blank

Relays are numbered from right to left, with the top row listed first:

- 1 — Cooling Fan
- 2 — Fuel Pump
- 3 — A/C
- 4 — Headlight Washer
- 5 — Not Used
- 6 — Defogger
- 7 — Not Used
- 8 — Not Used
- 9 — Horn
- 10 — Wipers
- 11 — Turn Signals
- 12 — Not Used

928

Fuse Block

Fuse block is located in passenger footwell. It contains 34 fuses and 22 relays. Two 400mA in-line fuses are located above the fuse panel and protect the security system. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp Fog Lights
- 2 — Not Connected
- 3 — 8 Amp License Light, Engine Compartment Light
- 4 — 8 Amp Switch Illumination Light
- 5 — 16 Amp Cigar Lighter
- 6 — 16 Amp Windshield Wipers
- 7 — Not Used
- 8 — 16 Amp Sunroof
- 9 — 8 Amp Back-Up Lights, Mirror, Rear Wiper, A/C
- 10 — 8 Amp Brake Lights, Automatic Speed Control
- 11 — 8 Amp Instrument Panel Lights
- 12 — 8 Amp Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp Power Seats