

PEUGEOT (Cont.)

numbered from left to right, top row first. Protected circuits are:

- 1 — 10 Amp Cigar Lighter, Horns, Flashers, Courtesy Light
- 2 — 10 Amp Brake & Back-Up Lights, Gauges, Indicator Lights, Starter Switch

- 3 — 16 Amp Defogger, Indicator Lights, Accessories
- 4 — 16 Amp A/C Fan, Wipers, Washers, Sunroof
- 5 — 10 Amp Parking & Marker Lights, Dash Lights
- 6 — 16 Amp Heater Fan & A/C Compressor Relays
- 7 — 16 Amp Power Windows
- 8 — 16 Amp Rear Window Lockout

PORSCHE

911SC

Fuse Block

Fuse block is located inside luggage compartment on left side and contains 21 fuses. An additional fuse block is located in engine compartment on left side under regulator cover. Secondary fuse block protects Heater Fan Relay (5 amp), Heater Fan (25 amp) and Rear Window Defogger and Wiper Return (25 amp). Main fuses, numbered from front of vehicle to rear, protect the following circuits:

- 1 — 25 Amp Fog Lights
- 2 — 5 Amp License Plate Lights
- 3 — 5 Amp Right Front & Rear Parking Lights
- 4 — 5 Amp Left Front & Rear Parking Lights
- 5 — 8 Amp Right Headlight (Low Beam)
- 6 — 8 Amp Left Headlight (Low Beam)
- 7 — 8 Amp Right Headlight (High Beam)
- 8 — 8 Amp Left Headlight (High Beam) & Indicator
- 9 — 5 Amp Right Turn Signal
- 10 — 5 Amp Left Turn Signal
- 11 — 16 Amp Turn Signal Relay, Brake Lights, Back-Up Lights
- 12 — 25 Amp Defogger, Fresh Air Blower, Control Light Auto A/C Control
- 13 — 25 Amp Front Wiper/Washer, Cigar Lighter
- 14 — 25 Amp Sunroof, Mirrors, Rear Wiper/Washer
- 15 — 8 Amp Brake Lights, Cruise Control
- 16 — 25 Amp Fuel Pump
- 17 — 16 Amp Hazard Flasher
- 18 — 5 Amp Courtesy Lights, Clock, Trunk Light
- 19 — 25 Amp Headlight Washer
- 20 — 25 Amp A/C Blower Motor
- 21 — 25 Amp Power Windows

924

Fuse Block

Fuse block is located under instrument panel on left of steering column. First row is below relays, second row is above relays. Fuses are numbered from left to right, lower row first.

- 1 — 8 Amp Left Headlight (Low Beam)
- 2 — 8 Amp Right Headlight (Low Beam)
- 3 — 8 Amp Left Headlight (High Beam)
- 4 — 8 Amp Right Headlight (High Beam)
- 5 — Not Used
- 6 — 8 Amp Courtesy Lights, Headlight Motors
- 7 — 8 Amp Flashers, Cigar Lighter, Clock
- 8 — 8 Amp Turn Signal Indicators
- 9 — 8 Amp Back-Up Lights, Rear Wiper, Mirrors
- 10 — 16 Amp Fresh Air Blower
- 11 — 8 Amp Windshield Wipers

- 12 — 8 Amp License Plate & Luggage Compartment-Lights
- 13 — 8 Amp Side Marker Light (Right)
- 14 — 8 Amp Side Marker Light (Left)
- 15 — 16 Amp Fog Lights
- 16 — 8 Amp Horn
- 17 — 16 Amp Fuel Pump
- 18 — 16 Amp Engine Fan, Antenna
- 19 — 25 Amp Defogger
- 20 — 16 Amp A/C Condenser Fan
- 21 — 25 Amp A/C Compressor, Fresh Air Fan
- 22 — Blank
- 23 — 25 Amp Power Windows
- 24 — Blank

Relays are numbered from right to left, with the top row listed first:

- 1 — Cooling Fan
- 2 — Fuel Pump
- 3 — A/C
- 4 — Headlight Washer
- 5 — Not Used
- 6 — Defogger
- 7 — Not Used
- 8 — Not Used
- 9 — Horn
- 10 — Wipers
- 11 — Turn Signals
- 12 — Not Used

928

Fuse Block

Fuse block is located in passenger footwell. It contains 34 fuses and 22 relays. Two 400mA in-line fuses are located above the fuse panel and protect the security system. Circuits protected by fuses are as follows, from left to right:

- 1 — 16 Amp Fog Lights
- 2 — Not Connected
- 3 — 8 Amp License Light, Engine Compartment Light
- 4 — 8 Amp Switch Illumination Light
- 5 — 16 Amp Cigar Lighter
- 6 — 16 Amp Windshield Wipers
- 7 — Not Used
- 8 — 16 Amp Sunroof
- 9 — 8 Amp Back-Up Lights, Mirror, Rear Wiper, A/C
- 10 — 8 Amp Brake Lights, Automatic Speed Control
- 11 — 8 Amp Instrument Panel Lights
- 12 — 8 Amp Instrument Warning Lights
- 13 — Not Connected
- 14 — 25 Amp Power Seats

Fuses & Circuit Breakers

PORSCHE (Cont.)

- 15 — 16 Amp Power Antenna, Horn, Rear Wiper
- 16 — 25 Amp Electric Radiator Fan
- 17 — 25 Amp Heater, Air Conditioning Blower
- 18 — 15 Amp Rear Window Defogger
- 19 — 16 Amp Headlight Motor
- 20 — 16 Amp Headlight Washer
- 21 — 25 Amp Power Windows
- 22 — 16 Amp Fuel Pump
- 23 — 8 Amp Interior Lights, Clock
- 24 — 8 Amp Left Headlight (High Beam)
- 25 — 8 Amp Right Headlight (High Beam)
- 26 — 8 Amp Left Headlight (Low Beam)
- 27 — 8 Amp Right Headlight (Low Beam)
- 28 — 8 Amp Left Side Markers
- 29 — 8 Amp Right Side Markers
- 30 — 8 Amp Front Left Turn Signal
- 31 — 8 Amp Rear Left Turn Signal
- 32 — 8 Amp Front Right Turn Signal
- 33 — 8 Amp Rear Right Turn Signal
- 34 — Not Connected

- 12 — Fog Lights
- 13 — Intermittent Wiper Speed Control
- 14 — Starter Relay Bridge
- 15 — Washer Pump
- 16 — EFI Control Unit
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for A/C
- 19 & 20 — Retractable Headlight Relay
- 21 — Fresh Air Fan
- 22 — Defroster


944

Fuse Block

Main fuse block is located under the instrument panel on the left side of steering column. An additional block is located above main block. The numbering of fuses begins on the left side of the panel. Circuits protected are as follows.

- 1 — 8 Amp Left Headlight (Low Beam)
 - 2 — 8 Amp Right Headlight (Low Beam)
 - 3 — 8 Amp Left Headlight (High Beam)
 - 4 — 8 Amp Right Headlight (High Beam)
 - 5 — Not Used
 - 6 — 8 Amp Brake Lights, Flasher
 - 7 — 8 Amp Clock, Interior Light, Radio, Cigar Lighter
 - 8 — 8 Amp Turn Signal Indicators
 - 9 — 8 Amp Back-Up Lights, Rear Wiper, Outside Mirrors
 - 10 — 16 Amp Fresh Air Fan
 - 11 — 8 Amp Front Wipers
 - 12 — 8 Amp Panel Illumination, Luggage & Ashtray Lights, License Light
 - 13 — 8 Amp Right Marker Light
 - 14 — 8 Amp Left Marker Light, Engine Compartment Light
 - 15 — 16 Amp Fog Lights
- Auxiliary Block
- 1 — 8 Amp Retractable Headlights
 - 2 — 16 Amp Fuel Pump
 - 3 — 16 Amp Defogger
 - 4 — 25 Amp Radiator Fan, Antenna
 - 5 — 16 Amp A/C Fan, Condensor Fan
 - 6 — 25 Amp A/C Compressor, Fresh Air Fan
 - 7 — Not Used
 - 8 — 25 Amp Power Windows
 - 9 — Not Connected

Fig. 1: Porsche 928 Fuse and Relay Block

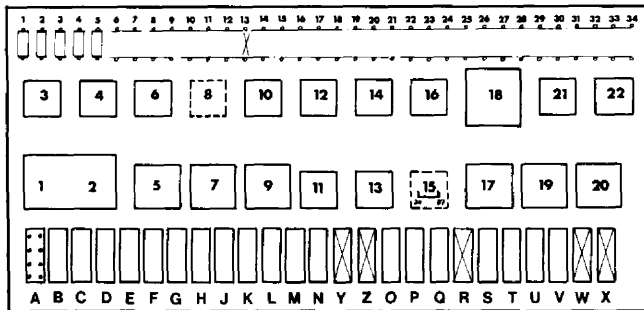

Relay circuits are below the fuses in the main electrical panel. Other relays include the seat return relay (below seat), the rear wiper relay (at left rear corner behind tool kit tray) and the seat belt relay (behind radio).

- 1 & 2 — Defogger
- 3 — Not Used
- 4 — Not Used
- 5 — Hazard Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Used
- 9 — Not Used
- 10 — Horns
- 11 — Not Used

RENAULT

FUEGO

Fuse Block

Fuse box is located underneath dashboard on left side of steering column. Fuses are numbered in vertical rows from right to left.

- 1 — 8 Amp Turn Signal & Flasher
- 2 — Not Used
- 3 — 5 Amp Brake Lights
- 4 — 5 Amp Wiper Park Motor
- 5 — 5 Amp Audio, Wiper/Washer

- 6 — 8 Amp Interior Lights, Cigar Lighter, Buzzer, Luggage Compartment Light
- 7 — Not Used
- 8 — Not Used
- 9 — 16 Amp Defogger
- 10 — 5 Amp Parking Lights
- 11 — 16 Amp Left Power Window
- 12 — 5 Amp Parking Lights
- 13 — 16 Amp Right Power Window
- 14 — 5 Amp Instrument Cluster Feed
- 15 — 5 Amp Back-Up Lights, Intermittent Wipers