

Fuses & Circuit Breakers

PORSCHE (Cont.)

- 15 — 16 Amp Power Antenna, Horn, Rear Wiper
- 16 — 25 Amp Electric Radiator Fan
- 17 — 25 Amp Heater, Air Conditioning Blower
- 18 — 15 Amp Rear Window Defogger
- 19 — 16 Amp Headlight Motor
- 20 — 16 Amp Headlight Washer
- 21 — 25 Amp Power Windows
- 22 — 16 Amp Fuel Pump
- 23 — 8 Amp Interior Lights, Clock
- 24 — 8 Amp Left Headlight (High Beam)
- 25 — 8 Amp Right Headlight (High Beam)
- 26 — 8 Amp Left Headlight (Low Beam)
- 27 — 8 Amp Right Headlight (Low Beam)
- 28 — 8 Amp Left Side Markers
- 29 — 8 Amp Right Side Markers
- 30 — 8 Amp Front Left Turn Signal
- 31 — 8 Amp Rear Left Turn Signal
- 32 — 8 Amp Front Right Turn Signal
- 33 — 8 Amp Rear Right Turn Signal
- 34 — Not Connected

- 12 — Fog Lights
- 13 — Intermittent Wiper Speed Control
- 14 — Starter Relay Bridge
- 15 — Washer Pump
- 16 — EFI Control Unit
- 17 — Fuel Pump
- 18 — Extra Cooling Fan for A/C
- 19 & 20 — Retractable Headlight Relay
- 21 — Fresh Air Fan
- 22 — Defroster


944

Fuse Block

Main fuse block is located under the instrument panel on the left side of steering column. An additional block is located above main block. The numbering of fuses begins on the left side of the panel. Circuits protected are as follows.

- 1 — 8 Amp Left Headlight (Low Beam)
 - 2 — 8 Amp Right Headlight (Low Beam)
 - 3 — 8 Amp Left Headlight (High Beam)
 - 4 — 8 Amp Right Headlight (High Beam)
 - 5 — Not Used
 - 6 — 8 Amp Brake Lights, Flasher
 - 7 — 8 Amp Clock, Interior Light, Radio, Cigar Lighter
 - 8 — 8 Amp Turn Signal Indicators
 - 9 — 8 Amp Back-Up Lights, Rear Wiper, Outside Mirrors
 - 10 — 16 Amp Fresh Air Fan
 - 11 — 8 Amp Front Wipers
 - 12 — 8 Amp Panel Illumination, Luggage & Ashtray Lights, License Light
 - 13 — 8 Amp Right Marker Light
 - 14 — 8 Amp Left Marker Light, Engine Compartment Light
 - 15 — 16 Amp Fog Lights
- Auxiliary Block
- 1 — 8 Amp Retractable Headlights
 - 2 — 16 Amp Fuel Pump
 - 3 — 16 Amp Defogger
 - 4 — 25 Amp Radiator Fan, Antenna
 - 5 — 16 Amp A/C Fan, Condensor Fan
 - 6 — 25 Amp A/C Compressor, Fresh Air Fan
 - 7 — Not Used
 - 8 — 25 Amp Power Windows
 - 9 — Not Connected

Fig. 1: Porsche 928 Fuse and Relay Block

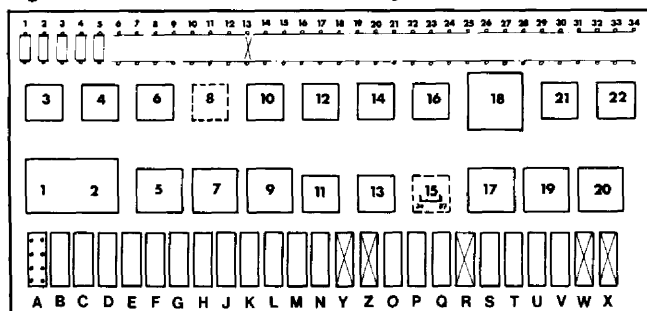

Relay circuits are below the fuses in the main electrical panel. Other relays include the seat return relay (below seat), the rear wiper relay (at left rear corner behind tool kit tray) and the seat belt relay (behind radio).

- 1 & 2 — Defogger
- 3 — Not Used
- 4 — Not Used
- 5 — Hazard Flasher Unit
- 6 — Window Controls
- 7 — Headlight Washer Pump
- 8 — Not Used
- 9 — Not Used
- 10 — Horns
- 11 — Not Used

RENAULT

FUEGO

Fuse Block

Fuse box is located underneath dashboard on left side of steering column. Fuses are numbered in vertical rows from right to left.

- 1 — 8 Amp Turn Signal & Flasher
- 2 — Not Used
- 3 — 5 Amp Brake Lights
- 4 — 5 Amp Wiper Park Motor
- 5 — 5 Amp Audio, Wiper/Washer

- 6 — 8 Amp Interior Lights, Cigar Lighter, Buzzer, Luggage Compartment Light
- 7 — Not Used
- 8 — Not Used
- 9 — 16 Amp Defogger
- 10 — 5 Amp Parking Lights
- 11 — 16 Amp Left Power Window
- 12 — 5 Amp Parking Lights
- 13 — 16 Amp Right Power Window
- 14 — 5 Amp Instrument Cluster Feed
- 15 — 5 Amp Back-Up Lights, Intermittent Wipers

RENAULT (Cont.)

- 16 — 1.5 Amp Auto. Transmission Control
- 17 — Not Used
- 18 — Not Used
- 19 — 16 Amp A/C-Heater Fan, Sunroof, Rear Wiper

LE CAR

Fuse Block

Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- 1 — 5 Amp A/C Relay Feed
- 2 — 5 Amp Wiper Motor
- 3 — 5 Amp Left Parking Lights, Dash Lights
- 4 — 5 Amp Right Parking Lights, Cigar Lighter Light
- 5 — 8 Amp Wiper/Washer and Wiper Motor
- 6 — 5 Amp Cigar Lighter, Courtesy Light
- 7 — 8 Amp Heater Motor, Audio
- 8 — 5 Amp Turn Signals
- 9 — Not Used
- 10 — 16 Amp Back-Up Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Buzzer

18i

Fuse Block

Fuse panel is located to left of steering column under edge of dashboard. Fuses are numbered from right

to left, with even-numbered fuses in top row, and odd-numbered fuses in bottom row. The circuits protected are:

- 1 — 8 Amp Turn Signals, Flashers
- 2 — 5 Amp Wiper Park Circuit
- 3 — Not Used
- 4 — Not Used
- 5 — Not Used
- 6 — 8 Amp Cigar Lighter, Courtesy Lights
- 7 — Not Used
- 8 — 16 Amp Wiper/Washer
- 9 — Not Used
- 10 — 8 Amp Left Marker Lights, Panel Lights
- 11 — 10 Amp Left Power Window
- 12 — 5 Amp Right Marker Lights, Switch Lights
- 13 — 10 Amp Right Power Window
- 14 — 5 Amp Gauges
- 15 — 1.5 Amp Back-Up Lights, Intermittent Wiper Relay
- 16 — 1.5 Amp Auto. Trans.
- 17 — 16 Amp Heater & A/C Fan
- 18 — 16 Amp Defogger

SAAB

900

Fuse Block

Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- 1 — 8 Amp Right Headlight (High Beam)
- 2 — 8 Amp Left Headlight (High Beam)
- 3 — 8 Amp Right Headlight (Low Beam)
- 4 — 8 Amp Left Headlight (Low Beam)
- 5 — 25 Amp Engine Fan
- 6 — 16 Amp Defogger
- 7 — 8 Amp Courtesy Lights
- 8 — 16 Amp Fuel Pump

- 9 — 8 Amp Hazard Flashers
- 10 — 5 Amp Brake Lights
- 11 — 16 Amp A/C Fan
- 12 — 5 Amp Right Parking & Tail Lights
- 13 — 5 Amp Left Parking & Tail Lights
- 14 — 25 Amp Horn, Power Windows
- 15 — 8 Amp Mirrors
- 16 — 16 Amp Heated Driver's Seat
- 17 — 25 Amp Heater Fan
- 18 — 8 Amp A/C
- 19 — 8 Amp Warning Lights
- 20 — 8 Amp Turn Signals
- 21 — 8 Amp Wiper/Washer
- 22 — 16 Amp Cornering Lights

SUBARU

ALL MODELS

Fuse Block

The fuse block is located underneath dashboard on left side. Fuses are arranged in 2 horizontal rows and are numbered from left to right starting on top row. Circuits protected are as follows:

- 1 — 10 Amp Clock, Trunk Light, Door Ajar & Brake Lights
- 2 — 10 Amp Horn, Hazard Unit
- 3 — 10 Amp Left Headlight
- 4 — 10 Amp Right Headlight
- 5 — 15 Amp Cooling Fan, Audio

- 6 — 15 Amp Cigar Lighter
- 7 — 20 Amp Front & Rear Wiper/Washer
- 8 — 20 Amp Fan Motor
- 9 — 10 Amp Back-Up Lights, Turn Signals
- 10 — 15 Amp Cruise Control
- 11 — 15 Amp Fuel Pump, Automatic Choke
- 12 — 15 Amp Defogger
- 13 — 14 Amp Coil, Solenoid Valve, Anti-Diesel Valve, Warning & Indicator Lights, Gauges
- 14 — 15 Amp License, Tail, Parking Center, Illumination & Room Lights
- 15 — 5 Amp Electronic Control Module
- 16 — 5 Amp Charge Indicator Light