

RENAULT (Cont.)

- 16 — 1.5 Amp Auto. Transmission Control
- 17 — Not Used
- 18 — Not Used
- 19 — 16 Amp A/C-Heater Fan, Sunroof, Rear Wiper

LE CAR

Fuse Block

Fuse block is located underneath dashboard on right side of steering column. Fuses are numbered from left to right and protect these circuits:

- 1 — 5 Amp A/C Relay Feed
- 2 — 5 Amp Wiper Motor
- 3 — 5 Amp Left Parking Lights, Dash Lights
- 4 — 5 Amp Right Parking Lights, Cigar Lighter Light
- 5 — 8 Amp Wiper/Washer and Wiper Motor
- 6 — 5 Amp Cigar Lighter, Courtesy Light
- 7 — 8 Amp Heater Motor, Audio
- 8 — 5 Amp Turn Signals
- 9 — Not Used
- 10 — 16 Amp Back-Up Lights, Defogger, Brake Lights, Rear Wiper, A/C Relay, Buzzer

18i

Fuse Block

Fuse panel is located to left of steering column under edge of dashboard. Fuses are numbered from right

to left, with even-numbered fuses in top row, and odd-numbered fuses in bottom row. The circuits protected are:

- 1 — 8 Amp Turn Signals, Flashers
- 2 — 5 Amp Wiper Park Circuit
- 3 — Not Used
- 4 — Not Used
- 5 — Not Used
- 6 — 8 Amp Cigar Lighter, Courtesy Lights
- 7 — Not Used
- 8 — 16 Amp Wiper/Washer
- 9 — Not Used
- 10 — 8 Amp Left Marker Lights, Panel Lights
- 11 — 10 Amp Left Power Window
- 12 — 5 Amp Right Marker Lights, Switch Lights
- 13 — 10 Amp Right Power Window
- 14 — 5 Amp Gauges
- 15 — 1.5 Amp Back-Up Lights, Intermittent Wiper Relay
- 16 — 1.5 Amp Auto. Trans.
- 17 — 16 Amp Heater & A/C Fan
- 18 — 16 Amp Defogger

SAAB

900

Fuse Block

Fuse block is located in engine compartment near left rear corner. Fuse capacities and circuits protected are as follows:

- 1 — 8 Amp Right Headlight (High Beam)
- 2 — 8 Amp Left Headlight (High Beam)
- 3 — 8 Amp Right Headlight (Low Beam)
- 4 — 8 Amp Left Headlight (Low Beam)
- 5 — 25 Amp Engine Fan
- 6 — 16 Amp Defogger
- 7 — 8 Amp Courtesy Lights
- 8 — 16 Amp Fuel Pump

- 9 — 8 Amp Hazard Flashers
- 10 — 5 Amp Brake Lights
- 11 — 16 Amp A/C Fan
- 12 — 5 Amp Right Parking & Tail Lights
- 13 — 5 Amp Left Parking & Tail Lights
- 14 — 25 Amp Horn, Power Windows
- 15 — 8 Amp Mirrors
- 16 — 16 Amp Heated Driver's Seat
- 17 — 25 Amp Heater Fan
- 18 — 8 Amp A/C
- 19 — 8 Amp Warning Lights
- 20 — 8 Amp Turn Signals
- 21 — 8 Amp Wiper/Washer
- 22 — 16 Amp Cornering Lights

SUBARU

ALL MODELS

Fuse Block

The fuse block is located underneath dashboard on left side. Fuses are arranged in 2 horizontal rows and are numbered from left to right starting on top row. Circuits protected are as follows:

- 1 — 10 Amp Clock, Trunk Light, Door Ajar & Brake Lights
- 2 — 10 Amp Horn, Hazard Unit
- 3 — 10 Amp Left Headlight
- 4 — 10 Amp Right Headlight
- 5 — 15 Amp Cooling Fan, Audio

- 6 — 15 Amp Cigar Lighter
- 7 — 20 Amp Front & Rear Wiper/Washer
- 8 — 20 Amp Fan Motor
- 9 — 10 Amp Back-Up Lights, Turn Signals
- 10 — 15 Amp Cruise Control
- 11 — 15 Amp Fuel Pump, Automatic Choke
- 12 — 15 Amp Defogger
- 13 — 14 Amp Coil, Solenoid Valve, Anti-Diesel Valve, Warning & Indicator Lights, Gauges
- 14 — 15 Amp License, Tail, Parking Center, Illumination & Room Lights
- 15 — 5 Amp Electronic Control Module
- 16 — 5 Amp Charge Indicator Light

Fuses & Circuit Breakers

TOYOTA

CELICA

Fuse Block

Main fuse block is located on left side of instrument panel behind cover. In addition, a fuse block is located in engine compartment on left side. Fuses are arranged in 2 rows. Fuses are numbered from top to bottom, and left to right. They protect circuits as follows:

Main Block

- 1 — 7.5 Amp Gauges & Warning Lights, Overdrive Solenoid, Back-Up Lights, Heater Main Relay Coil, Defogger Light
- 2 — 7.5 Amp Interior Light, Shoulder Belt Control System, Buzzer, Luggage Light, Open Door Light, Personal Lights, Illuminated Start-Up Lights, Door Courtesy Lights
- 3 — 7.5 Amp Audio
- 4 — 15 Amp Cigar Lighter, Clock, Mirror
- 5 — 15 Amp Cruise Control
- 6 — Not Used
- 7 — 7.5 Amp Retractable Headlights
- 8 — 7.5 Amp Turn Signals
- 9 — 7.5 Amp Discharge Warning Light, Ignition Main Relay Coil
- 10 — Not Used

Engine Fuse Block

- 1 — 7.5 Amp Discharge Warning Light Relay Coil
- 2 — Not Used
- 3 — 15 Amp Alternator, Emissions
- 4 — 15 Amp Flashers, Audio
- 5 — 15 Amp Cruise Control
- 6 — 15 Amp Shifter Position Indicator Light, Clock, Front Marker Lights, Glove Box Light, Panel Lights, License Light, Parking & Tail Lights
- 7 — Not Used
- 8 — 15 Amp Right Headlight (High Beam) & Indicator
- 9 — 15 Amp Right Headlight (Low Beam)
- 10 — 15 Amp Left Headlight (High Beam)
- 11 — 15 Amp Left Headlight (Low Beam)

COROLLA

Fuse Block

Three fuse blocks are used. One is in the engine compartment on left side. The others are under the left side of dashboard and on the left kick panel. Starting from top to bottom and from left to right, protected circuits are:

Kick Panel Block

- 1 & 2 — 15 Amp Defogger & Indicator

Next Row

- 3 — 15 Amp Marker & Panel Lights, Tail Lights & Relay, License Light, Shift Position Light
- 4 — 7.5 Amp Dome Light, Luggage Compartment Light, Clock, Open Door Warning Light

Next Row

- 5 — 10 Amp Brake Light

Main Fuse Block

- 1 — 20 Amp Wiper/Washer (Front & Rear)
- 2 — 5 Amp Audio

Next Row

- 3 — Not Used
- 4 — 7.5 Amp Gauges, Back-Up Lights, Warning Lights & Buzzers
- 5 — 15 Amp Lighter, Clock
- 6 — 7.5 Amp Turn Signals

- 7 — 10 Amp Main Relay, Discharge Warning Light

Engine Fuse Block

- 1 — 15 Amp Left Headlights
- 2 — 15 Amp Right Headlights
- 3 — 15 Amp Flashers, Horn, Electronic Tuner Radio
- 4 — 7.5 Amp Choke Heater Coil
- 5 & 6 — 15 Amp A/C-Heater Fan
- 7 — 15 Amp Voltage Regulator, Charge Relay, Emissions, Fuel Cut Solenoid

CORONA

Fuse Block

Fuse block is next to steering column at left side of instrument panel. A second fuse block is located in engine compartment. Fuses and protected circuits are:

Main Fuse Block

- 1 — 7.5 Amp Audio
- 2 — 15 Amp Brake Lights, Cruise Control Computer
- 3 — 5 Amp Courtesy Lights, Key Reminder Switch
- 4 — 10 Amp Left Tail Lights, Left Front Parking Light
- 5 — 10 Amp Right Tail Light, Right Front Parking Light, License Light, Interior Illumination Lights, Gauge Lights
- 6 — 15 Amp Cruise Control Computer & Switch, Emission Control Computer, Main & Ignition Relays, Magnetic Valve
- 7 — 10 Amp Turn Signals, Hazard Switch
- 8 — 10 Amp Gauges, Warning Lights, Overdrive Relay & Switch, Seat Belt Warning Relay, Back-Up Lights
- 9 — 15 Amp Cigar Lighter, Clock, Power Antenna

Engine Fuse Block

- 1 — 10 Amp A/C
- 2 — 20 Amp Front & Rear Wiper/Washer
- 3 — 10 Amp Alternator, Choke Heater, Discharge Warning Light Relay, Choke Heater Relay
- 4 — 15 Amp Horn, Hazard Flashers
- 5 — 15 Amp Right Headlight
- 6 — 15 Amp Left Headlight

The heater fan, rear defogger and sun roof are protected by circuit breakers.

CRESSIDA

Fuse Block

The main fuse block is in the left kick panel. A second block is located in the engine compartment. Fuses are numbered from left to right, top row first. They protect the following circuits:

Main Fuse Block

- 1 — 7.5 Amp Turn Signals
- 2 — 15 Amp Cruise Control, Rear Wiper/Washer, Overdrive
- 3 — 7.5 Amp Gauges, Warning Lights, Heater, A/C Main Relay Coil, Back-Up Lights, Shoulder Belt Control
- 4 — 5 Amp Courtesy Lights, Audio, Clock
- 5 — 7.5 Amp Fuel Inj., Ignition, Charging Light

Next Row

- 6 — 7.5 Amp Audio, Clock
- 7 — 15 Amp Lighter, Power Antenna

Engine Fuse Panel

- 1 — 7.5 Amp Charging Relay

TOYOTA (Cont.)

- 2 — 15 Amp Voltage Regulator
- 3 — 15 Amp Horn, Flashers
- 4 — 15 Amp Panel & Marker Lights, Light Control, Parking Lights, Glove Box Light, Shift Position Light, Tail Lights, Clock
- 5 — 15 Amp Right Headlight, High Beam Indicator
- 6 — 15 Amp Left Headlight
- 7 — 15 Amp Fuel Injection, Discharge Light Relay Coil
- 8 — 20 Amp Front Wiper/Washer
- 9 — 15 Amp Cruise Control, Brake Lights

The rear defogger circuit breaker is on the main panel. It is reset by inserting a pin into the small hole on top. The power windows, door locks and sun roof are protected by one large circuit breaker. Press the button to reset this breaker.

LAND CRUISER (FJ40)

Fuse Block

Main fuse block is under the left side of instrument panel. The Ammeter fuses are near the battery, a 15 amp A/C fuse is near heater fan motor, and the 5 amp Engine Fan fuse is behind instrument panel. Fuses in the main block protect the following circuits:

- 1 — 15 Amp Tail, Parking, Marker, License, Dome & Instrument Panel Lights
- 2 — 15 Amp Horn, Brake Lights, Hazard Flashers, Engine Fan
- 3 — 15 Amp Headlights
- 4 — 5 Amp Audio
- 5 — 15 Amp Cigar Lighter
- 6 — 15 Amp Engine Controls
- 7 — 20 Amp Heater Fan, Gauges, Buzzers
- 8 — 20 Amp Turn Signals, Wiper/Washer

LAND CRUISER (FJ60 STATION WAGON)

Fuse Block

Main fuse block is located at left side of instrument panel. The circuits protected are:

- 1 — 10 Amp Right Headlight
- 2 — 10 Amp Left Headlight
- 3 — 15 Amp Cigar Lighter, Antenna
- 4 — 5 Amp Audio
- 5 — 15 Amp Parking, Marker, Panel & Tail Lights
- 6 — 10 Amp Brake Lights
- 7 — 10 Amp Horn, Flashers
- 8 — 10 Amp Engine Controls, Regulator
- 9 — 10 Amp Turn Signals
- 10 — 15 Amp Wiper/Washer, Back-Up Lights, Switch
- 11 — 10 Amp A/C
- 12 — 20 Amp Defogger
- 13 — 5 Amp Gauges, Buzzer, Heater Relay
- 14 — 5 Amp Regulator
- 15 — 5 Amp Courtesy Light, Engine Fan

PICKUP

Fuse Block

Fuse block is located on left side of instrument panel. Fuses are numbered, starting from top to bottom of each row, moving from right to left. Circuits protected are:

- 1 — 15 Amp Brake Lights

- 2 — 15 Amp Marker Lights, Panel Lights, License Light, Parking Lights, Tail Lights
- 3 — 15 Amp Horn, Hazard Flashers
- 4 — 15 Amp Cigar Lighter
- 5 — 7.5 Amp Audio
- 6 — 7.5 Amp Overdrive Solenoid, Cruise Control, Warning Lights & Buzzers, Gauges, Heater Main Relay Coil
- 7 — 7.5 Amp Turn Signals
- 8 — 7.5 Dome Light
- 9 — 10 Amp A/C
- 10 — 15 Amp High Beam Indicator, Left Headlight
- 11 — 15 Amp High Beam Indicator, Right Headlight
- 12 — 12 Amp Voltage Regulator, Alternator, Emissions, Glow Plug Timer
- 13 — 20 Amp Wiper/Washer
- 14 — Not Used
- 15 — Not Used

Heater is protected by a 30 amp circuit breaker located in fuse box.

STARLET

Fuse Block

Fuse block is located at left side of instrument panel. Fuses are arranged in 5 rows of 3. Starting at top left row and going down, then across, fuses protect:

- 1 — 10 Amp Right Headlight
- 2 — 10 Amp Left Headlight
- 3 — Marker, Parking, Panel & Tail Lights
- Next Row
- 4 — 10 Amp Cigar Lighter
- 5 — 5 Amp Audio
- 6 — 15 Amp Flashers, Horn, Brake Lights
- Next Row
- 7 — 15 Amp Turn Signals, Back-Up Lights, Gauges
- 8 — 20 Amp Heater, A/C
- 9 — 5 Amp Courtesy Lights, Clock
- 10 — 10 Amp Emission Controls, Regulator, Main Relay
- 11 — 15 Amp Wiper/Washer (Front & Rear)
- 12 — 15 Amp Defogger
- 13 — 5 Amp Voltage Regulator
- 14 — 10 Amp A/C
- 15 — Spare

SUPRA

Fuse Block

Main fuse block is located in left kick panel. An additional fuse block is located on right side of engine compartment. The rear window defogger is protected by a circuit breaker located in right side kick panel. Starting from left to right, top to bottom, circuits protected are as follows:

Main Fuse Block

- 1 — 7.5 Amp Overdrive Solenoid, Back-Up Lights, Gauges, Warning & Indicator Lights, Power Window Relay Coil, Defogger, Speedometer, Heater Main Relay Coil
- 2 — 7.5 Amp Interior Light, Buzzer, Courtesy Lights
- 3 — 7.5 Amp Audio
- 4 — 15 Amp Cigar Lighter, Clock, Power Mirror, Trip Computer
- 5 — 15 Amp Trip Computer