

## GENERAL MOTORS

**Chevrolet  
GMC**

included to protect wiring for Eaton 2-Speed axle (when equipped).

### FUSES & CIRCUIT BREAKERS

#### FUSE PANEL

**All Models** — Fuse panel is located on left side of firewall in passenger compartment.

#### CIRCUIT BREAKERS


**All Models** — Included in light switch as protection for headlight and parking light circuit. Another circuit breaker is

#### IN-LINE FUSES

**All Models** — In-line fuses protect ammeter, auxiliary heater, and rear air conditioning circuits.


#### FUSIBLE LINKS

**All Models** — Used to provide increased protection for all circuits except starting motor circuit.

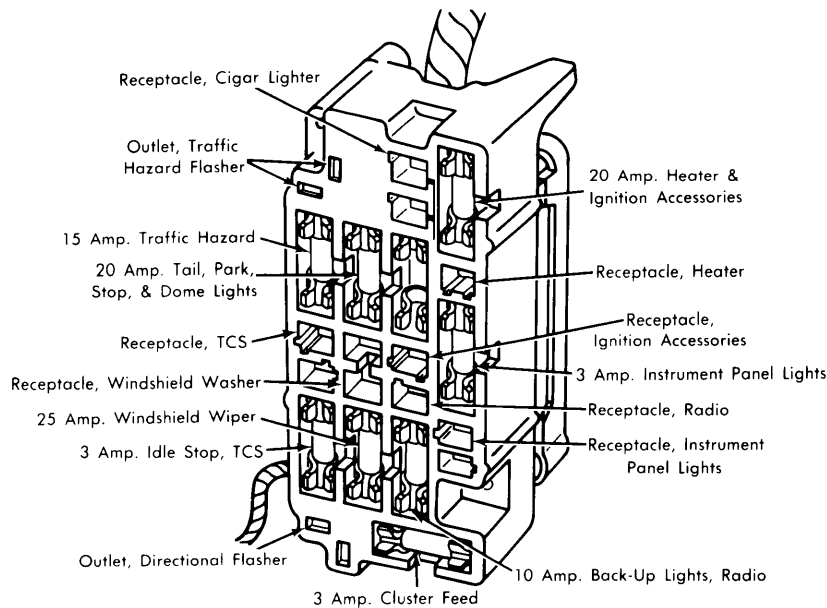

3GM03

#### "G" MODELS FUSE PANEL

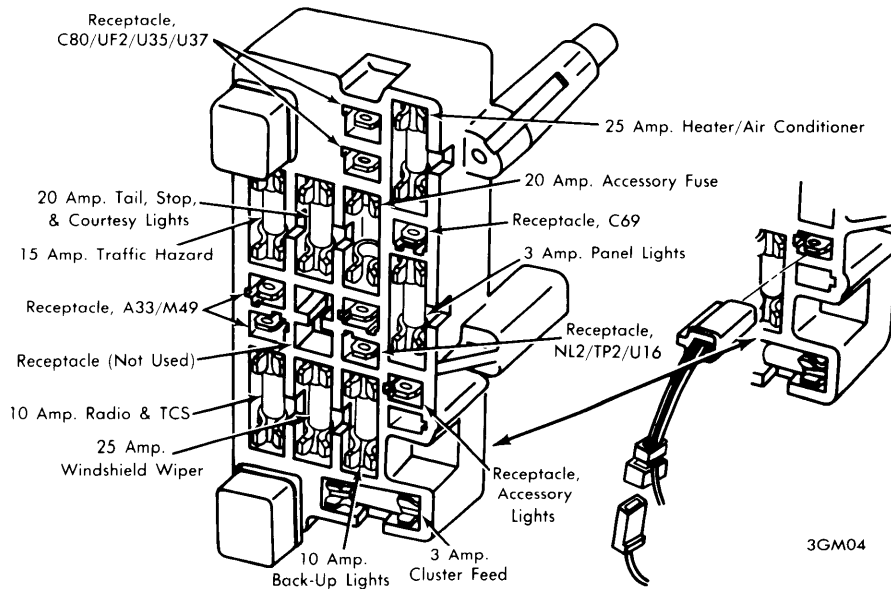

3GM04

#### "C" & "K" MODELS FUSE PANEL